



► Communication interfaces

PILZ

THE SPIRIT OF SAFETY

Operating Manual-1002971-EN-14

- Configurable, safe small controllers PNOZmulti 2



This document is the original document.

Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrimination and on an equal basis.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

CECE®, CHRE®, CMSE®, INDUSTRIAL PI®, Leansafe®, MYZEL®, PAS4000®, PAS-cal®, PASconfig®, Pilz®, PIT®, PMCprimo®, PMCprotego®, PMctendo®, PMD®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

1	Introduction	8
1.1	Definition of symbols	8
1.2	Validity of documentation	8
2	Overview - Communication options	9
2.1	Communication via the fieldbus modules	9
2.2	Communication via the communication modules	12
2.3	Communication via the integrated ETH interface	13
2.4	Communication via Modbus/TCP	14
3	Safety	15
3.1	Intended use	15
3.2	Safety regulations	15
3.2.1	Use of qualified personnel	15
3.2.2	Warranty and liability	15
3.2.3	Disposal	16
4	Fieldbus Modules	17
4.1	Basics	17
4.1.1	Input data (to the PNOZmulti 2)	17
4.1.2	Output data (from the PNOZmulti 2)	18
4.1.3	Overview of tables	19
4.1.4	Access to table segments	19
4.1.4.1	Example 1 - Access successful	20
4.1.4.2	Example 2 - Access failed	21
4.2	PNOZ m ES Profibus	22
4.2.1	Cyclical input and output data	22
4.2.2	Access to table segments	23
4.2.3	LED status	23
4.2.4	Service data	23
4.2.5	Diagnostic data PNOZ m ES Profibus	24
4.3	PNOZ m ES CANopen	27
4.3.1	Service Data Objects (SDOs)	27
4.3.2	Service data	27
4.3.3	Process Data Objects (PDOs)	27
4.3.4	Formation of the object 0x2000 output data	30
4.3.5	Formation of the object 0x2100 input data	31
4.4	PNOZ m ES EtherCAT	31
4.4.1	Service Data Objects (SDOs)	31
4.4.2	Service data	32
4.4.3	Setting the Communication Area (PDOs)	32
4.4.4	Formation of the object 0x2000 output data	33
4.4.5	Formation of the object 0x2100 input data	34
4.4.6	Diagnostic data	34
4.5	PNOZ m EF EtherCAT FSoE	35
4.5.1	Service Data Objects (SDOs)	35
4.5.2	Service data	35
4.5.3	FSoE diagnostic word addressing	35

4.5.4	Setting the Communication Area (PDOs)	36
4.5.5	Formation of the object 0x2000 output data	36
4.5.6	Formation of the object 0x2100 input data	38
4.5.7	Formation of the object 0x6nn1 FSoE input data	38
4.5.8	Formation of the object 0x7nn1 FSoE output data	39
4.5.9	FSoE connection information	39
4.5.10	FSoE connection diagnosis	40
4.6	PNOZ m ES Powerlink	40
4.6.1	Service Data Objects (SDOs)	40
4.6.2	Service data	41
4.6.3	Process Data Objects (PDOs)	41
4.6.4	Formation of the object 0x2000 output data	41
4.6.5	Formation of the object 0x2100 input data	42
4.7	PNOZ m ES Profinet	43
4.7.1	Cyclical input and output data	43
4.7.2	Access to table segments	43
4.7.3	LED status	44
4.7.4	Service data	44
4.7.5	Diagnostic data	45
4.8	PNOZ m ES Ethernet/IP	48
4.8.1	Cyclical input and output data	48
4.8.2	LED status	48
4.8.3	Service data	48
4.8.4	Diagnostic data	49
4.9	PNOZ m ES CC-Link	50
4.9.1	Input and output data	50
4.9.2	Service data	51
4.9.3	LED status	51
4.9.4	Access to table segments	52
5	ETH/RS232 interfaces	53
5.1	Overview	53
5.2	Communication Module PNOZ m ES RS232	53
5.3	Communication Module PNOZ m ES ETH	53
5.3.1	Introduction	53
5.3.2	Overview	53
5.3.3	Module features	54
5.3.4	Modbus/TCP	54
5.4	Integrated Ethernet interface	54
5.4.1	Overview	54
5.4.2	Module features	55
5.4.3	Modbus/TCP	55
5.5	Communication procedure	55
5.6	Telegram structure	56
5.6.1	Header	56
5.6.2	Payload	57
5.6.3	Footer	57
5.7	Description of payload	57
5.7.1	Virtual inputs (Input Byte 0 ... Input Byte 15)	58

5.7.2	Watchdog	58
5.7.3	Virtual outputs (Output Byte 0 ... Output Byte 15).....	58
5.7.4	LED status	58
5.7.5	Tables	59
5.8	Requests	60
5.8.1	Mask (Mask Byte 0 ... Mask Byte 15).....	60
5.8.2	Sending virtual inputs to PNOZmulti 2	60
5.8.3	Sending virtual inputs and requesting the LED states from PNOZmulti 2.....	61
5.8.3.1	Control Byte (Byte 40).....	63
5.8.4	Requesting virtual input and output data from PNOZmulti 2	64
5.8.5	Requesting virtual input and output data and the LED statuses from PNOZmulti 2	65
5.8.6	Requesting the diagnostic data in table form from PNOZmulti 2	66
5.8.7	Sending virtual inputs and requesting the virtual output data from PNOZmulti 2 (see fieldbus communication).....	67
5.8.7.1	Input data (to the PNOZmulti)	67
5.8.7.2	Output data (from the PNOZmulti)	68
5.8.7.3	Control Byte (Byte 5).....	69
5.9	Troubleshooting	70
5.9.1	Request format does not meet specifications	70
5.9.2	Error while executing a request	71
6	Modbus/TCP	72
6.1	System requirements	72
6.2	Modbus/TCP - Basics	72
6.3	Modbus/TCP with PNOZmulti 2	73
6.4	Data areas	74
6.4.1	Overview	74
6.4.2	Function codes	74
6.4.3	Data transfer limits	75
6.4.4	Input and output data, watchdog	76
6.4.5	Allocation table of the virtual inputs and outputs	78
6.4.6	Service data	79
6.4.7	LEDs	79
6.4.8	Updating the data areas	80
6.5	Examples of Clients and Servers	81
7	Diagnostic word	82
7.1	Introduction	82
7.2	Elements with diagnostic word	82
7.3	Structure of the diagnostic word	83
7.4	Evaluate diagnostic word	83
7.4.1	Example - Evaluate diagnostic word of a safety gate	85
8	Service data	86
8.1	Process data: Base unit and expansion modules	88
8.1.1	State of inputs i0 ... i31	89
8.1.2	State of outputs o0 ... o31	89
8.1.3	Status of system LEDs	90
8.1.4	Status of IO LEDs	90

8.1.5	Assignment of system and I/O-LEDs	91
8.1.6	Advanced data	92
8.1.7	Process data, left-hand expansion modules	93
8.1.7.1	Process data PNOZ m EF PDP Link (from configured Version 1.x)	93
8.1.7.2	Process data PNOZ m EF PDP Link (from configured Version 2.x)	94
8.1.7.3	Process data PDP67 F 8DI ION (HP)	95
8.1.7.4	Process data PDP67 F 8DI4DO 5/5 ION (VA)	95
8.1.7.5	Process data PDP67 F 10DI4DO 5/8 ION (VA)	96
8.1.7.6	Process data PNOZ m EF SafetyNet	96
8.1.7.7	Process data PNOZ m EF MultiLink	97
8.1.7.8	Process data PNOZ m EF EtherCAT FSoE	97
8.1.8	Process data addressing	98
8.1.8.1	Process data addressing on base unit	98
8.1.8.2	Process data addressing, 1st right-hand expansion module	99
8.1.8.3	Process data addressing, 2nd right-hand expansion module	101
8.1.8.4	Process data addressing, 3rd right-hand expansion module	102
8.1.8.5	Process data addressing, 4th right-hand expansion module	104
8.1.8.6	Process data addressing, 5th right-hand expansion module	105
8.1.8.7	Process data addressing, 6th right-hand expansion module	107
8.1.8.8	Process data addressing, 7th right-hand expansion module	108
8.1.8.9	Process data addressing, 8th right-hand expansion module	110
8.1.8.10	Process data addressing, 9th right-hand expansion module	111
8.1.8.11	Process data addressing, 10th right-hand expansion module	113
8.1.8.12	Process data addressing, 11th right-hand expansion module	114
8.1.8.13	Process data addressing, 12th right-hand expansion module	116
8.1.8.14	Process data addressing, 1st ST right-hand expansion module	117
8.1.8.15	Process data addressing 2nd ST expansion module, right	118
8.1.8.16	Process data addressing 3rd ST expansion module, right	120
8.1.8.17	Process data addressing 4th ST expansion module, right	121
8.1.8.18	Process data addressing 5th ST expansion module, right	122
8.1.8.19	Process data addressing 6th ST expansion module, right	123
8.1.8.20	Process data addressing, left-hand expansion devices	125
8.2	Process data: Fieldbus and communication module	128
8.2.1	State of virtual inputs i0 ... i127	128
8.2.2	State of virtual outputs o0 ... o127	129
8.2.3	Status of system LEDs	129
8.2.3.1	Assignment of system LEDs	130
8.2.4	Process data addressing	130
8.2.4.1	Process data addressing, fieldbus module	130
8.2.4.2	Process data addressing, communication module	131
8.3	Connected devices	133
8.3.1	Device connection data	133
8.3.1.1	General connection data	133
8.3.1.2	Device connection data PITreader	133
8.3.1.3	Device connection Visu Panel	134
8.3.1.4	Device connection data Safe Ethernet connection 2	134
8.3.2	1st device connection addressing	135
8.3.3	2nd device connection addressing	135
8.3.4	3rd device connection addressing	136

8.3.5	4th device connection addressing	137
8.3.6	5th device connection addressing	138
8.3.7	6th device connection addressing	139
8.3.8	7th device connection addressing	140
8.3.9	8th device connection addressing	140
8.4	Diagnostic words	141
8.4.1	Diagnostics	141
8.4.2	Diagnostic word addressing	142
8.5	Enable elements	143
8.5.1	Element IDs	143
8.5.2	Enable element addressing	143
8.6	Maintenance safeguarding system Key-in-pocket	144
8.7	Project data	146
8.7.1	Check sums	147
8.7.2	Date	147
8.7.3	Project name	148
8.7.4	Project data addressing	148
8.8	Device data	150
8.8.1	Product	150
8.8.2	Firmware	151
8.8.3	Operating hours	152
8.8.4	Device data addressing	152
8.8.4.1	Device data addressing on base unit	152
8.8.4.2	Device data addressing, 1st right-hand expansion module	153
8.8.4.3	Device data addressing, 2nd right-hand expansion module	154
8.8.4.4	Device data addressing, 3rd right-hand expansion module	155
8.8.4.5	Device data addressing, 4th right-hand expansion module	156
8.8.4.6	Device data addressing, 5th right-hand expansion module	157
8.8.4.7	Device data addressing, 6th right-hand expansion module	158
8.8.4.8	Device data addressing, 7th right-hand expansion module	159
8.8.4.9	Device data addressing, 8th right-hand expansion module	160
8.8.4.10	Device data addressing, 9th right-hand expansion module	161
8.8.4.11	Device data addressing, 10th right-hand expansion module	162
8.8.4.12	Device data addressing, 11th right-hand expansion module	163
8.8.4.13	Device data addressing, 12th right-hand expansion module	164
8.8.4.14	Device data addressing, 1st ST right-hand expansion module	165
8.8.4.15	Device data addressing 2nd ST expansion module, right	166
8.8.4.16	Device data addressing 3rd ST expansion module, right	167
8.8.4.17	Device data addressing 4th ST expansion module, right	168
8.8.4.18	Device data addressing 5th ST expansion module, right	169
8.8.4.19	Device data addressing 6th ST expansion module, right	170
8.8.4.20	Device data addressing, 1st left-hand expansion module	171
8.8.4.21	Device data addressing, 2nd left-hand expansion module	172
8.8.4.22	Device data addressing, 3rd left-hand expansion module	173
8.8.4.23	Device data addressing, 4th left-hand expansion module	174
8.8.4.24	Device data addressing, fieldbus module	175
8.8.4.25	Device data addressing, communication module	176

1 Introduction

1.1 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

1.2 Validity of documentation



This document describes the communication options for the configurable control systems PNOZmulti 2.


2 Overview - Communication options

2.1 Communication via the fieldbus modules

The fieldbus modules provide both cyclical and acyclical data. The chapter entitled [Fieldbus Modules \[17\]](#) describes the structure of the cyclical data. The chapter entitled [Service data \[86\]](#) describes the acyclical data, its structure and addressing.

The following device combinations are possible:

Fieldbus modules		Base units
PNOZ m ES Profibus PNOZ m ES CANopen PNOZ m ES EtherCAT PNOZ m ES Powerlink PNOZ m ES Profinet PNOZ m ES Ethernet/IP PNOZ m ES CC-Link		PNOZ m B0
PNOZ m ES Profibus PNOZ m ES CANopen PNOZ m ES EtherCAT PNOZ m ES Profinet PNOZ m ES Powerlink PNOZ m ES Ethernet/IP PNOZ m ES CC-Link		PNOZ m B1

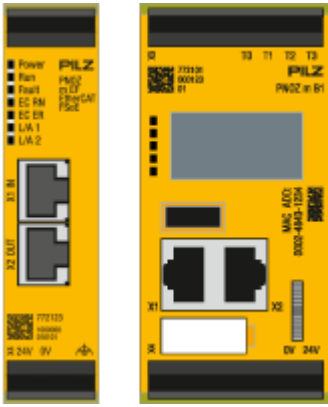Fieldbus modules		Base units
PNOZ m EF EtherCAT FSoE		PNOZ m B1

The following versions are compatible:

	PNOZ m B0 v1.1	PNOZ m B0 v1.2	PNOZ m B0 v1.4	PNOZ m B0 v2.0	PNOZ m B1 v1.0	PNOZ m B1 v1.1	from PNOZ m B1 v1.2
PNOZ m ES Profibus V1.x	✓	✓	✓	✓	✓	✓	✓
PNOZ m ES CAN-open V1.x	✓	✓	✓	✓	-	-	-
PNOZ m ES CAN-open V2.x	✓	✓	✓	✓	-	-	✓
PNOZ m ES CC-Link V1.0	-	-	-	✓	-	✓	✓
PNOZ m ES EtherCAT V1.x	-	✓	✓	✓	✓	✓	✓
PNOZ m ES EtherCAT V2.x	-	✓	✓	✓	✓	✓	✓
PNOZ m ES Powerlink V1.x	-	-	✓	✓	-	-	-

	PNOZ m B0 v1.1	PNOZ m B0 v1.2	PNOZ m B0 v1.4	PNOZ m B0 v2.0	PNOZ m B1 v1.0	PNOZ m B1 v1.1	from PNOZ m B1 v1.2
PNOZ m ES Power- link V2.x	-	-	✓	✓	-	-	✓
PNOZ m ES Ether- net/IP V1.x	-	-	✓	✓	-	-	-
PNOZ m ES Ether- net/IP V2.x	-	-	✓	✓	-	-	✓
PNOZ m ES Profinet V1.x	-	-	✓	✓	-	-	-
PNOZ m ES Profinet V2.x	-	-	✓	✓	-	✓	✓
PNOZ m EF Ether- CAT FSoE V1.x	-	-	✓	✓	-	✓	✓


The [Service data \[86\]](#) can only be fully polled using fieldbus modules of Version 2.x. These are provided by a PNOZ m B1 from Version 1.1.




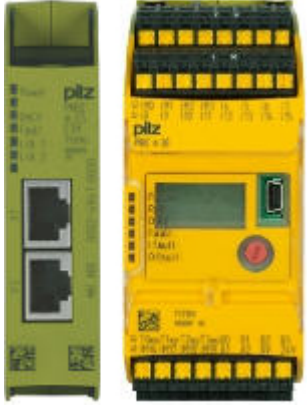
INFORMATION

A maximum of one fieldbus module can be connected to a base unit.

2.2 Communication via the communication modules

When communication takes place via a communication module, data exchange is defined via a Pilz-specific protocol. This protocol is described in more detail in the chapter entitled [ETH/RS232 interfaces](#) [ 53].

The following device combinations are possible:

Communication Module		Base units
Communication Module PNOZ m ES RS232		PNOZ m B0
Communication Module PNOZ m ES ETH		




INFORMATION

If virtual inputs/outputs are to be downloaded via the communication module (without using a fieldbus module), the interface **Inputs/outputs that are downloaded via the integrated interface** must be configured in the hardware configuration in the PNOZmulti Configurator.

2.3 Communication via the integrated ETH interface

When communication takes place via an integrated ETH interface, data exchange is defined via a Pilz-specific protocol. This protocol is described in more detail in the chapter entitled [ETH/RS232 interfaces](#) [53].

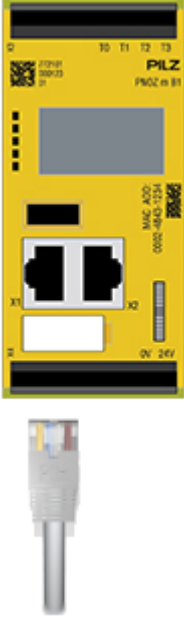Communication		Base units
Integrated Ethernet interface		<p>PNOZ m B1</p>



INFORMATION


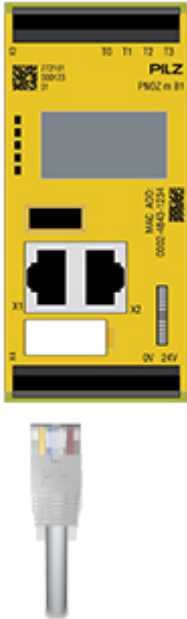
For communication via the integrated Ethernet interface, the interface ***Inputs/outputs that are downloaded via the integrated interface*** must be configured in the hardware configuration in the PNOZmulti Configurator.

2.4 Communication via Modbus/TCP

For data exchange with Modbus/TCP, the PNOZmulti 2 is the connection server. All the service data is defined in one data record, to which the client has direct access.

Communication with Modbus/TCP is described in detail in the chapter entitled [Modbus/TCP](#) [52].

The following device combinations are possible:

Communication		Base unit
<p>Communication Module PNOZ m ES ETH [53]</p>		<p>PNOZ m B0</p>
<p>Integrated Ethernet interface [54]</p>		<p>PNOZ m B1 from Version 1.1</p>



INFORMATION

If virtual inputs/outputs are to be downloaded via the communication module (without using a fieldbus module), the interface "Inputs/outputs that are downloaded via the integrated interface" must be configured in the hardware configuration in the PNOZmulti Configurator.

3 Safety

3.1 Intended use

The communication interface on the configurable control system PNOZmulti 2 is used to transfer diagnostic data to an application program. This data may only be used for non-safety purposes, e.g. visualisation.



NOTICE

For details of the intended use and application of the configurable control system PNOZmulti 2 please refer to the operating instructions for the respective unit.

The following is deemed improper use in particular:

- ▶ Any component, technical or electrical modification to the product
- ▶ Use of the product outside the areas described in this manual
- ▶ Use of the product outside the technical details (see chapter entitled "Technical details").

3.2 Safety regulations

3.2.1 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. In order to inspect, assess and handle products, devices, systems, plant and machinery, this person must be familiar with the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

3.2.2 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.2.3

Disposal

- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

4 Fieldbus Modules

4.1 Basics

The input and output range is each reserved an area of 32 Bytes for communication via fieldbuses; this is updated approx. every 15 ms. The Master (PC, PLC) can send 32 Bytes to the PNOZmulti 2 and receive 32 Bytes from the PNOZmulti 2. The Master can process the information in bytes, words or in double words.

4.1.1 Input data (to the PNOZmulti 2)

Double word	Word	Byte	Contents
0	0	0	State of virtual inputs on the PNOZmulti 2 fieldbus module. The inputs are defined in the PNOZmulti Configurator. Each input that is used is given a number there, e.g. i0, i5... The state of input i0 is stored in bit 0 of byte 0; the state of input i5 is stored in bit 5 of byte 0 etc.
		1	
	1	2	
		3	
1	2	4	
		5	
	3	6	
		7	
2	4	8	
		9	
	5	10	
		11	
3	6	12	
		13	
	7	14	
		15	
4	8	16	Reserved
		17	Table number
	9	18	Segment number
		19	Reserved
5	10	20	Reserved
		21	Reserved
	11	22	Reserved
		23	Reserved
6	12	24	Reserved
		25	Reserved
	13	26	Reserved
		27	Reserved

Double word	Word	Byte	Contents
7	14	28	Reserved
		29	Reserved
	15	30	Reserved
		31	Reserved

4.1.2 Output data (from the PNOZmulti 2)


Double Word	Word	Byte	Content
0	0	0	State of virtual outputs on the PNOZmulti 2 fieldbus module. The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5...
		1	
	1	2	
		3	
1	2	4	The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.
		5	
	3	6	
		7	
2	4	8	
		9	
	5	10	
		11	
3	6	12	
		13	
	7	14	
		15	
4	8	16	LED status
		17	Table number
	9	18	Segment number
		19	Payload Byte 0
5	10	20	Payload Byte 1
		21	Payload Byte 2
	11	22	Payload Byte 3
		23	Payload Byte 4
6	12	24	Payload Byte 5
		25	Payload Byte 6
	13	26	Payload Byte 7
		27	Payload Byte 8

Double Word	Word	Byte	Content
7	14	28	Payload Byte 9
		29	Payload Byte 10
	15	30	Payload Byte 11
		31	Payload Byte 12

4.1.3 Overview of tables

The following types are available:

- Table 20: Process data, base unit
- Table 21: Process data, right-hand expansion modules
- Table 22: Process data, left-hand expansion modules
- Table 23: Process data, fieldbus module / communication module
- Table 24: Process data, ST expansion module
- Table 70: Diagnostic words
- Table 71: Enable elements
- Table 80: Project Information
- Table 90: Device data, base unit
- Table 91: Device data, right-hand expansion modules
- Table 92: Device data, left-hand expansion modules
- Table 93: Device data, fieldbus module / communication module
- Table 94: Device data, ST expansion module
- Table 110: Connected devices
- Table 201: Advanced data

The content and the version and device-dependent validity of the tables are described in detail in the chapter [Service data](#) [ 86].


4.1.4 Access to table segments

Each table consists of one or more segments. Each segment is made up of 13 Bytes. The tables have a fixed assignment. The Master requests the required data using the table number and segment number. The Slave repeats the two numbers and sends the requested data. If data is requested that is not available, the Slave sends the error message FF (hex) or 255 (dec) instead of the segment number. The segments may be requested in any sequence.

4.1.4.1 Example 1 - Access successful

Access to existing segments


The Master requests segment 1 from table 23. The fieldbus module confirms both these details and sends segment 1. Then the data from segment 5 table 21 is requested.

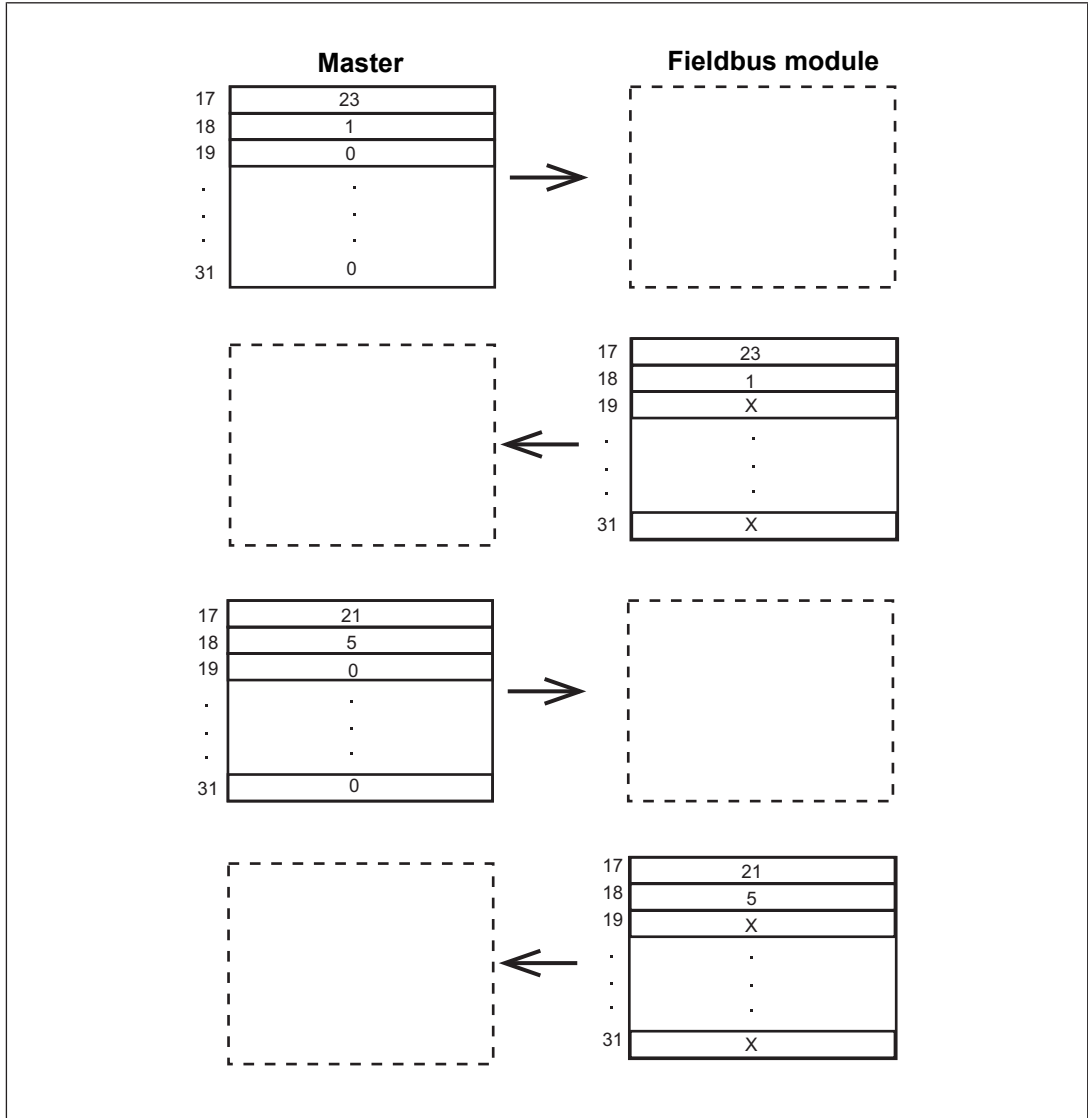

4.1.4.2 Example 2 - Access failed


Access to non-existent segment

The Master requests segment 1 from table 23. The fieldbus module confirms both these details and sends segment 1. Then the Master requests segment 111 from table 23. As this table does not contain a segment 111, the Slave registers an error by sending back "255".

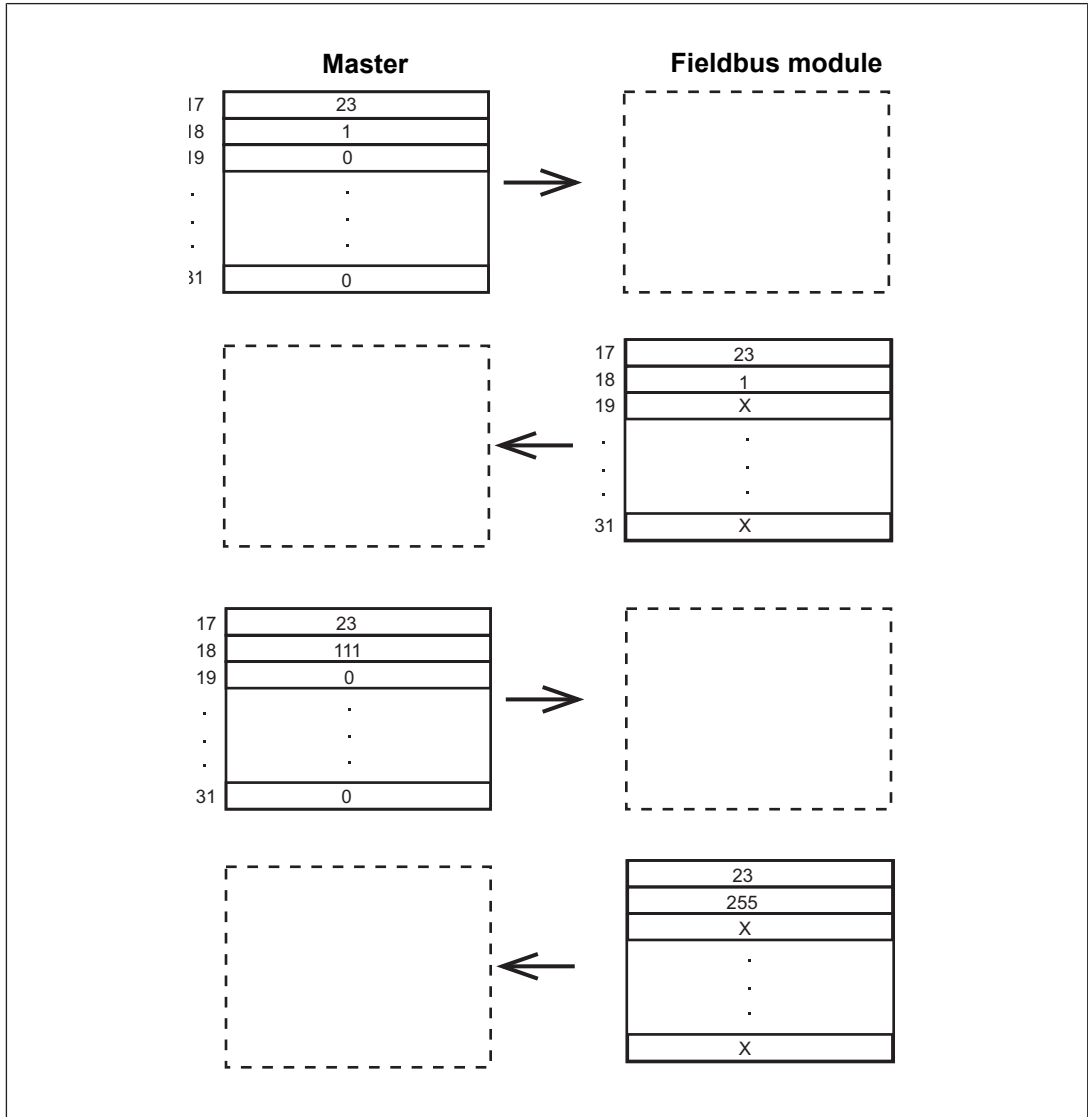

Access to non-existent table

The Master requests segment 1 from table 54. As there is no table 54, the Slave registers an error by sending back "255".

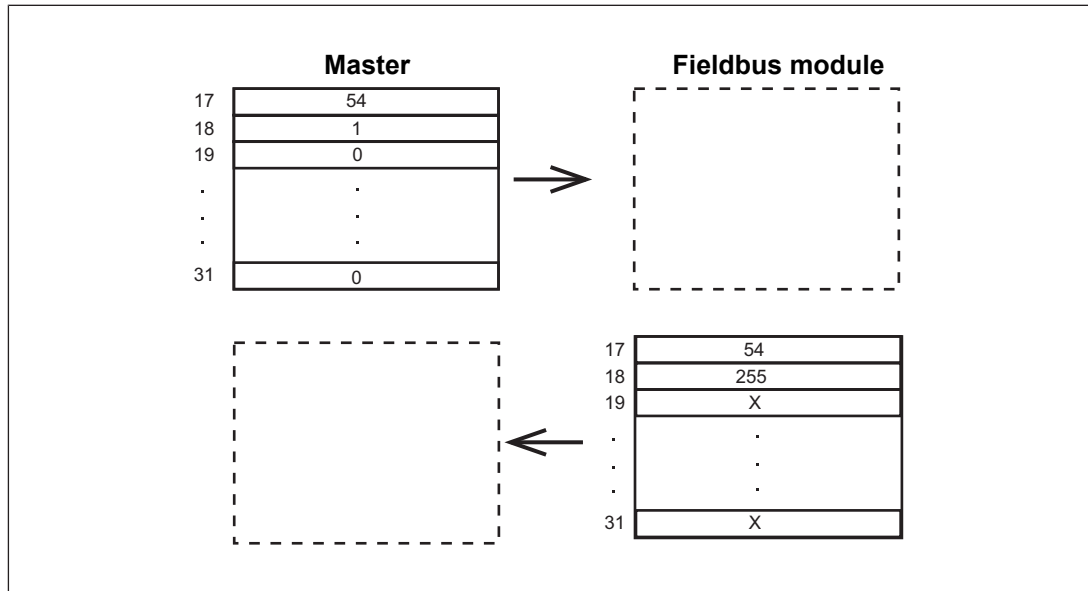

4.2 PNOZ m ES Profibus

4.2.1 Cyclical input and output data

Virtual inputs and outputs can be requested or set directly via the following modules. Each element can be selected individually in the master control system, e.g. virtual inputs i0-31. The data width is also established this way.

Input data

The Master writes to the virtual inputs of the PNOZmulti 2.

Description	Input data from PNOZmulti 2
Virtual inputs i0 – i31	4 Input Bytes
Virtual inputs i32 – i63	4 Input Bytes
Virtual inputs i64 – i95	4 Input Bytes
Virtual inputs i96 – i127	4 Input Bytes

Output data

The Master reads the virtual outputs of the PNOZmulti 2.

Description	Output data from PNOZmulti 2
Virtual outputs o0 – o31	4 Output Bytes
Virtual outputs o32 – o63	4 Output Bytes
Virtual outputs o64 – o95	4 Output Bytes
Virtual outputs o96 – o127	4 Output Bytes

4.2.2 Access to table segments

The data in the tables (see [Service data \[86\]](#)) can be requested via the following modules.

Input data

The Master requests a table segment in the form:

Description	Input data from PNOZmulti 2
Table and segment number	2 Input Bytes

Output data

The PNOZmulti 2 replies in the form:

Description	Output data from PNOZmulti 2
Table and segment number + 13 Byte payload	15 Output Bytes

A detailed description is available in the chapter entitled [Access to table segments \[19\]](#).

4.2.3 LED status

Description	Output data from PNOZmulti 2
LED status	1 Output Byte

The LED status of the base unit PNOZ m B0 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN is lit
- ▶ Bit 5-7: Reserved

The LED status of the base unit PNOZ m B1 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN FS is lit
- ▶ Bit 5: Reserved
- ▶ Bit 6 = 1: LED RUN ST is lit
- ▶ Bit 7: Reserved

4.2.4 Service data

The service data for PROFIBUS-DP is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module

- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content and the version and device-dependent validity of the service data and the addressing are described in detail in the chapter [Service data](#) [86].

4.2.5 Diagnostic data PNOZ m ES Profibus

These bits contain the diagnostic data of the PNOZ m B0 and PNOZ m B1

Unit Diag_Bit	Content	PNOZ m B0	PNOZ m B1
00	RUN FS, base unit is in FS RUN state	x	x
01	STOP FS, base unit is in FS STOP state	x	x
02	Base unit was stopped by the Configurator	x	x
03	Reserved		
04	External fault	x	x
05	Internal error	x	x
06	External error on the inputs	x	x
07	Internal error on the inputs	x	
08	External error on the outputs	x	x
09	Internal error on the outputs	x	
10	No connection to base unit	x	x
11	STOP ST, base unit is in ST STOP state		x
12	Error on the 1st ST expansion module, right		x
13	Error on the 2nd ST expansion module, right		x
14	Error on the 3rd ST expansion module, right		x
15	Error on the 4th ST expansion module, right		x
16	Error on the 5th ST expansion module, right		x
17	Error on the 6th ST expansion module, right		x
18	Reserved		
... 21			
22	Error on the base unit	x	x
23	Reserved		
24	Error on the 1st FS expansion module, right	x	x
25	Error on the 2nd FS expansion module, right	x	x

Unit Diag_Bit	Content	PNOZ m B0	PNOZ m B1
26	Error on the 3rd FS expansion module, right	x	x
27	Error on the 4th FS expansion module, right	x	x
28	Error on the 5th FS expansion module, right	x	x
29	Error on the 6th FS expansion module, right	x	x
30	Error on the 7th FS expansion module, right		x
31	Error on the 8th FS expansion module, right		x
32	Error on the 9th FS expansion module, right		x
33	Error on the 10th FS expansion module, right		x
34	Error on the 11th FS expansion module, right		x
35	Error on the 12th FS expansion module, right		x
36 ... 39	Reserved		
40	Error on the 1st FS expansion module, left	x	x
41	Error on the 2nd FS expansion module, left	x	x
42	Error on the 3rd FS expansion module, left	x	x
43	Error on the 4th FS expansion module, left	x	x
44 ... 45	Reserved		
46	Error on the communication module	x	
47 ... 55	Reserved		
56	Error in the configuration, F_81	x	
57	Error in the user program, F_82	x	
58	Error in the periphery, F_83	x	
59	Error on the speed monitor, F_84	x	
60	Error on the bus module, F_85	x	
61	Error on the link module, F_86	x	
62	Error on the analogue input module, F_87	x	
63	Reserved		
64	Error on the input/output module, F_89	x	
65	Error on the Ethernet module, F_8A	x	

Unit Diag_Bit	Content	PNOZ m B0	PNOZ m B1
66	Internal error on the left-hand expansion module, F_90	x	
67	Internal periphery error, F_93	x	
68	Internal error on the right-hand expansion module, F_94	x	
69	Internal error on the right-hand expansion module, F_95	x	
70	Internal self test error, F_B0	x	
71	Internal data error, F_B1	x	
72	Internal parameter error, F_B2	x	
73	Internal serial/I2C error, F_B3	x	
74	Internal time error, F_B4	x	
75	Internal processor error, F_B5	x	
76	Internal parameter error, F_B6	x	
77	Internal compare error, F_B7	x	
78	Internal sequence error, F_B8	x	
79	Internal periphery error, F_B9	x	
80	Internal error on bus module, F_BA	x	
81	Internal error on link module, F_BB	x	
82	Internal error on speed monitor, F_BC	x	
83	Internal error on analogue input module, F_BD	x	
84	Internal error on link module, F_BE	x	
85	Internal error on link module, F_BF	x	
86	Internal error on the left-hand expansion module, F_C0	x	
87	Internal error on the left-hand expansion module, F_C1	x	
88	Internal error on the Ethernet module, F_C2	x	
89	Internal compare error, F_C3	x	
90	Internal error on the right-hand expansion module, F_C4	x	
91	Internal error on the right-hand expansion module, F_C5	x	
92	Reserved	x	
...			
95			

Explanation: Bits 56 to 91 display the last content of the error stack (corresponds to the error class). The bits are deleted as soon as PNOZmulti 2 returns to a RUN state.

4.3 PNOZ m ES CANopen

4.3.1 Service Data Objects (SDOs)

The object directory of the CANopen is where all the relevant device parameters and current process data of the PNOZmulti 2 are stored. These can be read and written via Service Data Objects (SDOs).

To enable the fieldbus module to be incorporated easily within a CANopen network, the object directory is available as an EDS file. The content is described in the chapter entitled [Service data](#) [86].

4.3.2 Service data

The service data for CANopen is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content and the version and device-dependent validity of the service data and the addressing are described in detail in the chapter [Service data](#) [86].

4.3.3 Process Data Objects (PDOs)

The output data is stored as follows:

Byte	Object Index (hex)	Sub Index (hex)	PDO	COB-ID
0	2000	1	TPDO 1	180h + node address
1	2000	2		
2	2000	3		
3	2000	4		
4	2000	5		
5	2000	6		
6	2000	7		
7	2000	8		

Byte	Object Index (hex)	Sub Index (hex)	PDO	COB-ID
8	2000	9	TPDO 2	280h + node address
9	2000	A		
10	2000	B		
11	2000	C		
12	2000	D		
13	2000	E		
14	2000	F		
15	2000	10		
16	2000	11	TPDO 3	380h + node address
17	2000	12		
18	2000	13		
19	2000	14		
20	2000	15		
21	2000	16		
22	2000	17		
23	2000	18		
24	2000	19	TPDO 4	480h + node address
25	2000	1A		
26	2000	1B		
27	2000	1C		
28	2000	1D		
29	2000	1E		
30	2000	1F		
31	2000	20		

The input data is stored as follows:

Byte	Object Index (hex)	Sub Index (hex)	PDO	COB-ID
0	2100	1	RPDO 1	200h + node address
1	2100	2		
2	2100	3		
3	2100	4		
4	2100	5		
5	2100	6		
6	2100	7		
7	2100	8		
8	2100	9	RPDO 2	300h + node address
9	2100	A		
10	2100	B		
11	2100	C		
12	2100	D		
13	2100	E		
14	2100	F		
15	2100	10		
16	2100	11	RPDO 3	400h + node address
17	2100	12		
18	2100	13		
19	2100	14		
20	2100	15		
21	2100	16		
22	2100	17		
23	2100	18		
24	2100	19	RPDO 4	500h + node address
25	2100	1A		
26	2100	1B		
27	2100	1C		
28	2100	1D		
29	2100	1E		
30	2100	1F		
31	2100	20		

Key to abbreviations:

TPDO: Transmit Process Data Object

RPDO: Receive Process Data Object

COB-ID: Communication Object Identifier

4.3.4 Formation of the object 0x2000 output data

Index (hex)	Size (byte)	Contents							
		Virtual outputs o0 ... o127							
0x2000:01	1	Bit 7	...						Bit 0
		o7	o6	o5	o4	o3	o2	o1	o0
0x2000:02	1	o15	o14	o13	o12	o11	o10	o9	o8
0x2000:03	1	o23	o22	o21	o20	o19	o18	o17	o16
0x2000:04	1	o31	o30	o29	o28	o27	o26	o25	o24
0x2000:05	1	o39	o38	o37	o36	o35	o34	o33	o32
0x2000:06	1	o47	o46	o45	o44	o43	o42	o41	o40
0x2000:07	1	o55	o54	o53	o52	o51	o50	o49	o48
0x2000:08	1	o63	o62	o61	o60	o59	o58	o57	o56
0x2000:09	1	o71	o70	o69	o68	o67	o66	o65	o64
0x2000:0A	1	o79	o78	o77	o76	o75	o74	o73	o72
0x2000:0B	1	o87	o86	o85	o84	o83	o82	o81	o80
0x2000:0C	1	o95	o94	o93	o92	o91	o90	o89	o88
0x2000:0D	1	o103	o102	o101	o100	o99	o98	o97	o96
0x2000:0E	1	o111	o110	o109	o108	o107	o106	o105	o104
0x2000:0F	1	o119	o118	o117	o116	o115	o114	o113	o112
0x2000:10	1	o127	o126	o125	o124	o123	o122	o121	o120
0x2000:11	1	LED status							
0x2000:12	1	Table number							
0x2000:13	1	Segment number							
0x2000:14	13	Byte 0 to 12 of payload							
...									
0x2000:20									

4.3.5 Formation of the object 0x2100 input data

Index (hex)	Size (byte)	Contents							
		Virtual inputs i0 ... i127							
		Bit 7	...						Bit 0
0x2100:01	1	i7	i6	i5	i4	i3	i2	i1	i0
0x2100:02	1	i15	i14	i13	i12	i11	i10	i9	i8
0x2100:03	1	i23	i22	i21	i20	i19	i18	i17	i16
0x2100:04	1	i31	i30	i29	i28	i27	i26	i25	i24
0x2100:05	1	i39	i38	i37	i36	i35	i34	i33	i32
0x2100:06	1	i47	i46	i45	i44	i43	i42	i41	i40
0x2100:07	1	i55	i54	i53	i52	i51	i50	i49	i48
0x2100:08	1	i63	i62	i61	i60	i59	i58	i57	i56
0x2100:09	1	i71	i70	i69	i68	i67	i66	i65	i64
0x2100:0A	1	i79	i78	i77	i76	i75	i74	i73	i72
0x2100:0B	1	i87	i86	i85	i84	i83	i82	i81	i80
0x2100:0C	1	i95	i94	i93	i92	i91	i90	i89	i88
0x2100:0D	1	i103	i102	i101	i100	i99	i98	i97	i96
0x2100:0E	1	i111	i110	i109	i108	i107	i106	i105	i104
0x2100:0F	1	i119	i118	i117	i116	i115	i114	i113	i112
0x2100:10	1	i127	i126	i125	i124	i123	i122	i121	i120
0x2100:11	1	Reserved							
0x2100:12	1	Table number							
0x2100:13	1	Segment number							
0x2100:14	13	Reserved							
...									
0x2100:20									

4.4 PNOZ m ES EtherCAT

4.4.1 Service Data Objects (SDOs)

The object directory of the EtherCAT is where all the relevant device parameters and current process data of the PNOZmulti 2 are stored. These can be read and written via Service Data Objects (SDOs).

To enable the fieldbus module to be incorporated easily within an EtherCAT network, the object directory is available as an XML file. The content is described in the chapter entitled [Service data \[86\]](#).

4.4.2 Service data

The service data for EtherCAT is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content and the version and device-dependent validity of the service data and the addressing are described in detail in the chapter [Service data](#) [86].

4.4.3 Setting the Communication Area (PDOs)

The PDO mapping of PNOZ m ES EtherCAT is available preselected if restarted, as in the table. The mapping of process data can be adapted. The PNOZmulti input and output data (objects 0x2100 and 0x2000) are updated every 10-15 ms.

Mapping objects	Size	Name	Index (hex)	Sub-Index(hex)	Contents
0x1A00	32	TxPDO	2000	01 - 20	Output data (from the PNOZmulti)
0x1A01	128	TxPDO	2000	01 - 11	Default configuration (freely configurable)
			2001	01 - 08	
			2001	49 - 50	
			2002	01 - 08	
			2002	25 – 2C	
			2002	49–50	
			2007	01-08	
			2007	25–2C	
			2007	49–50	
			200A	01–2E	
0x1600	19	RxPDO	2100	01-13	Input data (to the PNOZmulti)

Key to abbreviations:

TxPDO: Transmit Process Data Object

RxPDO: Receive Process Data Object

4.4.4 Formation of the object 0x2000 output data

Index (hex)	Size (byte)	Contents							
		Virtual outputs o0 ... o127							
0x2000:01	1	Bit 7	...						Bit 0
		o7	o6	o5	o4	o3	o2	o1	o0
0x2000:02	1	o15	o14	o13	o12	o11	o10	o9	o8
0x2000:03	1	o23	o22	o21	o20	o19	o18	o17	o16
0x2000:04	1	o31	o30	o29	o28	o27	o26	o25	o24
0x2000:05	1	o39	o38	o37	o36	o35	o34	o33	o32
0x2000:06	1	o47	o46	o45	o44	o43	o42	o41	o40
0x2000:07	1	o55	o54	o53	o52	o51	o50	o49	o48
0x2000:08	1	o63	o62	o61	o60	o59	o58	o57	o56
0x2000:09	1	o71	o70	o69	o68	o67	o66	o65	o64
0x2000:0A	1	o79	o78	o77	o76	o75	o74	o73	o72
0x2000:0B	1	o87	o86	o85	o84	o83	o82	o81	o80
0x2000:0C	1	o95	o94	o93	o92	o91	o90	o89	o88
0x2000:0D	1	o103	o102	o101	o100	o99	o98	o97	o96
0x2000:0E	1	o111	o110	o109	o108	o107	o106	o105	o104
0x2000:0F	1	o119	o118	o117	o116	o115	o114	o113	o112
0x2000:10	1	o127	o126	o125	o124	o123	o122	o121	o120
0x2000:11	1	LED status							
0x2000:12	1	Table number							
0x2000:13	1	Segment number							
0x2000:14	13	Byte 0 to 12 of payload							
...									
0x2000:20									

4.4.5 Formation of the object 0x2100 input data

Index (hex)	Size (byte)	Contents							
		Virtual inputs i0 ... i127							
		Bit 7	...						Bit 0
0x2100:01	1	i7	i6	i5	i4	i3	i2	i1	i0
0x2100:02	1	i15	i14	i13	i12	i11	i10	i9	i8
0x2100:03	1	i23	i22	i21	i20	i19	i18	i17	i16
0x2100:04	1	i31	i30	i29	i28	i27	i26	i25	i24
0x2100:05	1	i39	i38	i37	i36	i35	i34	i33	i32
0x2100:06	1	i47	i46	i45	i44	i43	i42	i41	i40
0x2100:07	1	i55	i54	i53	i52	i51	i50	i49	i48
0x2100:08	1	i63	i62	i61	i60	i59	i58	i57	i56
0x2100:09	1	i71	i70	i69	i68	i67	i66	i65	i64
0x2100:0A	1	i79	i78	i77	i76	i75	i74	i73	i72
0x2100:0B	1	i87	i86	i85	i84	i83	i82	i81	i80
0x2100:0C	1	i95	i94	i93	i92	i91	i90	i89	i88
0x2100:0D	1	i103	i102	i101	i100	i99	i98	i97	i96
0x2100:0E	1	i111	i110	i109	i108	i107	i106	i105	i104
0x2100:0F	1	i119	i118	i117	i116	i115	i114	i113	i112
0x2100:10	1	i127	i126	i125	i124	i123	i122	i121	i120
0x2100:11	1	Reserved							
0x2100:12	1	Table number							
0x2100:13	1	Segment number							
0x2100:14	13	Reserved							
...									
0x2100:20									

4.4.6 Diagnostic data

The following table includes emergency messages from PNOZ m ES EtherCAT Version 2.0

Error code	Error register	Contents	Manufacturer Bytes
0xFF00	0x81	No connection to base unit	0xB0 0x00 0x00 0x00 0x00
0x0000	0x00	Connection to the base unit has been restored	0xB0 0x00 0x00 0x00 0x00

The EtherCAT Error register object 0x1001 is updated according to the Error register field of the last emergency message.

4.5 PNOZ m EF EtherCAT FSoE

4.5.1 Service Data Objects (SDOs)

The object directory of the EtherCAT FSoE is where all the relevant device parameters and current process data of the PNOZmulti 2 are stored. These can be read and written via Service Data Objects (SDOs).

To enable the fieldbus module to be incorporated easily within an EtherCAT FSoE network, the object directory is available as an XML file. The content is described in the chapter entitled [Service data \[86\]](#).

4.5.2 Service data

The service data for EtherCAT FSoE is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content and the version and device-dependent validity of the service data and the addressing are described in detail in the chapter [Service data \[86\]](#).

4.5.3 FSoE diagnostic word addressing

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Diagnostics	0 ... 11	230	0	0 ... 11
Diagnostics	12 ... 23	230	1	0 ... 11
Diagnostics	24 ... 179	230	2 ... 14	0 ... 11
Diagnostics	180 ... 191	230	15	0 ... 11
Diagnostics	192 ... 199	230	16	0 ... 7

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Diagnostics	0 ... 119	0x2080	1 ... 120
Diagnostics	120 ... 199	0x2081	1 ... 80

4.5.4 Setting the Communication Area (PDOs)

In the case of a restart, the PDO mapping of the PNOZ m EF EtherCAT FSoE is available preselected, as shown in the table. The mapping of process data can be adapted.

The virtual inputs and outputs are available to the base unit and the PNOZ m EF EtherCAT FSoE. The virtual inputs are OR-linked in both devices.



NOTICE

When using the FSoE interface, make sure that all FSoE subscribers have successfully completed a test in an official EtherCAT Test Centre.

The input and output data (objects 0x2100 and 0x2000) of the base unit is updated every 10-15 ms.

The inputs and outputs that are processed by the PNOZ m EF EtherCAT FSoE are available within 5-10 ms.

Mapping objects	Size	Name	Index (hex)	Sub-Index(hex)	Content
0x1B00	32	TxPDO	2000	01 - 20	Output data (from the PNOZmulti)
0x1B01	64	TxPDO	2001	49 - 50	Default configuration (freely configurable)
			2002	01 - 08	
			2002	25 - 2C	
			2002	49 - 50	
			200A	01 - 20	
0x1700	19	RxPDO	2100	01 - 13	Input data (to the PNOZmulti)

Key to abbreviations:

TxPDO: Transmit Process Data Object

RxPDO: Receive Process Data Object

4.5.5 Formation of the object 0x2000 output data

Index (hex)	Size (byte)	Contents								
		Virtual outputs o0 ... o127								
0x2000:01	1	Bit 7	...						Bit 0	
		o7	o6	o5	o4	o3	o2	o1	o0	
0x2000:02	1	o15	o14	o13	o12	o11	o10	o9	o8	
0x2000:03	1	o23	o22	o21	o20	o19	o18	o17	o16	
0x2000:04	1	o31	o30	o29	o28	o27	o26	o25	o24	
0x2000:05	1	o39	o38	o37	o36	o35	o34	o33	o32	
0x2000:06	1	o47	o46	o45	o44	o43	o42	o41	o40	
0x2000:07	1	o55	o54	o53	o52	o51	o50	o49	o48	
0x2000:08	1	o63	o62	o61	o60	o59	o58	o57	o56	

Index (hex)	Size (byte)	Contents							
0x2000:09	1	o71	o70	o69	o68	o67	o66	o65	o64
0x2000:0A	1	o79	o78	o77	o76	o75	o74	o73	o72
0x2000:0B	1	o87	o86	o85	o84	o83	o82	o81	o80
0x2000:0C	1	o95	o94	o93	o92	o91	o90	o89	o88
0x2000:0D	1	o103	o102	o101	o100	o99	o98	o97	o96
0x2000:0E	1	o111	o110	o109	o108	o107	o106	o105	o104
0x2000:0F	1	o119	o118	o117	o116	o115	o114	o113	o112
0x2000:10	1	o127	o126	o125	o124	o123	o122	o121	o120
0x2000:11	1	LED status							
0x2000:12	1	Table number							
0x2000:13	1	Segment number							
0x2000:14	13	Byte 0 to 12 of payload							
...									
0x2000:20									

4.5.6 Formation of the object 0x2100 input data

Index (hex)	Size (byte)	Contents							
		Virtual inputs i0 ... i127							
		Bit 7	...						Bit 0
0x2100:01	1	i7	i6	i5	i4	i3	i2	i1	i0
0x2100:02	1	i15	i14	i13	i12	i11	i10	i9	i8
0x2100:03	1	i23	i22	i21	i20	i19	i18	i17	i16
0x2100:04	1	i31	i30	i29	i28	i27	i26	i25	i24
0x2100:05	1	i39	i38	i37	i36	i35	i34	i33	i32
0x2100:06	1	i47	i46	i45	i44	i43	i42	i41	i40
0x2100:07	1	i55	i54	i53	i52	i51	i50	i49	i48
0x2100:08	1	i63	i62	i61	i60	i59	i58	i57	i56
0x2100:09	1	i71	i70	i69	i68	i67	i66	i65	i64
0x2100:0A	1	i79	i78	i77	i76	i75	i74	i73	i72
0x2100:0B	1	i87	i86	i85	i84	i83	i82	i81	i80
0x2100:0C	1	i95	i94	i93	i92	i91	i90	i89	i88
0x2100:0D	1	i103	i102	i101	i100	i99	i98	i97	i96
0x2100:0E	1	i111	i110	i109	i108	i107	i106	i105	i104
0x2100:0F	1	i119	i118	i117	i116	i115	i114	i113	i112
0x2100:10	1	i127	i126	i125	i124	i123	i122	i121	i120
0x2100:11	1	Reserved							
0x2100:12	1	Table number							
0x2100:13	1	Segment number							
0x2100:14	13	Reserved							
...									
0x2100:20									

4.5.7 Formation of the object 0x6nn1 FSoE input data

The FSoE input data is stated in the object 0x6nn1.

The digits “nn” stand for the number of the FSoE connection.

The number of Input Bytes on an FSoE connection depends on the module that is used.

The maximum number is 16.

Sub Index	1. FSoE connection	2. FSoE connection	3. FSoE connection	...	64. FSoE connection
	0x6001	0x6011	0x6021	...	0x63F1
1	1. Input Byte	1. Input Byte	1. Input Byte	...	1. Input Byte
2	2. Input Byte	2. Input Byte	2. Input Byte	...	2. Input Byte

Sub Index	1. FSoE connection	2. FSoE connection	3. FSoE connection	...	64. FSoE connection
3	3. Input Byte	3. Input Byte	3. Input Byte	...	3. Input Byte
...
n	n. Input Byte	n. Input Byte	n. Input Byte	...	n. Input Byte

4.5.8 Formation of the object 0x7nn1 FSoE output data

The FSoE output data is stated in the object 0x7nn1.

The digits “nn” stand for the number of the FSoE connection.

The number of Input Bytes on an FSoE connection depends on the module that is used.

The maximum number is 16.

Sub Index	1. FSoE connection	2. FSoE connection	3. FSoE connection	...	64. FSoE connection
	0x7001	0x7011	0x7021	...	0x73F1
1	1. Output Byte	1. Output Byte	1. Output Byte	...	1. Output Byte
2	2. Output Byte	2. Output Byte	2. Output Byte	...	2. Output Byte
3	3. Output Byte	3. Output Byte	3. Output Byte	...	3. Output Byte
...
n	n. Output Byte	n. Output Byte	n. Output Byte	...	n. Output Byte

4.5.9 FSoE connection information

The FSoE connection information is stated in the object 0x7nn1.

The digits “nn” stand for the number of the FSoE connection.

Sub Index	1. FSoE connection	2. FSoE connection	3. FSoE connection	...	64. FSoE connection
	0x9001	0x9011	0x9021	...	0x93F1
1	Version	Version	Version	...	Version
2	FSoE Slave Address	FSoE Slave Address	FSoE Slave Address	...	FSoE Slave Address
3	Connection ID	Connection ID	Connection ID	...	Connection ID
4	Watchdog Time	Watchdog Time	Watchdog Time	...	Watchdog Time
5	Unique Device ID	Unique Device ID	Unique Device ID	...	Unique Device ID
6	Connection Type	Connection Type	Connection Type	...	Connection Type
7	ComParameterLength	ComParameterLength	ComParameterLength	...	ComParameterLength
8	Appl. Parameter Length	Appl. Parameter Length	Appl. Parameter Length	...	Appl. Parameter Length
9	SRA CRC	SRA CRC	SRA CRC	...	SRA CRC

4.5.10 FSoE connection diagnosis

The FSoE connection diagnosis is stated in the object 0xAnn0.
The digits “nn” stand for the number of the FSoE connection.

Sub Index	1. FSoE connection	2. FSoE connection	3. FSoE connection	...	64. FSoE connection
	0xA000	0x A010	0x A020	...	0xA3B0
1	Connection State	Connection State	Connection State	...	Connection State
2	Connection Diagnosis	Connection Diagnosis	Connection Diagnosis	...	Connection Diagnosis

Connection State

indicates the state of the FSoE connection (e.g. **RESET + SESSION**)

Connection Diagnosis

The bits are divided as follows:

Connection Diagnosis	Bit 7 ... 5	Bit 4 ... 5	Bit 0 ... 3
	0:No Error 2:Establishing Connection FSoE Connection in Failsafe State 1:FSoE Slave 4:FSoE Master 5:Both	0:No Error or 0:Error in Master Connection 1:Error in Slave Connection	0:No Error 1:Wrong Command 2:Unknown Command 3:Wrong Connection ID 4:Wrong CRC 5:Watchdog Expired 6:Wrong FSoE Address 7:Wrong Data 8:Wrong Communication Parameter Length 9:Wrong Communication Parameter 10:Wrong Application Parameter Length 11: Wrong Application Parameter 12:Unexpected Session Command 13:Failsafe Data Received

4.6 PNOZ m ES Powerlink

4.6.1 Service Data Objects (SDOs)

The object directory of the Ethernet POWERLINK is where all the relevant device parameters and current process data of the PNOZmulti 2 are stored. These can be read and written via Service Data Objects (SDOs).

To enable the fieldbus module to be incorporated easily within an Ethernet POWERLINK network, the object directory is available as an XDD file. The content is described in the chapter entitled [Service data](#) [86].

4.6.2 Service data

The service data for Ethernet POWERLINK is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content and the version and device-dependent validity of the service data and the addressing are described in detail in the chapter [Service data](#) [86].

4.6.3 Process Data Objects (PDOs)

A PDO can be assembled individually from the SDOs.

Maximum size for the PDOs:

- ▶ 254 Bytes input data
- ▶ 32 Bytes output data

The inputs and outputs are viewed from the Managing Node.

4.6.4 Formation of the object 0x2000 output data

Index (hex)	Size (byte)	Contents							
		Virtual outputs o0 ... o127							
0x2000:01	1	Bit 7	...						Bit 0
		o7	o6	o5	o4	o3	o2	o1	o0
0x2000:02	1	o15	o14	o13	o12	o11	o10	o9	o8
0x2000:03	1	o23	o22	o21	o20	o19	o18	o17	o16
0x2000:04	1	o31	o30	o29	o28	o27	o26	o25	o24
0x2000:05	1	o39	o38	o37	o36	o35	o34	o33	o32
0x2000:06	1	o47	o46	o45	o44	o43	o42	o41	o40
0x2000:07	1	o55	o54	o53	o52	o51	o50	o49	o48
0x2000:08	1	o63	o62	o61	o60	o59	o58	o57	o56
0x2000:09	1	o71	o70	o69	o68	o67	o66	o65	o64
0x2000:0A	1	o79	o78	o77	o76	o75	o74	o73	o72
0x2000:0B	1	o87	o86	o85	o84	o83	o82	o81	o80
0x2000:0C	1	o95	o94	o93	o92	o91	o90	o89	o88

Index (hex)	Size (byte)	Contents							
0x2000:0D	1	o103	o102	o101	o100	o99	o98	o97	o96
0x2000:0E	1	o111	o110	o109	o108	o107	o106	o105	o104
0x2000:0F	1	o119	o118	o117	o116	o115	o114	o113	o112
0x2000:10	1	o127	o126	o125	o124	o123	o122	o121	o120
0x2000:11	1	LED status							
0x2000:12	1	Table number							
0x2000:13	1	Segment number							
0x2000:14	13	Byte 0 to 12 of payload							
...									
0x2000:20									

4.6.5 Formation of the object 0x2100 input data

Index (hex)	Size (byte)	Contents							
		Virtual inputs i0 ... i127							
		Bit 7	...						Bit 0
0x2100:01	1	i7	i6	i5	i4	i3	i2	i1	i0
0x2100:02	1	i15	i14	i13	i12	i11	i10	i9	i8
0x2100:03	1	i23	i22	i21	i20	i19	i18	i17	i16
0x2100:04	1	i31	i30	i29	i28	i27	i26	i25	i24
0x2100:05	1	i39	i38	i37	i36	i35	i34	i33	i32
0x2100:06	1	i47	i46	i45	i44	i43	i42	i41	i40
0x2100:07	1	i55	i54	i53	i52	i51	i50	i49	i48
0x2100:08	1	i63	i62	i61	i60	i59	i58	i57	i56
0x2100:09	1	i71	i70	i69	i68	i67	i66	i65	i64
0x2100:0A	1	i79	i78	i77	i76	i75	i74	i73	i72
0x2100:0B	1	i87	i86	i85	i84	i83	i82	i81	i80
0x2100:0C	1	i95	i94	i93	i92	i91	i90	i89	i88
0x2100:0D	1	i103	i102	i101	i100	i99	i98	i97	i96
0x2100:0E	1	i111	i110	i109	i108	i107	i106	i105	i104
0x2100:0F	1	i119	i118	i117	i116	i115	i114	i113	i112
0x2100:10	1	i127	i126	i125	i124	i123	i122	i121	i120
0x2100:11	1	Reserved							
0x2100:12	1	Table number							
0x2100:13	1	Segment number							

Index (hex)	Size (byte)	Contents
0x2100:14	13	Reserved
...		
0x2100:20		

4.7 PNOZ m ES Profinet

4.7.1 Cyclical input and output data

Virtual inputs and outputs can be requested or set directly via the following modules. Each element can be selected individually in the master control system, e.g. virtual inputs i0-31. The data width is also established this way.

Input data

The Master writes to the virtual inputs of the PNOZmulti 2.

Description	Input data from PNOZmulti 2
Virtual inputs i0 – i31	4 Input Bytes
Virtual inputs i32 – i63	4 Input Bytes
Virtual inputs i64 – i95	4 Input Bytes
Virtual inputs i96 – i127	4 Input Bytes

Output data

The Master reads the virtual outputs of the PNOZmulti 2.

Description	Output data from PNOZmulti 2
Virtual outputs o0 – o31	4 Output Bytes
Virtual outputs o32 – o63	4 Output Bytes
Virtual outputs o64 – o95	4 Output Bytes
Virtual outputs o96 – o127	4 Output Bytes

4.7.2 Access to table segments

The data in the tables (see [Service data \[86\]](#)) can be requested via the following modules.

Input data

The Master requests a table segment in the form:

Description	Input data from PNOZmulti 2
Table and segment number	2 Input Bytes

Output data

The PNOZmulti 2 replies in the form:

Description	Output data from PNOZmulti 2
Table and segment number + 13 Byte payload	15 Output Bytes

A detailed description is available in the chapter entitled [Access to table segments](#) [86] 19].

4.7.3

LED status

The LED status of the PNOZmulti 2 can be requested directly via the following module.

Description	Output data from PNOZmulti 2
LED status	1 Output Byte

The LED status of the base unit PNOZ m B0 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN is lit
- ▶ Bit 5-7: Reserved

The LED status of the base unit PNOZ m B1 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN FS is lit
- ▶ Bit 5: Reserved
- ▶ Bit 6 = 1: LED RUN ST is lit
- ▶ Bit 7: Reserved

4.7.4

Service data

The service data for PROFINET is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content and the version and device-dependent validity of the service data and the addressing are described in detail in the chapter [Service data](#) [86] 86].

4.7.5 Diagnostic data

These bits contain the diagnostic data of the PNOZ m B0 and PNOZ m B1

Unit Diag_Bit	Content	PNOZ m B0	PNOZ m B1
01	STOP FS, base unit is in FS STOP state	x	x
02	Base unit was stopped by the Configurator	x	x
03	Reserved		
04	External fault	x	x
05	Internal error	x	x
06	External error on the inputs	x	x
07	Internal error on the inputs	x	
08	External error on the outputs	x	x
09	Internal error on the outputs	x	
10	No connection to base unit	x	x
11	STOP ST, base unit is in ST STOP state		x
12	Error on the 1st ST expansion module, left		x
13	Error on the 2nd ST expansion module, left		x
14	Error on the 3rd ST expansion module, left		x
15	Error on the 4th ST expansion module, left		x
16	Error on the 5th ST expansion module, left		x
17	Error on the 6th ST expansion module, left		x
18	Reserved		
... 21			
22	Error on the base unit	x	x
23	Reserved		
24	Error on the 1st FS expansion module, right	x	x
25	Error on the 2nd FS expansion module, right	x	x
26	Error on the 3rd FS expansion module, right	x	x
27	Error on the 4th FS expansion module, right	x	x
28	Error on the 5th FS expansion module, right	x	x
29	Error on the 6th FS expansion module, right	x	x
30	Error on the 7th FS expansion module, right		x
31	Error on the 8th FS expansion module, right		x
32	Error on the 9th FS expansion module, right		x

Unit Diag_Bit	Content	PNOZ m B0	PNOZ m B1
33	Error on the 10th FS expansion module, right		x
34	Error on the 11th FS expansion module, right		x
35	Error on the 12th FS expansion module, right		x
36 ... 39	Reserved		
40	Error on the 1st FS expansion module, left	x	x
41	Error on the 2nd FS expansion module, left	x	x
42	Error on the 3rd FS expansion module, left	x	x
43	Error on the 4th FS expansion module, left	x	x
44 ... 45	Reserved		
46	Error on the communication module	x	
47 ... 55	Reserved		
56	Error in the configuration, F_81	x	
57	Error in the user program, F_82	x	
58	Error in the periphery, F_83	x	
59	Error on the speed monitor, F_84	x	
60	Error on the bus module, F_85	x	
61	Error on the link module, F_86	x	
62	Error on the analogue input module, F_87	x	
63	Reserved		
64	Error on the input/output module, F_89	x	
65	Error on the Ethernet module, F_8A	x	
66	Internal error on the left-hand expansion module, F_90	x	
67	Internal periphery error, F_93	x	
68	Internal error on the right-hand expansion module, F_94	x	
69	Internal error on the right-hand expansion module, F_95	x	
70	Internal self test error, F_B0	x	
71	Internal data error, F_B1	x	

Unit Diag_Bit	Content	PNOZ m B0	PNOZ m B1
72	Internal parameter error, F_B2	x	
73	Internal serial/I2C error, F_B3	x	
74	Internal time error, F_B4	x	
75	Internal processor error, F_B5	x	
76	Internal parameter error, F_B6	x	
77	Internal compare error, F_B7	x	
78	Internal sequence error, F_B8	x	
79	Internal periphery error, F_B9	x	
80	Internal error on bus module, F_BA	x	
81	Internal error on link module, F_BB	x	
82	Internal error on speed monitor, F_BC	x	
83	Internal error on analogue input module, F_BD	x	
84	Internal error on link module, F_BE	x	
85	Internal error on link module, F_BF	x	
86	Internal error on the left-hand expansion module, F_C0	x	
87	Internal error on the left-hand expansion module, F_C1	x	
88	Internal error on the Ethernet module, F_C2	x	
89	Internal compare error, F_C3	x	
90	Internal error on the right-hand expansion module, F_C4	x	
91	Internal error on the right-hand expansion module, F_C5	x	
92	Reserved		
...			
95			

Explanation: Bits 56 to 91 display the last content of the error stack (corresponds to the error class). The bits are deleted as soon as PNOZmulti 2 returns to a RUN state.

4.8 PNOZ m ES Ethernet/IP

4.8.1 Cyclical input and output data

17 or 32 bytes must always be sent and received for communication with the PNOZmulti.

Fixed parameters for the input/output assembly instances are set in the fieldbus module interfaces. The following data lengths can be selected:

Assembly Instance Input	Data length	Description
100	32 Bytes	Inputs, tables
101	17 Bytes	Inputs
Assembly Instance Output	Data length	Description
150	32 Bytes	Outputs, LEDs, tables
151	17 Bytes	Outputs, LEDs
Assembly Instance Configuration	Data length	Description
4	0 Bytes	-

4.8.2 LED status

The LED status of the PNOZmulti 2 can be read via Byte 16 of instance 100 or 101.

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN FS is lit
- ▶ Bit 5-7: Reserved

4.8.3 Service data

The service data for EtherNet/IP is instanced from class "0xB0" and is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content of the version and device-dependent service data and addressing are described in the chapter entitled [Service data \[86\]](#).

4.8.4 Diagnostic data

Input			Output				
Byte	As-sembly Instance		Input	Byte	As-sembly Instance		Output
0	101	100	i7 - i0	0	151	150	o7 - o0
1			i15 - i8	1			o15 - o8
2			i23 - i16	2			o23 - o16
3			i31 - i24	3			o31 - o24
4			i39 - i32	4			o39 - o32
5			i47 - i40	5			o47 - o40
6			i55 - i48	6			o55 - o48
7			i63 - i56	7			o63 - o56
8			i71 - i64	8			o71 - o64
9			i79 - i72	9			o79 - o72
10			i87 - i80	10			o87 - o80
11			i95 - i88	11			o95 - o88
12			i103 - i96	12			o103 - o96
13			i111 - i104	13			o111 - o104
14			i119 - i112	14			o119 - o112
15			i127 - i120	15			o127 - o120
16		Reserved	16			LEDs	
17		Table number	17			Table number	
18		Segment number	18			Segment number	
19		Reserved	19			Byte 0 to Byte 12 of payload	
20		Reserved	20				
21		Reserved	21				
22		Reserved	22				
23		Reserved	23				
24		Reserved	24				
25		Reserved	25				
26		Reserved	26				
27		Reserved	27				
28		Reserved	28				
29		Reserved	29				
30		Reserved	30				
31		Reserved	31				

4.9 PNOZ m ES CC-Link

4.9.1 Input and output data

Virtual inputs and outputs can be requested or set directly via the following addresses. The implementation to the names of the inputs and outputs in PNOZmulti 2 is performed as in the table listed below.

The data is structured as follows:

► **Input area**

- Inputs on PNOZmulti Configurator: i00 .. i127
- Input data CC-Link: RYmn.. RY(m+50)n, RWw l .. RWw l+2
 with l = address can be set as required on the master side (word address)
 with m = address can be set as required on the master side (Bit address)
 with n = 0 .. F (Bit number)

Example: (with m=100) i23 -> n = 7 -> RY117

Bit addressed input data i00 - i87

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RY m n	i15	i14	i13	i12	i11	i10	i09	i08	i07	i06	i05	i04	i03	i02	i01	i00
RY(m+10)n	i31	i30	i29	i28	i27	i26	i25	i24	i23	i22	i21	i20	i19	i18	i17	i16
RY(m+20)n	i47	i46	i45	i44	i43	i42	i41	i40	i39	i38	i37	i36	i35	i34	i33	i32
RY(m+30)n	i63	i62	i61	i60	i59	i58	i57	i56	i55	i54	i53	i52	i51	i50	i49	i48
RY(m+40)n	i79	i78	i77	i76	i75	i74	i73	i72	i71	i70	i69	i68	i67	i66	i65	i64
RY(m+50)n									i87	i86	i85	i84	i83	i82	i81	i80

Word addressed input data i88 - i127

	High byte								Low byte							
Bit no	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
RWw l	i103	i102	i101	i100	i99	i98	i97	i96	i95	i94	i93	i92	i91	i90	i89	i88
RWw l+1	i119	i118	i117	i116	i115	i114	i113	i112	i111	i110	i109	i108	i107	i106	i105	i104
RWw l+2	-	-	-	-	-	-	-	-	i127	i126	i125	i124	i123	i122	i121	i120

► **Output range**

- Outputs on PNOZmulti Configurator: o00 .. o127
- Output data CC-Link: RXmn .. RX(m+50)n, RWr l .. RWr l+2
 with l = address can be set as required on the master side (word address)
 with m = address can be set as required on the master side (Bit address)
 with n = 0 .. F (Bit number)

Example: (with m=100) o22 -> n = 6 -> RX116

Bit addressed output data o00 - o87

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RX m n	o15	o14	o13	o12	o11	o10	o09	o08	o07	o06	o05	o04	o03	o02	o01	o00
RX(m+10)n	o31	o30	o29	o28	o27	o26	o25	o24	o23	o22	o21	o20	o19	o18	o17	o16
RX(m+20)n	o47	o46	o45	o44	o43	o42	o41	o40	o39	o38	o37	o36	o35	o34	o33	o32
RX(m+30)n	o63	o62	o61	o60	o59	o58	o57	o56	o55	o54	o53	o52	o51	o50	o49	o48
RX(m+40)n	o79	o78	o77	o76	o75	o74	o73	o72	o71	o70	o69	o68	o67	o66	o65	o64
RX(m+50)n									o87	o86	o85	o84	o83	o82	o81	o80

Word addressed output data o88 - o127

	High byte								Low byte							
Bit No.	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
RWr I	o10 3	o10 2	o10 1	o10 0	o99	o98	o97	o96	o95	o94	o93	o92	o91	o90	o89	o88
RWr I+1	o11 9	o11 8	o11 7	o11 6	o11 5	o11 4	o11 3	o11 2	o11 1	o11 0	o10 9	o10 8	o10 7	o10 6	o10 5	o10 4
RWr I+2	-	-	-	LED R U N F S	LED D I A G	LED F A U L T	LED I F A U L T	LED O F A U L T	o12 7	o12 6	o12 5	o12 4	o12 3	o12 2	o12 1	o12 0

4.9.2 Service data

The service data for CC-Link is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content and the version and device-dependent validity of the service data and the addressing are described in detail in the chapter [Service data \[86\]](#).

4.9.3 LED status

The LED status of PNOZmulti 2 can be read out via the following High Byte.

	High Byte								Low Byte							
Bit no	7	6	5	4	3	2	1	0	7	6	5	4	3	2	1	0
RWr (I+2)	LED Byte								Output data o120 - o127							

Bit 5-7: Reserved

The LED status of the base unit PNOZ m B0 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN is lit
- ▶ Bit 5-7: Reserved

The LED status of the base unit PNOZ m B1 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN FS is lit
- ▶ Bit 5: Reserved
- ▶ Bit 6 = 1: LED RUN ST is lit
- ▶ Bit 7: Reserved

4.9.4 Access to table segments

The data in the tables can be requested via the following addresses.

Input data

The Master requests a table segment:

	High Byte	Low Byte
RWw (I+3)	Segment number	Table number

Output data

PNOZmulti 2 answers as follows:

	High Byte	Low Byte
RWr (I+3)	Segment number	Table number
RWr(I+4)	Segment Byte 1	Segment Byte 0
RWr(I+5)	Segment Byte 3	Segment Byte 2
RWr(I+6)	Segment Byte 5	Segment Byte 4
RWr(I+7)	Segment Byte 7	Segment Byte 6
RWr(I+8)	Segment Byte 9	Segment Byte 8
RWr(I+9)	Segment Byte 11	Segment Byte 10
RWr(I+A)	Reserved	Segment Byte 12
RWr(I+B)	Reserved	Reserved

5 ETH/RS232 interfaces

5.1 Overview

The communication interface on the configurable control system PNOZmulti 2 is used to

- ▶ Download and upload the project,
- ▶ Read the diagnostic words,
- ▶ Read the error stack.

Base unit PNOZ m B1

The base unit PNOZ m B1 has an Ethernet interface integrated in the device.

Base unit PNOZ m B0

The base unit PNOZ m B0 does not contain an integrated interface. Communication modules with interface can be connected:

▶ PNOZ m ES RS232

The communication module provides a serial RS232 interface

▶ PNOZ m ES ETH

The communication module provides 2 Ethernet interfaces

5.2 Communication Module PNOZ m ES RS232

The connection to the RS 232 interface of the communication partner and the communication module PNOZ m ES RS232 is established via a null modem cable.


Transmission rate:

19.2 kBit with

- ▶ 8 bits of data
- ▶ 1 start bit
- ▶ 2 stop bits
- ▶ 1 parity bit
- ▶ Even parity

5.3 Communication Module PNOZ m ES ETH

5.3.1 Introduction

This chapter describes the special features of communication with the expansion module PNOZ m ES ETH via Ethernet and Modbus/TCP. Access to data from the PNOZmulti 2 via tables and segments is described in Chapter [Basics](#)  17].

5.3.2 Overview

The expansion module PNOZ m ES ETH provides an interface to Ethernet. Via this interface, the configurable control system PNOZmulti 2 can be connected via Ethernet to control systems that support Modbus/TCP. Modbus/TCP is designed for fast data exchange at field level. The expansion module PNOZ m ES ETH is a passive Modbus/TCP subscriber

(Server). The basic functions of communication with Ethernet or Modbus/TCP conform to IEEE 802.3. The central controller (Client) reads output information from the Servers and writes input information to the Servers as part of each cycle. In addition to the cyclical payload transmission, the PNOZ m ES ETH also has diagnostic functions.

The connections are established via two RJ45 sockets.

The Ethernet interface is configured in the PNOZmulti Configurator (for description see online help for the PNOZmulti Configurator).

The communication module PNOZ m ES ETH supports [Modbus/TCP](#)  [72].

The module can manage up to 8 Modbus/TCP connections and up to 4 PG port (Port 9000) connections.

5.3.3 Module features

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Network protocols: TCP/IP, Modbus/TCP
- ▶ Status indicators for communication and display of errors
- ▶ Transmission rate 10 MBit/s (10BaseT) and 100 MBit/s (100BaseTX), full and half duplex

5.3.4 Modbus/TCP

There is no need to configure a connection on the PNOZ m ES ETH. Port 502 is used in accordance with the Modbus/TCP specification.

For details see [Modbus/TCP](#)  [72]

5.4 Integrated Ethernet interface

5.4.1 Overview

The base unit PNOZ m B1 has an integrated Ethernet interface. Via this interface, the configurable control system PNOZmulti 2 can be connected via Ethernet to control systems that support Modbus/TCP. Modbus/TCP is designed for fast data exchange at field level. The PNOZmulti is a passive Modbus/TCP subscriber (Server).

The basic functions of communication with Ethernet or Modbus/TCP conform to IEEE 802.3. The central controller (Client) reads output information from the Servers and writes input information to the Servers as part of each cycle. In addition to the cyclical payload transmission, the PNOZ m B1 also has diagnostic functions.

The connections are established via two RJ45 sockets.

The Ethernet interface is configured in the PNOZmulti Configurator (for description see online help for the PNOZmulti Configurator).

The module can manage up to 8 Modbus/TCP connections and up to 4 PG port (Port 9000) connections.

5.4.2 Module features

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Network protocols: TCP/IP
- ▶ Status indicators for communication and display of errors
- ▶ Transmission rate 10 MBit/s (10BaseT) and 100 MBit/s (100BaseTX), full and half duplex

5.4.3 Modbus/TCP

No connection needs to be configured. Port 502 is used in accordance with the Modbus/TCP specification.

For details see [Modbus/TCP](#) [ 72]

5.5 Communication procedure

The PNOZmulti 2 is always the connection's Server in the communication; the communication partner (PC, SPS) is the Client. With both communication interfaces, the bytes are sent in the same sequence.



INFORMATION

For communication via Ethernet, the Ethernet interface must be set up in the PNOZmulti Configurator. The procedure is described in the PNOZmulti Configurator's online help.

Each communication is started by sending a request to the PNOZmulti 2. Requests are used to receive data from the PNOZmulti 2 or send data to the PNOZmulti 2:

1. Request:

The user sends a request to the PNOZmulti 2 via the communications partner.

2. Response:

The PNOZmulti 2 sends a response to the communications partner after approx. 20 to 30 ms, confirming that the request has been received without error. Data is sent in accordance with the request.

5.6 Telegram structure

The telegram used for communication consists of:

- ▶ a header,
- ▶ the payload,
- ▶ a footer.

User → PNOZmulti			PNOZmulti → User				
	Byte	Request		Byte	Response		
Header	0	0x05	Header	0	0x05		
	1	0x15		1	0x15		
	2	0x00		2	0x00		
	3	Telegram length		3	Telegram length		
	(BCC)*	4		Request No.	(BCC)*	4	Confirmation/error
		5		Segment No. HB		5	Segment No. HB
		6		Segment No. LB		6	Segment No. LB
7		0x00	7	Reserved			
Payload (Payload)	7+1	Payload Byte 0	Payload (Payload)	8	Payload Byte 0		
	7+2	Payload Byte 1		9	Payload Byte 1		
		
	7+x	Payload Byte x		7+y	Payload Byte y		
Footer	7+x+1	BCC	Footer	7+y+1	BCC		
	7+x+2	0x10		7+y+2	0x10		

x stands for the request's payload amount

y stands for the response's payload amount


*Check sum field

5.6.1 Header

Byte 0 ... Byte 7 form the data block's header

- ▶ Byte 0: Always 0x05
- ▶ Byte 1: Always 0x15
- ▶ Byte 2: Always 0x00
- ▶ Byte 3: Telegram length = Length of check sum area +1
- ▶ Byte 4
 - Request: Request number
 A request is defined via the request number

[Requests](#) [ 60]

- Response: Confirmation of request
The request is confirmed: Request number + 0x80 (Bit 7 set).
If the request cannot be processed, an error message is returned
[Troubleshooting](#) [ 70].

- ▶ Byte 5: High Byte of segment number
- ▶ Byte 6: Low Byte of segment number
- ▶ Byte 7
 - Request: Always 0x00
 - Response: Reserved

5.6.2 Payload

The telegram contains payload from Byte 8. The content and number of payload bytes depend on the request. 0 - 40 bytes of payload can be transmitted.

If there is no payload, then the footer directly follows the header, without any payload in between.

- ▶ Bytes 8 ... x + 7 (request): Application data, which is sent to the PNOZmulti
- ▶ Bytes 8 ... y + 7 (response): Application data, which is sent by the PNOZmulti

5.6.3 Footer

The Byte x + 8 contains a byte-size check sum (Block Check Character = BCC). The value at Byte x + 9 contains the fixed byte value 0x10.

The check sum is calculated as the sum total of the check sum field:

$$\text{BCC} = 0 - \left(\sum_{\text{Byte } 4}^{\text{Byte } x+7} \text{byte values} \right)$$

Sample of the check sum field:

$$0 = \text{BCC} + \left(\sum_{\text{Byte } 4}^{\text{Byte } x+7} \text{byte values} \right)$$

Example for 2 Bytes payload length

Table 91 Segment 40 is requested:

Telegram: 05 15 00 07 2F 00 00 00 5B 28 [BCC] 10

Calculation of check sum:

1. Total: 2F + 00 + 00 + 00 + 5B + 28 = B2
2. Invert (two's complement): -B2 = 4E
3. Result BCC = 4E

5.7 Description of payload

This section describes the payload that can be transmitted as the result of a corresponding request.

5.7.1 Virtual inputs (Input Byte 0 ... Input Byte 15)

The virtual inputs are defined by the communication partner and transferred to the PNOZmulti 2. Each input has a number, e.g. input bit 4 of input byte 1 has the number i12.

Input Byte								
0	i7	i6	i5	i4	i3	i2	i1	i0
1	i15	i14	i13	i12	i11	i10	i9	i8
2	i23	i22	i21	i20	i19	i18	i17	i16
...
15	i127	i126	i125	i124	i123	i122	i121	i120

5.7.2 Watchdog

The watchdog is used to monitor the virtual inputs.

If no virtual inputs are sent by a communications partner within a defined watchdog time (watchdog timeout), the PNOZmulti sets the virtual inputs to "0".

The configuration and functionality of the watchdog varies and so is described in the respective requests.

5.7.3 Virtual outputs (Output Byte 0 ... Output Byte 15)

The virtual outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5 The state of output o0 is stored in bit 0 of output byte 0; the state of output o5 is stored in bit 5 of output byte 0 etc.

Output Byte								
0	o7	o6	o5	o4	o3	o2	o1	o0
1	o15	o14	o13	o12	o11	o10	o9	o8
2	o23	o22	o21	o20	o19	o18	o17	o16
...
15	o127	o126	o125	o124	o123	o122	o121	o120

5.7.4 LED status

The statuses of the LEDs are stored in a byte.

Status of LEDs with PNOZ m B0:

The LED status of the base unit PNOZ m B0 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN is lit
- ▶ Bit 5-7: Reserved

Status of LEDs with PNOZ m B1:

The LED status of the base unit PNOZ m B1 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN FS is lit
- ▶ Bit 5: Reserved
- ▶ Bit 6 = 1: LED RUN ST is lit
- ▶ Bit 7: Reserved

5.7.5 Tables


Further information can be requested in table form.

A table consists of one or more PNOZmulti 2 segments. Each segment is made up of 13 Bytes.

The communications partner requests the required data using the table number and segment number. The PNOZmulti 2 repeats the two numbers and sends the requested data.

The following types are available:

Table 20:	Process data, base unit
Table 21:	Process data, right-hand expansion modules
Table 22:	Process data, left-hand expansion modules
Table 23:	Process data, fieldbus module / communication module
Table 24:	Process data, ST expansion module
Table 70:	Diagnostic words
Table 71:	Enable elements
Table 80:	Project Information
Table 90:	Device data, base unit
Table 91:	Device data, right-hand expansion modules
Table 92:	Device data, left-hand expansion modules
Table 93:	Device data, fieldbus module / communication module
Table 94:	Device data, ST expansion module
Table 110:	Connected devices
Table 201:	Advanced data

The content and the version and device-dependent validity of the tables are described in detail in the chapter [Service data](#) [ 86].

5.8 Requests

A request is defined via the request number and segment number.

The following requests are available:

Request No.	Segment No.	Meaning
0x14	0x01	Sending virtual inputs to the PNOZmulti 2
0x14	0x02	Sending virtual inputs and requesting the LED statuses from the PNOZmulti 2
0x2C	0x01	Requesting virtual input and output data from the PNOZmulti 2
0x2C	0x02	Requesting virtual input and output data and the LED statuses from the PNOZmulti 2 Constraint: PNOZ m B1 from V1.10
0x2F	0x00	Requesting the diagnostic data in table form from the PNOZmulti 2
0x5C	0x00	Sending virtual inputs and requesting virtual output data from the PNOZmulti 2 (suitable for a cyclical exchange)

5.8.1 Mask (Mask Byte 0 ... Mask Byte 15)

The mask is used to determine which of the virtual inputs sent in a Byte are to be set. For example, if only inputs i0 to i5 are to be set in Byte 8, 0x3F must be entered in the mask in Byte 24.

5.8.2 Sending virtual inputs to PNOZmulti 2

Request 0x14 Segment 0x01

The communication partner uses this request to send virtual inputs to the PNOZmulti 2.

The mask (Bytes 24 to 39) is used to determine which of the virtual inputs in a Byte are to be set.

Telegram

Byte	Request	Byte	Response
0	0x05	0	0x05
1	0x15	1	0x15
2	0x00	2	0x00
3	0x25	3	0x05
4	0x14	4	
5	0x00	5	0x00
6	0x01	6	0x01
7	0x00	7	0x00
8	Virtual inputs Input Byte 0: i7 to i0	8	0x6B
...	...	9	0x10
23	Virtual inputs Input Byte 15: i127 to i120		
24	Mask Mask Byte 0: i7 to i0		
...	...		
39	Mask Mask Byte 15: i127 to i120		
40	BCC		
41	0x10		



INFORMATION

If a fieldbus module is configured, virtual inputs cannot be activated via the integrated interface. In this case the request will be rejected by the PNOZmulti 2 with error message 0x63 (request cannot be executed).

5.8.3

Sending virtual inputs and requesting the LED states from PNOZmulti 2

Request 0x14 Segment 0x02

The communication partner uses this request to send virtual inputs to the PNOZmulti 2 in exactly the same way as request 0x14 segment 0x01. It also requests the virtual outputs and the LED status from the PNOZmulti 2 .

The mask (Bytes 24 to 39) is used to determine which of the virtual inputs in a Byte are to be set. For example, if only inputs i0 to i5 are to be set in Byte 8, 0x3F must be entered in the mask in Byte 24.

Telegram

Byte	Request	Byte	Response
0	0x05	0	0x05
1	0x15	1	0x15
2	0x00	2	0x00
3	0x26	3	0x16
4	0x14	4	0x94
5	0x00	5	0x00
6	0x02	6	0x02
7	0x00	7	0x00
8	Virtual inputs Input Byte 0: i7 to i0	8	Virtual outputs Output Byte 0: o7 to o0
...
23	Virtual inputs Input Byte 15: i127 to i120	23	Virtual outputs Output Byte 15: o127 to o120
24	Mask Mask Byte 0: i7 to i0	24	LED status
...	...	25	BCC
39	Mask Mask Byte 15: i127 to i120	26	0x10
40	Control Byte		
41	BCC =0 - (Byte 4 + ... + Byte 40)		
42	0x10		

For details of the LED status see chapter entitled LED status.



INFORMATION

If a fieldbus module is configured, virtual inputs cannot be activated via the communication module.

5.8.3.1 Control Byte (Byte 40)

Bit 0 ... 2 of the Control Byte contain a watchdog function.

If no virtual inputs are sent by a communications partner within the defined watchdog time (watchdog timeout), the PNOZmulti 2 sets the virtual inputs to "0".

Control Byte 40:

Reserved	Delayed Re-sponse	Error Message	Reserved	Reserved	W-Timer Bit2	W-Timer Bit1	W-Timer Bit0
----------	-------------------	---------------	----------	----------	--------------	--------------	--------------

▶ Bit 0 - 2: Watchdog Timeout

Watchdog Timer Bit 2	Watchdog Timer Bit 1	Watchdog Timer Bit 0	Watchdog Timeout
0	0	0	Timer deactivated
0	0	1	100 ms
0	1	0	200 ms
0	1	1	500 ms
1	0	0	1 s
1	0	1	3 s
1	1	0	5 s
1	1	1	10 s

▶ Bit 3 and 4: Reserved

▶ Bit 5 Error Message: Error message

If the bit is set to "1", an error stack entry is generated when the watchdog is triggered.

▶ Bit 6 Delayed Response: Delayed response

If the bit is set to "1", the response (send virtual outputs) is sent after a delay of one cycle.

▶ Bit 7: Reserved



INFORMATION

To test if the watchdog is active, set a virtual input continuously to "1". If this input becomes "0" after the set watchdog timeout has elapsed, then the watchdog is active.



INFORMATION

The watchdog functions of the requests 0x14 segment 0x02 and 0x5C use the same watchdog timer. In other words, the watchdog timer is reset if either request is called.

5.8.4 Requesting virtual input and output data from PNOZmulti 2

Request 0x2C Segment 0x01

The communication partner uses this request to request the state of the virtual inputs and outputs from the PNOZmulti.

Telegram

Byte	Request	Byte	Response
0	0x05	0	0x05
1	0x15	1	0x15
2	0x00	2	0x00
3	0x05	3	0x25
4	0x2C	4	0xAC
5	0x00	5	0x00
6	0x01	6	0x01
7	0x00	7	0x00
8	0xD3	8	Virtual inputs Input Byte 0: i7 to i0
9	0x10
		23	Virtual inputs Input Byte 15: i127 to i120
		24	Virtual outputs Output Byte 0: o7 to o0
	
		39	Virtual outputs Output Byte 15: o127 to o120
		40	BCC
		41	0x10

5.8.5 Requesting virtual input and output data and the LED statuses from PNOZmulti 2

Request 0x2C Segment 0x02

The communication partner uses this request to request the status of the LEDs and the virtual inputs and outputs from the PNOZmulti.

Telegram

Byte	Request	Byte	Response
0	0x05	0	0x05
1	0x15	1	0x15
2	0x00	2	0x00
3	0x05	3	0x26
4	0x2C	4	0xAC
5	0x00	5	0x00
6	0x02	6	0x02
7	0x00	7	0x00
8	0xD2	8	Virtual inputs Input Byte 0: i7 to i0
9	0x10
		23	Virtual inputs Input Byte 15: i127 to i120
		24	Virtual outputs Output Byte 0: o7 to o0
	
		39	Virtual outputs Output Byte 15: o127 to o120
		40	LED status
		41	BCC
		42	0x10

5.8.6 Requesting the diagnostic data in table form from PNOZmulti 2

Request 0x2F

The communication partner uses this request to request data from the PNOZmulti in table form.

The content of the tables and segments is described in detail in the Appendix.

Telegram

Byte	Request	Byte	Response
0	0x05	0	0x05
1	0x15	1	0x15
2	0x00	2	0x00
3	0x07	3	0x14
4	0x2F	4	0xAF
5	0x00	5	0x00
6	0x00	6	0x00
7	0x00	7	0x00
8	Table No.	8	Table No.
9	Segment No.	9	Segment No.
10	BCC	10	Byte 0 of Table x, Segment y
11	0x10
		22	Byte 12 of Table x, Segment y
		23	BCC
		24	0x10

► Byte 8: Table number

Example: 0x15 for Table 21: Process data, right-hand expansion modules

► Byte 9: Segment number

Example: 0x00 for Segment 0, in Byte 4 state of outputs o0 ... o7 of the right-hand expansion modules



INFORMATION

If the requested segment is unavailable, the Segment No. is set to 255.

Example:

Request: Table No. 20 Segment No. 45

Response: Table No. 20 Segment No. 255

Byte 10 ... 22 = 0

5.8.7 Sending virtual inputs and requesting the virtual output data from PNOZmulti 2 (see fieldbus communication)

Request 0x5C

The communication partner uses this request to send input data to the PNOZmulti and request output data from the PNOZmulti (see section entitled [Basics \[17\]](#)).

As with fieldbus communication, 32 Bytes each are reserved for input and output data (Byte 8 – 39); they are updated approx. every 15 ms.

Byte	Request	Byte	Response
0	0x05	0	0x05
1	0x15	1	0x15
2	0x00	2	0x00
3	0x26	3	0x26
4	0x5C	4	0xDC
5	Control Byte	5	Control Byte
6	0x00	6	Reserved
7	0x00	7	0x00
8	Input Byte 0	8	Output Byte 0
9	Input Byte 1	9	Output Byte 1
10	Input Byte 2	10	Output Byte 2
...
39	Input Byte 31	39	Output Byte 31
40	0x00	40	Reserved
41	BCC	41	BCC
42	0x10	42	0x10

5.8.7.1 Input data (to the PNOZmulti)

Input Byte	Content
0	i7 to i0
1	i15 to i8
2	i23 to i16
3	i31 to i24
4	i39 to i32
5	i47 to i40
6	i55 to i48
7	i63 to i56
8	i71 to i64
9	i79 to i72
10	i87 to i80

Input Byte	Content
11	i95 to i88
12	i103 to i96
13	i111 to i104
14	i119 to i112
15	i127 to i120
16	0x00
17	Table number
18	Segment number
19	0x00
20	0x00
21	0x00
22	0x00
23	0x00
24	0x00
25	0x00
26	0x00
27	0x00
28	0x00
29	0x00
30	0x00
31	0x00

The virtual inputs are set and a specific table/segment is requested in the input data.



INFORMATION

If a fieldbus module is configured, virtual inputs cannot be activated via the communication module.

5.8.7.2

Output data (from the PNOZmulti)

Output Byte	Content
0	o7 to o0
1	o15 to o8
2	o23 to o16
3	o31 to o24
4	o39 to o32
5	o47 to o40
6	o55 to o48

Output Byte	Content
7	o63 to o56
8	o71 to o64
9	o79 to o72
10	o87 to o80
11	o95 to o88
12	o103 to o96
13	o111 to o104
14	o119 to o112
15	o127 to o120
16	LED status
17	Table number
18	Segment number
19	Payload Byte 0
20	Payload Byte 1
21	Payload Byte 2
22	Payload Byte 3
23	Payload Byte 4
24	Payload Byte 5
25	Payload Byte 6
26	Payload Byte 7
27	Payload Byte 8
28	Payload Byte 9
29	Payload Byte 10
30	Payload Byte 11
31	Payload Byte 12

The content of the tables and segments is described in detail in the section entitled [Service data \[86\]](#).

5.8.7.3 Control Byte (Byte 5)

Bit 0 ... 2 of the Control Byte contain a watchdog function.

If no virtual inputs are sent by a communications partner within the defined watchdog time (watchdog timeout), the PNOZmulti sets the virtual inputs to "0".

Control Byte 5:

Read/Write	Delayed Response	Error Message	Reserved	Reserved	W-Timer Bit 2	W-Timer Bit 1	W-Timer Bit 0
------------	------------------	---------------	----------	----------	---------------	---------------	---------------

► Bit 0 - 2: Watchdog Timeout

Watchdog Timer Bit 2	Watchdog Timer Bit 1	Watchdog Timer Bit 0	Watchdog Timeout
0	0	0	Timer deactivated
0	0	1	100 ms
0	1	0	200 ms
0	1	1	500 ms
1	0	0	1 s
1	0	1	3 s
1	1	0	5 s
1	1	1	10 s

- ▶ Bit 3 and 4: Reserved
- ▶ Bit 5 Error Message: Error message
If the bit is "1", an error stack entry is generated when the watchdog is triggered.
- ▶ Bit 6 Delayed Response: Delayed response
If the bit is "1", the response (send virtual outputs) is sent after a delay of one cycle.
- ▶ Bit 7: Read/Write: Read/write access
If the bit is "1", write protection is active; data cannot be overwritten. With read access, the watchdog timer is not reset, Bit 6 Delayed Response is deactivated.



INFORMATION

The watchdog functions of the requests 0x14 segment 0x02 and 0x5C use the same watchdog timer. In other words, the watchdog timer is reset if either request is called.



INFORMATION

To test if the watchdog is active, set a virtual input continuously to "1". If this input becomes "0" after the set watchdog timeout has elapsed, then the watchdog is active.

5.9 Troubleshooting

5.9.1 Request format does not meet specifications

If the request format does not meet the specifications, the PNOZmulti 2 sends the following response:

Byte	Response
0	0x05
1	0x02
2	0x00

Byte	Response
3	0x02
4	0x00
5	0x02
6	0x10

5.9.2 Error while executing a request

If an error occurs while executing a request, the PNOZmulti 2 sends the following response:

Byte	Response
0	0x05
1	0x15
2	0x00
3	0x05
4	Error Code
5	0x00
6	0x00
7	0x00
8	BCC
9	0x10

Error Codes (Byte 4):

- ▶ 0x62: Request's BCC is incorrect
- ▶ 0x63: Request cannot be executed
- ▶ 0x64: Request unknown
- ▶ 0x67: Table or segment number unavailable
- ▶ 0x68: PNOZmulti 2 not ready


6 Modbus/TCP

6.1 System requirements

- ▶ PNOZmulti Configurator: From Version 9.0.0
- ▶ PNOZ m B0 + PNOZ m ES ETH
- ▶ PNOZ m B1

6.2 Modbus/TCP - Basics

Modbus/TCP is an open fieldbus standard published by the user organisation MODBUS-IDA.

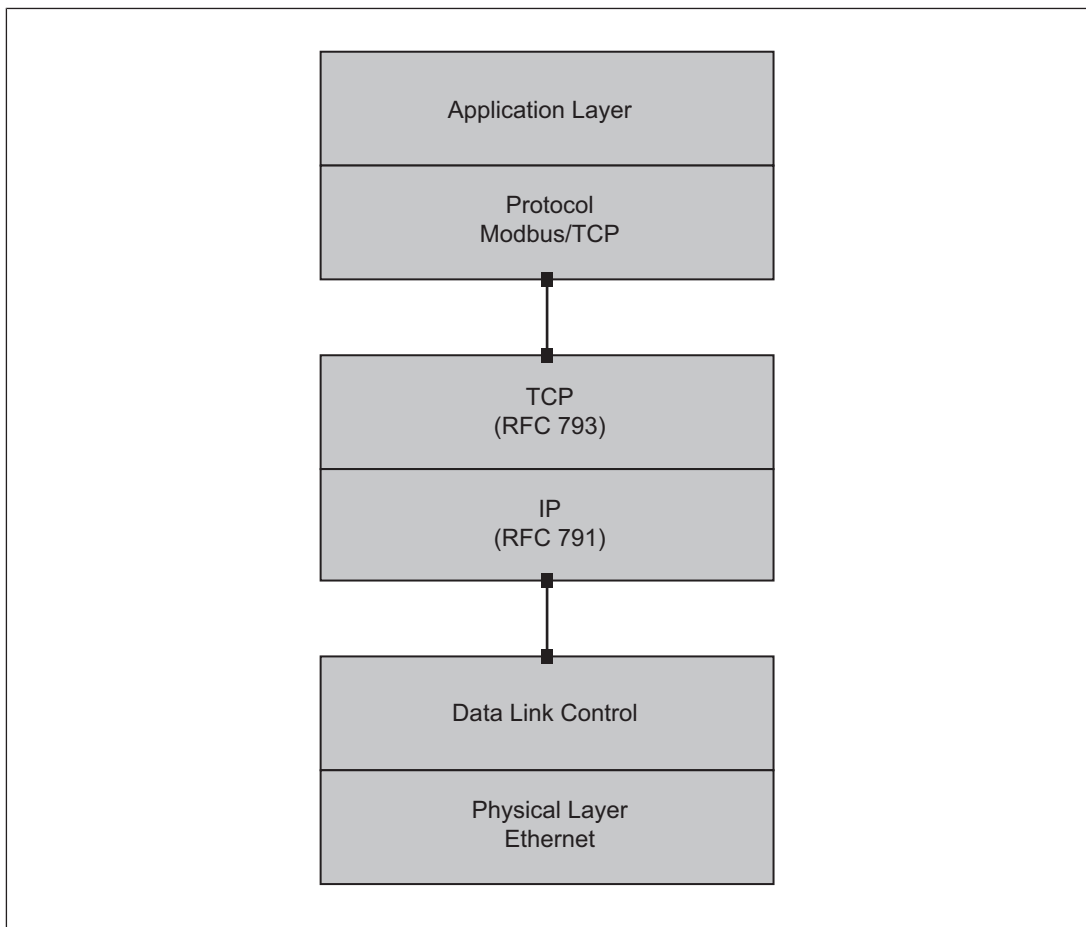

Modbus/TCP is a protocol based on Industrial Ethernet (TCP/IP over Ethernet). It is one of the protocols with Client/Server communication. Data is transferred via a request/response mechanism using function codes (FC).


Modbus/TCP is connection-oriented, i.e. before the payload is transferred via Modbus/TCP, a connection must first be established between two Modbus/TCP interfaces. The initiator of the connection is called the Client. The communications partner with which the Client establishes the connection is called the Server. Whether a connection on a device assumes the role of Client or Server is defined when a connection is configured. As a result, the Server/Client role only applies for that specific connection.

6.3 Modbus/TCP with PNOZmulti 2

On PNOZmulti 2, an interface for communication via Modbus/TCP is provided via the communication module PNOZ m ES ETH or the integrated interface of the PNOZ m B1.

A PNOZ m ES ETH can manage a max. of 8 Modbus/TCP connections. The PNOZmulti 2 is always the connection Server. The connection Clients may be various devices, e.g. PC (PNOZmulti Configurator), controller, display unit. They can access the configurable control system PNOZmulti 2 simultaneously.

The virtual I/Os plus all the information that is requested during fieldbus communication are contained in data areas. The data is accessed directly. It's no longer necessary to switch via table/segment.

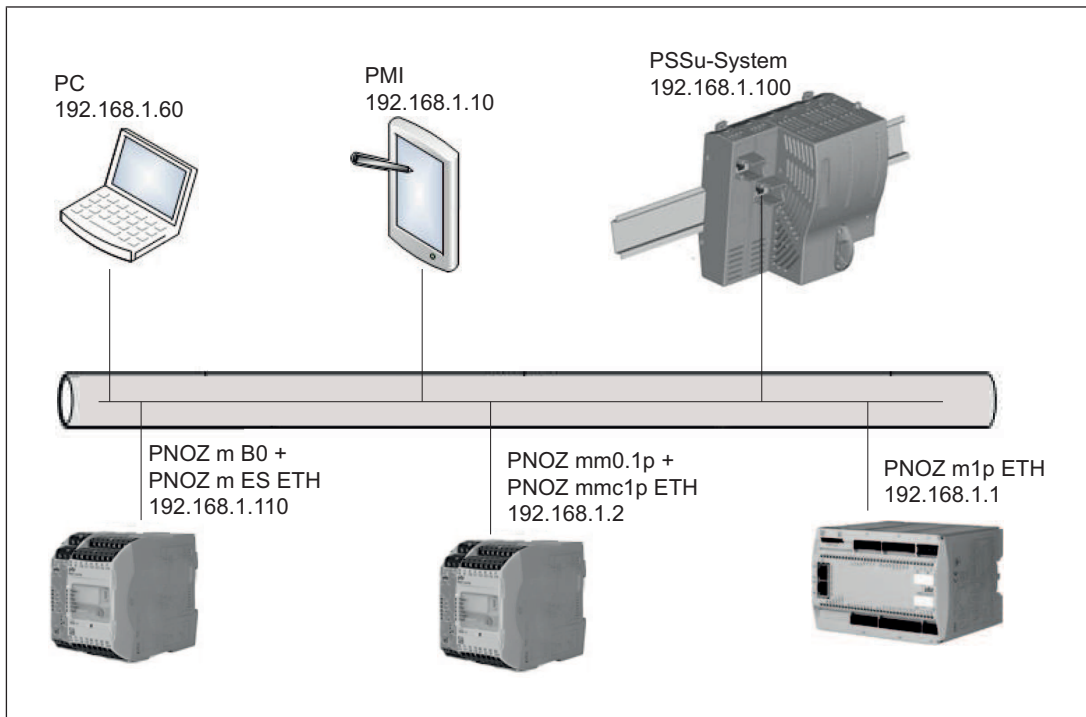

The configurations required for Modbus/TCP are fully pre-configured in the operating system of the PNOZmulti 2. Only the virtual inputs and outputs need to be activated in the PNOZmulti Configurator (see PNOZmulti Configurator Online Help).

On a configurable control system PNOZmulti 2, port number "502" is fixed as the default for data exchange via a Modbus/TCP connection. It is not displayed in PNOZmulti Configurator and cannot be modified.

6.4 Data areas

6.4.1 Overview

A configurable control system PNOZmulti 2 supports the following Modbus/TCP data areas:

Data area	Modbus syntax	Example
Coils (Bit) 0x00000 ... 0x65535 [read/write]	0x[xxxxx]	0x00031 (virtual input i31)
Discrete Inputs (Bit) 1x00000 ... 1x65535 [read only]	1x[xxxxx]	1x08193 (virtual output o1)
Input Register (Word/16 Bits) 3x00000 ... 3x65535 [read only]	3x[xxxxx]	3x00002 (virtual inputs 32 ... 47)
Holding Register (Word/16 Bits) 4x00000 ... 4x65535 [read/write]	4x[xxxxx]	4x04108 (project name, 1st character)



INFORMATION

Addressing for PNOZmulti systems starts at "0". On devices from other manufacturers, addressing can start at "1". Please refer to the operating manual provided by the relevant manufacturer.

Data can be accessed via various Modbus/TCP data areas.

The tables below show the relationship between Modbus/TCP data areas and the content of the data areas.

6.4.2 Function codes

The following function codes (FC) are available for communication with the PNOZmulti 2 via Modbus/TCP:

Function code	Function	
FC 01	Read Coils	The connection Client reads bit data from the connection Server, data length ≥ 1 Bit, content: Input/output data (data received from 0x)
FC 02	Read Discrete Input	The connection Client reads bit data from the connection Server, data length ≥ 1 Bit, content: Input/output data (data received from 1x)
FC 03	Read Holding Register	The connection Client reads word data from the connection Server, data length ≥ 1 Word, content: Diagnostic word (data received from 4x)

Function code	Function	
FC 04	Read Input Register	The connection Client reads word data from the connection Server, data length ≥ 1 Word, content: Diagnostic word (data received from 3x)
FC 05	Write Single Coil	The connection Client writes to one bit datum in the connection Server, data length = 1 Bit, content: Input data (send data to 0x)
FC 06	Write Single Register	The connection Client writes to one word datum in the connection Server, data length = 1 Word, content: Input data (send data to 4x)
FC 15	Write Multiple Coils	The connection Client writes to multiple bit data in the connection Server, data length ≥ 1 Bit, content: Input data (send data to 0x)
FC 16	Write Multiple Registers	The connection Client writes to multiple word data in the connection Server, data length ≥ 1 Word, content: Input data (send data to 4x)
FC 23	Read/Write Multiple Registers	The connection Client reads and writes multiple word data within a telegram (receive data from 3x and send data to 4x)

Error codes on Modbus/TCP

Code	Name	Description
01	Invalid function	The function code in the enquiry is not supported.
02	Invalid data address	The data address received in the enquiry is outside the memory range.
03	Invalid data	Invalid data requested.

6.4.3 Data transfer limits

The following table contains information on the data length per telegram that is supported:

Data transfer		Data length per telegram
Read data (Bit)	FC 01 (Read Coils)	1 ... 2000
	FC 02 (Read Discrete Inputs)	
Read data (Bit)	FC 05 (Write Single Coil)	1 Bit
	FC 15 (Write Multiple Coils)	1 ... 1968

Data transfer		Data length per telegram
Read data (Word)	FC 03 (Read Holding Registers)	1 ... 125
	FC 04 (Read Input Register)	
Write data (Word)	FC 06 (Write Single Register)	1 Word
	FC 16 (Write Multiple Registers)	1 ... 123 Words
Read and write data (Word)	FC 23 (Read/Write Multiple Registers)	Read 1 ... 125 Words Write 1 ... 121 Words



INFORMATION

There may be some restrictions in data length, depending on the device that is used. Please refer to the information stated in the operating manual of the device you are using.

6.4.4 Input and output data, watchdog

The table below describes the Modbus/TCP data areas that contain the current state of the virtual inputs of the PNOZmulti 2. These are the virtual inputs that can be set by the user.

Relevant areas for the data are defined in each Modbus/TCP data area (Coils (0x), Discrete Inputs (1x), Input Register (3x), Holding Register (4x)). Read/write access will depend on the Modbus/TCP data area.

Register (3x, 4x)	Coil/ Discrete Input (0x, 1x)	Content	High Byte	Low Byte
0	15... 0	State of virtual inputs 0...15	i15...i8	i7...i0
1	31... 16	State of virtual inputs 16...31	i31...i24	i23...i16
2	47...32	State of virtual inputs 32...47	i47...i40	i39...i32
3	63...48	State of virtual inputs 48...63	i63...i56	i55...i48
4	79... 64	State of virtual inputs 64...79	i79...i72	i71...i64
5	95...80	State of virtual inputs 80...95	i95...i88	i87...i80
6	111...96	State of virtual inputs 96...111	i111...i104	i103...i96
7	127...112	State of virtual inputs 112...127	i127...i120	i119...i112

The table below describes the Modbus/TCP data areas that contain the states of the virtual outputs of the PNOZmulti 2.

Relevant areas for the data are defined in the Modbus/TCP data areas Discrete Inputs (1x) and Input Register (3x). Read access is available to these data areas.

Register (3x)	Discrete Input (1x)	Content	High Byte	Low Byte
512	8207...8192	State of virtual outputs 0...15	o15...o8	o7...o0
513	8223...8208	State of virtual outputs 16...31	o31...o24	o23...o16
514	8239...8224	State of virtual outputs 32...47	o47...o40	o39...o32
515	8255...8240	State of virtual outputs 48...63	o63...o56	o55...o48
516	8271...8256	State of virtual outputs 64...79	o79...o72	o71...o64
517	8287...8272	State of virtual outputs 80...95	o95...o88	o87...o80
518	8303...8288	State of virtual outputs 96...111	o111...o104	o103...o96
519	8319...8304	State of virtual outputs 112...127	o127...o120	o119...o112

A watchdog can be activated in Control Register 255.

If no input bits are set by a Modbus/TCP subscriber within the preset time, the PNOZmulti 2 will set the input bits to "0".

The table below describes the Modbus/TCP data areas for the watchdog.

A relevant area for the watchdog is defined in each Modbus/TCP data area (Coils (0x), Discrete Inputs (1x), Input Register (3x), Holding Register (4x)). Read/write access will depend on the Modbus/TCP data area.

Register (3x, 4x)	Coil/ Discrete Input (0x, 1x)	Content	High Byte	Low Byte
255	4095...4080	Control Register	See table below	

High Byte	WD-Trig-ger	Error Mes-sage	Reserved	Reserved	Reserved	W-Timer Bit 2	W-Timer Bit 1	W-Timer Bit 0
Low Byte	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved	Reserved

Bit 15 "Watchdog Trigger": The watchdog can be triggered by setting Bit 15 constantly to "1", or by a Client writing in the input area of the 128 inputs. The state of the bit when reading is undefined. A 1 or a 0 can be read.

Bit 14 "Error Message": If this bit is set, an error stack entry is generated when the watchdog is triggered.

Bit 10 ... 8 "WD Timer": If the set time for the watchdog is set, then Bit 15 must be set, or become set, at the same time.

Watchdog Timer Bit 2	Watchdog Timer Bit 1	Watchdog Timer Bit 0	Watchdog Time
0	0	0	Timer deactivated
0	0	1	100 ms
0	1	0	200 ms
0	1	1	500 ms
1	0	0	1 s
1	0	1	3 s
1	1	0	5 s
1	1	1	10 s



INFORMATION

To check whether the watchdog has been triggered, set a virtual input permanently to "1".

If the corresponding input in the PNOZmulti 2 is "0", then the watchdog has been triggered.

6.4.5 Allocation table of the virtual inputs and outputs

Addressing the virtual inputs (coils) in Registers 0 to 7.

	Virtual inputs															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
0	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
1	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
2	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
3	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48
4	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64
5	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80
6	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97	96
7	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113	112

Allocation of virtual inputs i0, i1 ... i127 to the Bits in Registers 0 to 7

Addressing the virtual outputs (discrete inputs) in Registers 512 to 519.

	Virtual outputs															
	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
512	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
513	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
514	47	46	45	44	43	42	41	40	39	38	37	36	35	34	33	32
515	63	62	61	60	59	58	57	56	55	54	53	52	51	50	49	48
516	79	78	77	76	75	74	73	72	71	70	69	68	67	66	65	64
517	95	94	93	92	91	90	89	88	87	86	85	84	83	82	81	80
518	111	110	109	108	107	106	105	104	103	102	101	100	99	98	97	96
519	127	126	125	124	123	122	121	120	119	118	117	116	115	114	113	112

Allocation of virtual outputs o0, o1 ... o127 to the Bits in Registers 512 to 519.

6.4.6 Service data

The service data for Modbus/TCP is divided into the following data areas:

- ▶ Process data - Base unit and expansion modules
- ▶ Process data - Fieldbus module and communication module
- ▶ Diagnostic words
- ▶ Enable elements
- ▶ Project data
- ▶ Device data

The content of the version and device-dependent service data and addressing are described in the chapter entitled [Service data \[86\]](#).

6.4.7 LEDs

The table below describes the Modbus/TCP data areas that contain the LED statuses.

Relevant areas for the data are defined in the Modbus/TCP data areas Discrete Inputs (1x) and Input Register (3x). Read access is available to these data areas.

Register (3x)	Discrete Input (1x)	Contents	High Byte	Low Byte
511	8176	Status of LEDs	Reserved	PNOZmulti 2 LEDs

The LED status of the base unit PNOZ m B0 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN is lit
- ▶ Bit 5-7: Reserved

The LED status of the base unit PNOZ m B1 can be requested directly as follows

- ▶ Bit 0 = 1: LED OFAULT is lit or flashes
- ▶ Bit 1 = 1: LED IFAULT is lit or flashes
- ▶ Bit 2 = 1: LED FAULT is lit or flashes
- ▶ Bit 3 = 1: LED DIAG is lit or flashes
- ▶ Bit 4 = 1: LED RUN FS is lit
- ▶ Bit 5: Reserved
- ▶ Bit 6 = 1: LED RUN ST is lit
- ▶ Bit 7: Reserved

6.4.8 Updating the data areas

Data is updated with varying priority.

The table below shows the typical update cycles for the various data.

Content	Typ. update cycle
Virtual inputs/outputs	20 ms
Project and device data	Once during initialisation
State of the inputs/outputs from the base unit and expansion modules	320 ms
LED status	1000 ms
Number of elements that can store a state	Once during initialisation
Element enable	320 ms
Diagnostic words	1000 ms
Current state of the virtual inputs	1000 ms



INFORMATION


The update time may increase if there are additional TCP/IP connections (e.g. PNOZmulti Configurator, PMI, control system) on the PG port (Port 9000).

6.5 Examples of Clients and Servers

The following subscribers communicate via Modbus/TCP or Ethernet:

- ▶ Devices with Server role:
 - PNOZ m ES ETH
 - PNOZ m1p ETH
 - PNOZ mmc1p ETH
- ▶ Devices with Client role:
 - PSSu system in the automation system PSS 4000
 - Operator terminal PMI
- ▶ PC as programming device for PNOZmulti 2, PSSu system and PMI

The PSSu system and the operator terminal PMI access the configurable control system PNOZmulti 2 (Server role) simultaneously.

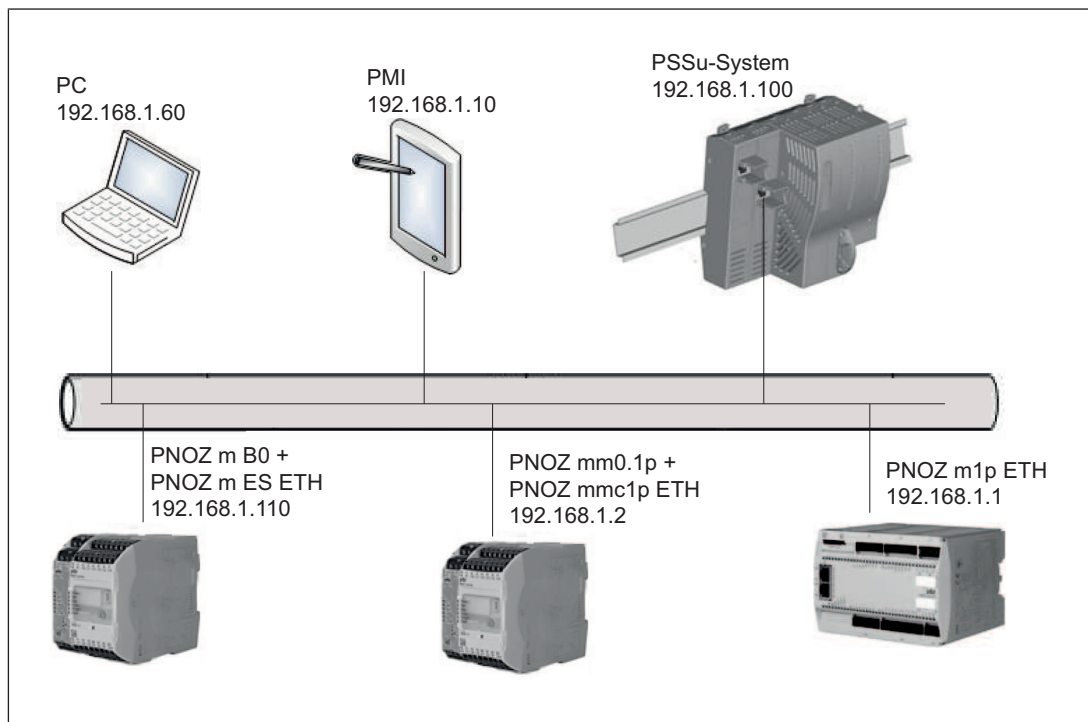

7 Diagnostic word

7.1 Introduction

A diagnostic word can be read out for those elements in the PNOZmulti Configurator that can store a status. The diagnostic word contains information on a particular element, such as:

- ▶ Operating states (e.g. safety gate was opened)
- ▶ Error messages (e.g. N/C contact failed to switch or switched too late)

The content of the diagnostic words on the individual elements can be displayed and edited in the element in the PNOZmulti Configurator.

7.2 Elements with diagnostic word

The diagnostic word is accessed by activating an Element ID. The permitted value range for the Element ID is 1 ... 100. Elements with an element ID include:

- ▶ Function elements
 - E-STOP and safety gate
 - Safety gate with guard locking
 - Light curtain
 - Enabling switch
 - Foot switch
 - Two-hand buttons
 - Operating mode selector switch
- ▶ Analogue elements
 - Analogue input
 - Plausibility
 - Mathematical operations
 - Scaling
 - Threshold value monitoring
 - Range monitoring
- ▶ Logic Elements
 - RS flipflop
 - Start element
- ▶ Press elements
 - Light curtain
- ▶ Muting elements
 - Sequential muting
 - Parallel muting
 - Cross muting

- ▶ Output elements
 - Output elements with a feedback loop
 - Safety valve

7.3 Structure of the diagnostic word

The diagnostic word has 16 Bits:

Bit 15	Bit 14	...	Bit 2	Bit 1	Bit 0
--------	--------	-----	-------	-------	-------

If the diagnostic word = 0, the output of the respective element = 1. The element was enabled. (Exceptions: on various function elements, the states of the inputs are evaluated). Otherwise, at least one of the bits from 0 ... 15 of the diagnostic word is set and can be evaluated,

e.g.: Bit 1 on a safety gate element: 1:00000000 00000010

Key: Safety gate was opened

7.4 Evaluate diagnostic word

▶ Evaluation in the user program

One bit from the diagnostic word can be linked further within the PNOZmulti 2 user program. The user selects a bit within a diagnostic word and polls it. An LED can be driven in this way, for example.

▶ Evaluation using PVIS expanded diagnostics


The bits of a diagnostic word can be configured for PVIS expanded diagnostics in the PNOZmulti Configurator. A "Safety Device" diagnostic type is assigned to an element. It contains the diagnostic word as an event message. An event message including remedies (actions) is defined in the diagnostic type for each event, i.e. for every potential element state. The event messages and actions can also be supplemented through additional information, which is helpful during diagnostics (equipment identifier, location description). The event messages can be displayed on the PMImicro diag, for example.




INFORMATION


Detailed information on PVIS expanded diagnostics can be found in the PNOZmulti Configurator's online help.

▶ Evaluation via the RS232/Ethernet interfaces

The diagnostic word is requested via the communication module using the element's ID (see also [ETH/RS232 interfaces](#) [ 53]).

▶ Evaluation via a fieldbus

The diagnostic word is requested via a connected fieldbus module, via the element's ID (see also [Fieldbus Modules](#) [ 17]).

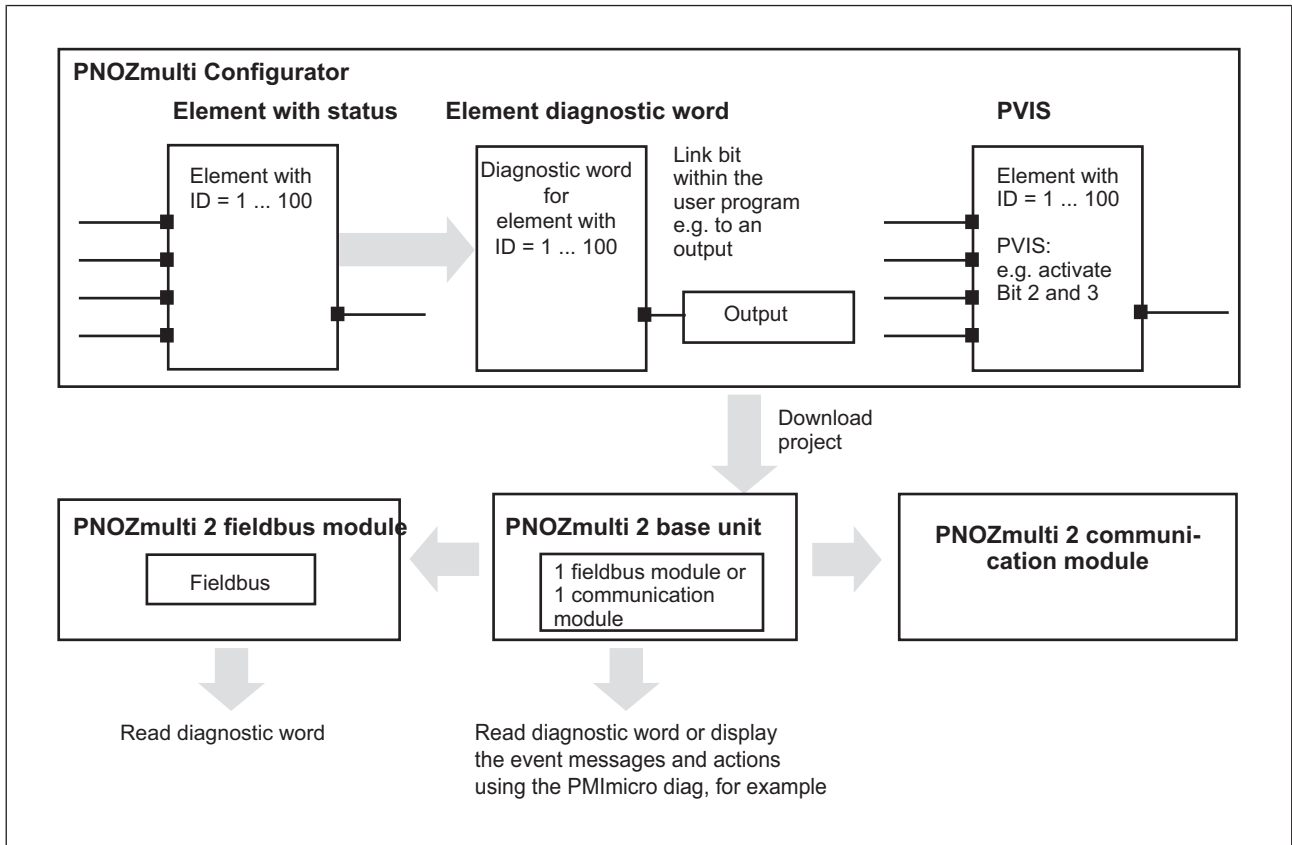

7.4.1 Example - Evaluate diagnostic word of a safety gate

Safety gate with Element ID = 5:

- ▶ Dual-channel
- ▶ Manual reset
- ▶ Start-up test

Evaluation of the following bits:

- ▶ Bit 2 = 1: Safety gate is ready for reset. The reset button for manual reset must be operated.
- ▶ Bit 8 = 1: Error in the test pulse wiring

PNOZmulti Configurator	
	0000 0000 0000 0000 Enable issued
	0000 0000 0000 0001
	0000 0000 0000 0010 Safety gate has been opened
Bit 2	0000 0000 0000 0100 Safety gate is ready for reset
	0000 0000 0000 1000 Function test must be performed
	0000 0000 0001 0000
	0000 0000 0010 0000 N/C contact failed to switch or switched too late
	0000 0000 0100 0000
	0000 0000 1000 0000
Bit 8	0000 0001 0000 0000 Error in the test pulse wiring
	0000 0010 0000 0000
	0000 0100 0000 0000
	0000 1000 0000 0000
	0001 0000 0000 0000 There is a 1 signal at input 1.
	0010 0000 0000 0000 There is a 1 signal at input 2.
	0100 0000 0000 0000 There is a 1 signal at input 3.
	1000 0000 0000 0000 There is a 1 signal at input 4.


Evaluate Bit 2 of the diagnostic word logic element for ID = 5 within the user program
Poll diagnostic word for ID = 5 via interface
Poll diagnostic word for ID = 5 via fieldbus module
Display Bit 2 and 8 of the safety gate function element for ID = 5 (e.g. PMImicro diag)


8 Service data

The service data of the configurable control system PNOZmulti 2 is divided into various data ranges. The service data is addressed differently, based on the fieldbus. They are fully available after the control system has been in "Run" state for three seconds.

The content of the service data is described generally in the sections below. This is followed by the fieldbus-specific addressing.

Data ranges:

	PNOZ m B0	PNOZ m B1
Process data for base unit and expansion modules:  88]		
Base unit	✓	✓
Expansion modules right 1 ... 6	✓	✓
Expansion modules right 7 ... 12	-	from V1.1
Expansion modules left 1 ... 4	✓	✓
ST expansion modules	-	from V1.1 ^[1]
▶ State of safe inputs i0 ... i31	✓	✓
▶ State of safe outputs o0 ... o31	✓	✓
▶ Status of system LEDs	✓	✓
▶ Status of IO LEDs	✓	✓
▶ Status of the expanded inputs i32 ... i127 when using the module PNOZ m EF SafetyNET	from V2.3	from V1.2
▶ Advanced data	from V2.3 ^[2]	from V1.1 ^[2]
Process data: Fieldbus and communication module	✓	✓
▶ State of virtual standard inputs i0 ... i127	✓	✓
▶ State of virtual standard outputs o0 ... o127	✓	✓
▶ Status of system LEDs	✓	✓
Connected devices		
▶ Device connection data PITreader	-	from V1.5 ^[3]
▶ Device connection Visu Panel	-	from V1.6 ^[3]
Diagnostic words	✓	✓
▶ Diagnostics	✓	✓
Enable elements	✓	-
▶ Element IDs	✓	-
Project data	✓	✓
▶ Check sums	✓	✓
▶ Date	✓	✓

	PNOZ m B0	PNOZ m B1
▶ Project name	✓	✓
Device data [ 150]		
Base unit	✓	✓
Expansion modules right 1 ... 6	✓	✓
Expansion modules right 7 ... 12	-	from V1.1
Expansion modules left 1 ... 4	✓	✓
ST expansion modules	-	from V1.1
▶ Product	✓	✓
▶ Firmware	✓	✓
▶ Operating hours	✓	✓

[1] Minimum requirements for addressing the process data: ST expansion modules

Data	PNOZ m B1 V1.1
Tables	✓
Modbus Register	✓
SDOs	Fieldbus modules from V2.0
Profinet Records	
Ethernet IP instances	


[2] Minimum requirements for addressing the process data: Advanced data

Data	PNOZ m B0 V2.3	PNOZ m B1 V1.1
Tables	✓	✓
Modbus Register	PNOZ m ES ETH V1.1	✓
SDOs	Not supported	Fieldbus modules from V2.0
Profinet Records		
Ethernet IP instances		

[3] Minimum requirements for addressing the device connections

Data	PNOZ m B1 from V1.5
Tables	✓
Modbus Register	✓
SDOs	Fieldbus modules from V2.0
Profinet Records	
Ethernet IP instances	

The following example illustrates the procedure for selecting certain service data. In the example, the device data for the base unit is selected with the fieldbus module PROFINET.

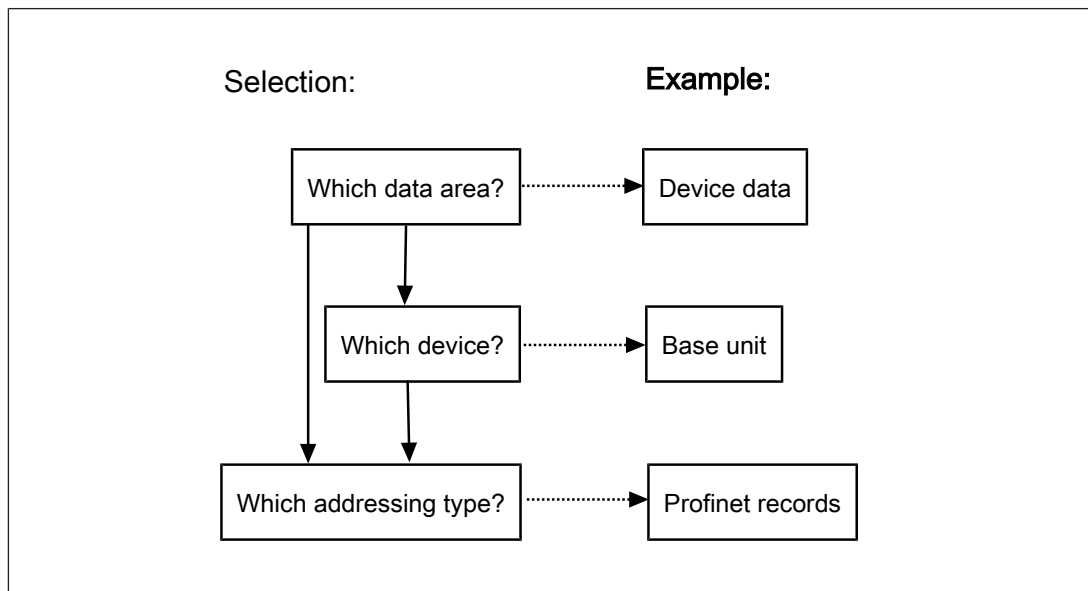

Data area: [Device data](#)
 Device: [Device data addressing on base unit](#)
 Addressing type: PROFINET Records



INFORMATION

The service data is only updated piecemeal in each cycle by the PNOZmulti 2. Updating all of the data can take up to 500 ms. An exception is data requested in table form. This is updated fully in each cycle.

8.1 Process data: Base unit and expansion modules

The process data of the base unit and expansion modules consists of 36 Bytes and contains the following information:


- ▶ State of the inputs and outputs
- ▶ The status of the system LED for
 - supply voltage,
 - Diagnostics
- ▶ State of the inputs and outputs, which is displayed on the device.

8.1.1 State of inputs i0 ... i31

Please note:

Does not apply for the fieldbus module PNOZ m EF EtherCAT FSoE.

Byte	Bit 7	...						Bit 0
0	i7	i6	i5	i4	i3	i2	i1	i0
1	i15	i14	i13	i12	i11	i10	i9	i8
2	i23	i22	i21	i20	i19	i18	i17	i16
3	i31	i30	i29	i28	i27	i26	i25	i24

Fieldbus-specific addressing is described in the chapter entitled [Process data addressing](#) [ 98].

Status of the expanded inputs i32 ... i127 when using the module PNOZ m EF SafetyNET

Byte	Bit 7	...						Bit 0
12	i39	i38	i37	i36	i35	i34	i33	i32
13	i47	i46	i45	i44	i43	i42	i41	i40
14	i55	i54	i53	i52	i51	i50	i49	i48
15	i63	i62	i61	i60	i59	i58	i57	i56
16	i71	i70	i69	i68	i67	i66	i65	i64
17	i79	i78	i77	i76	i75	i74	i73	i72
18	i87	i86	i85	i84	i83	i82	i81	i80
19	i95	i94	i93	i92	i91	i90	i89	i88
20	i103	i102	i101	i100	i99	i98	i97	i96
21	i111	i110	i109	i108	i107	i106	i105	i104
22	i119	i118	i117	i116	i115	i114	i113	i112
23	i127	i126	i125	i124	i123	i122	i121	i120

8.1.2 State of outputs o0 ... o31

Please note:

Does not apply for the fieldbus module PNOZ m EF EtherCAT FSoE.

Byte	Bit 7	...						Bit 0
4	o7	o6	o5	o4	o3	o2	o1	o0
5	o15	o14	o13	o12	o11	o10	o9	o8
6	o23	o22	o21	o20	o19	o18	o17	o16
7	o31	o30	o29	o28	o27	o26	o25	o24

Fieldbus-specific addressing is described in the chapter entitled [Process data addressing](#) [98].

8.1.3 Status of system LEDs

Status of the system LEDs for supply voltage and base unit diagnostics (see also [Assignment of system and I/O-LEDs](#) [91])

Byte	Bit 7	...	Bit 4	Bit 3	...	Bit 0
8	System LED 1			System LED 0		
9	System LED 3			System LED 2		
10	System LED 5			System LED 4		
11	Reserved					

LED status	4 Bit coding
Off	0x0
On	0xF
Flashes	0x3

Fieldbus-specific addressing is described in the chapter entitled [Process data addressing](#) [98].

8.1.4 Status of IO LEDs

Status of the IO LEDs on the expansion modules to the right of the base unit (see also [Assignment of system and I/O-LEDs](#) [91])


Byte	Bit 7	...	Bit 4	Bit 3	...	Bit 0
12	I/O LED 1			I/O LED 0		
13	I/O LED 3			I/O LED 2		
14	I/O LED 5			I/O LED 4		
15	I/O LED 7			I/O LED 6		
16	I/O LED 9			I/O LED 8		
17	I/O LED 11			I/O LED 10		
18	I/O LED 13			I/O LED 12		
19	I/O LED 15			I/O LED 14		
20	I/O LED 17			I/O LED 16		
21	I/O LED 19			I/O LED 18		
22	I/O LED 21			I/O LED 20		
23	I/O LED 23			I/O LED 22		
24	I/O LED 25			I/O LED 24		

Byte	Bit 7	...	Bit 4	Bit 3	...	Bit 0
25	I/O LED 27			I/O LED 26		
26	I/O LED 29			I/O LED 28		
27	I/O LED 31			I/O LED 30		
28	Reserved					
...	...					
35	Reserved					
LED status			4 Bit coding			
Off			0x0			
On			0xF			
Flashes			0x3			


Fieldbus-specific addressing is described in the chapter entitled [Process data addressing](#) [98].

8.1.5 Assignment of system and I/O-LEDs

Assignment of the I/O LEDs and system LEDs to the LEDs on the base unit:

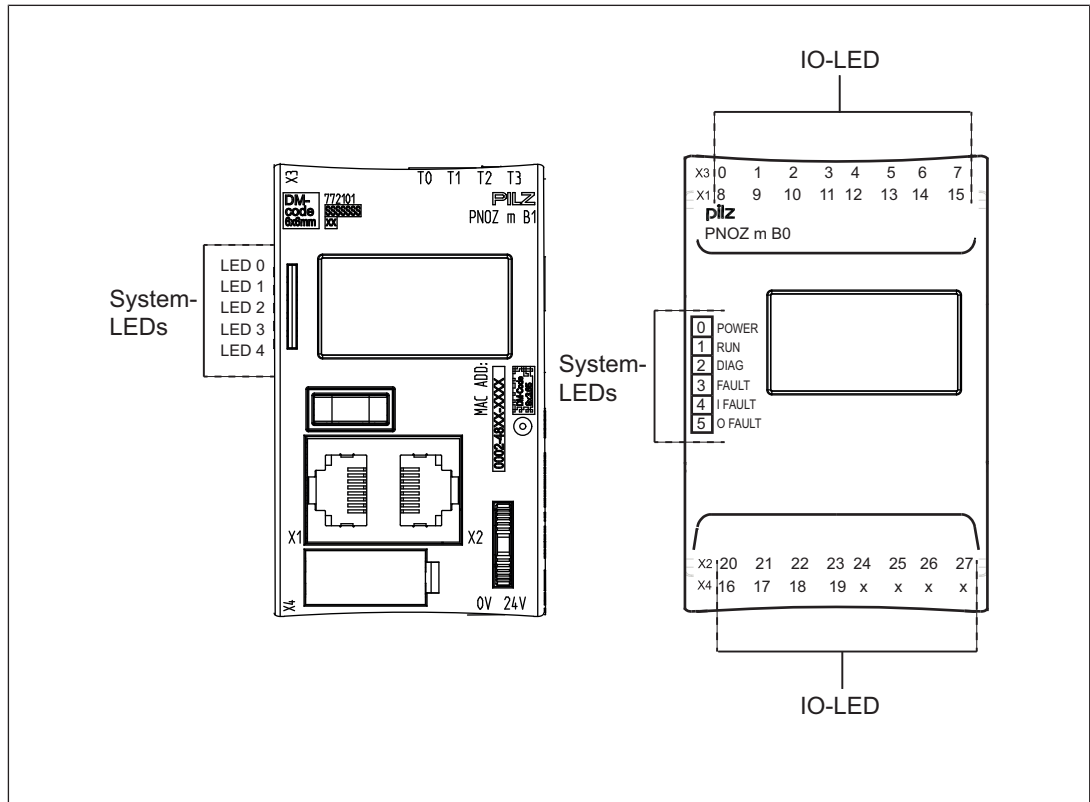

Assignment of the I/O LEDs and system LEDs to the LEDs on the expansion modules:

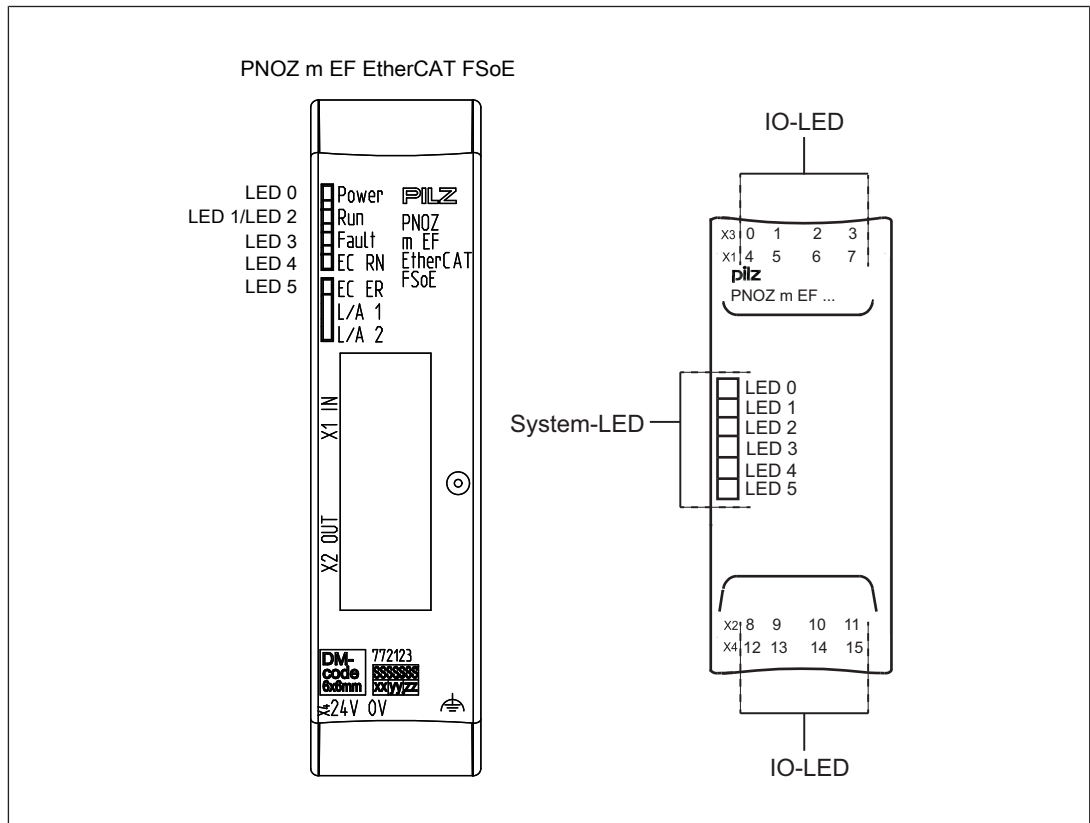

8.1.6 Advanced data

Up to six additional data values are available for the expansion modules. Depending on the type of expansion module, operating data such as the axis speed of a motion monitoring module can be requested, for example.

The different types of operating data are each identified by a unique data ID. A data word consists of 4 Bytes.

The Byte sequence is Big Endian, that is, the most significant Byte is transmitted first.

The following data can be requested:

Data ID	Description	Unit	Data type
0xFF	Invalid value		
0x05	Encoder frequency Axis 1	mHz	unsigned int
0x06	Position Axis 1	Increments	unsigned int
0x07	Encoder frequency Axis 2	mHz	unsigned int
0x08	Position Axis 2	Increments	unsigned int
0x40	Analogue Input I0	mA	float IEEE 754
0x41	Analogue Input I1	mA	float IEEE 754
0x42	Analogue Input I2	mA	float IEEE 754
0x43	Analogue Input I3	mA	float IEEE 754

Data ID	Description	Unit	Data type
0x50	1st numerical value from analogue diagnostic element		float IEEE 754
0x51	2nd numerical value from analogue diagnostic element		float IEEE 754
0x52	3rd numerical value from analogue diagnostic element		float IEEE 754
0x53	4th numerical value from analogue diagnostic element		float IEEE 754
0x54	5th numerical value from analogue diagnostic element		float IEEE 754
0x55	6th numerical value from analogue diagnostic element		float IEEE 754

All other values are reserved.

Operating data		Segment
Information	Byte	
Data ID 1	0 ... 1	1st segment
Data value	2 ... 5	
Data ID 2	6 ... 7	
Data value	8 ... 11	
Data ID 3	12 ... 13	2nd segment
Data value	14 ... 17	
Data ID 4	18 ... 19	
Data value	20 ... 23	
Data ID 5	24 ... 25	3rd segment
Data value	26 ... 29	
Data ID 6	30 ... 31	
Data value	32 ... 35	

8.1.7 Process data, left-hand expansion modules

8.1.7.1 Process data PNOZ m EF PDP Link (from configured Version 1.x)

Byte	Bit7	...						Bit0	Module no.	Table/ Segment (e.g. slot 1)
0	i7	i6	i5	i4	i3	i2	i1	i0	PDPModule 1	22/0
1	i7	i6	i5	i4	i3	i2	i1	i0	PDPModule 2	22/0
2	i7	i6	i5	i4	i3	i2	i1	i0	PDPModule 3	22/0

Byte	Bit7	...						Bit0	Module no.	Table/ Segment (e.g. slot 1)
3	i7	i6	i5	i4	i3	i2	i1	i0	PDPModule 4	22/0
4	o7	o6	o5	o4	o3	o2	o1	o0	PDPModule 1	22/0
5	o7	o6	o5	o4	o3	o2	o1	o0	PDPModule 2	22/0
6	o7	o6	o5	o4	o3	o2	o1	o0	PDPModule 3	22/0
7	o7	o6	o5	o4	o3	o2	o1	o0	PDPModule 4	22/0
8										22/0
9										22/0
10										22/0
11										Reserved
12	Reserved									22/1
...	...									22/1
24	Reserved									22/1
25	Reserved									22/2
...	...									22/2
35	Reserved									22/2

8.1.7.2 Process data PNOZ m EF PDP Link (from configured Version 2.x)

Byte	Bit 7	...	Bit 4	Bit 3	...	Bit 0	Table/ Segment (e.g. slot 1)
0	Inputs PDP Module 1: i0 ... i7 (Type 1/2) or i10 ... i42 (Type 4)						22/0
1							22/0
2	Inputs PDP Module 2:						22/0
3							22/0
4	Outputs PDP Module 1: o0 ... o7 (Type 1/2) or o10 ... o42 (Type 4)						22/0
5							22/0
6	Outputs PDP Module 2						22/0
7							22/0
8	System LED 1			System LED 0			22/0
9	System LED 3			System LED 2			22/0
10	System LED 4			System LED 3			22/0
11	Reserved						22/0
12	Inputs PDP Module 3						22/1
13							22/1

Byte	Bit 7	...	Bit 4	Bit 3	...	Bit 0	Table/ Segment (e.g. slot 1)
14	Inputs PDP Module 4						22/1
15							22/1
16	Reserved						22/1
...
23	Reserved						22/1
24	Outputs PDP Module 3						22/2
25							22/2
26	Outputs PDP Module 4						22/2
27							22/2
28	Reserved						22/2
...
35	Reserved						22/2

8.1.7.3 Process data PDP67 F 8DI ION (HP)

from configured Version 2.x of the PNOZ m EF PDP Link

	Byte	Bit 7	...						Bit 0
Inputs	0	-	-	i3	i2	-	-	i1	i0
	1	-	-	i7	i6	-	-	i5	i4
Outputs	2	-	-	o3	o2	-	-	o1	o0
	3	-	-	o7	o6	-	-	o5	o4

8.1.7.4 Process data PDP67 F 8DI4DO 5/5 ION (VA)

from configured Version 2.x of the PNOZ m EF PDP Link

	Byte	Bit 7	...						Bit 0
Inputs	0	-	-	i21	i20	-	-	i11	i10
	1	-	-	i41	i40	-	-	i31	i30
Outputs	2	-	-	o21	o20	-	-	o11	o10
	3	o-43	-	o41	o40	-	-	o31	o30

8.1.7.5 Process data PDP67 F 10DI4DO 5/8 ION (VA)

from configured Version 2.x of the PNOZ m EF PDP Link

	Byte	Bit 7	...						Bit 0
Inputs	0	-	i22	i21	i20	-	-	i11	i10
	1	-	i42	i41	i40	-	-	i31	i30
Outputs	2	o23	o22	o21	o20	-	-	o11	o10
	3	o43	o42	o41	o40	-	-	o31	o30

8.1.7.6 Process data PNOZ m EF SafetyNet

Byte	Bit 7	Bit 4	Bit 3	Bit 0	Table/ Segment (e.g. slot 1)
0	i7	i6	i5	i4	i3	i2	i1	i0	22/0
1	i15	i14	i13	i12	i11	i10	i9	i8	22/0
2	i23	i22	i21	i20	i19	i18	i17	i16	22/0
3	i31	i30	i29	i28	i27	i26	i25	i24	22/0
4	o7	o6	o5	o4	o3	o2	o1	o0	22/0
5	o15	o14	o13	o12	o11	o10	o9	o8	22/0
6	o23	o22	o21	o20	o19	o18	o17	o16	22/0
7	o31	o30	o29	o28	o27	o26	o25	o24	22/0
8	System LED 1				System LED 0				22/0
9	System LED 3				System LED 2				22/0
10	System LED 4				System LED 3				22/0
11	Reserved								22/0
12	i39	22/1	i37	i36	i35	i34	i33	i32	22/1
13	i47	22/1	i45	i44	i43	i42	i41	i40	22/1
14	i55	22/1	i53	i52	i51	i50	i49	i48	22/1
15	i63	22/1	i61	i60	i59	i58	i57	i56	22/1
16	i71	22/1	i69	i68	i67	i66	i65	i64	22/1
17	i79	22/1	i77	i76	i75	i74	i73	i72	22/1
18	i87	22/1	i85	i84	i83	i82	i81	i80	22/1
19	i95	22/1	i93	i92	i91	i90	i89	i88	22/1
20	i103	22/1	i101	i100	i99	i98	i97	i96	22/1
21	i111	22/1	i109	i108	i107	i106	i105	i104	22/1
22	i119	22/1	i117	i116	i115	i114	i113	i112	22/1
23	i127	22/1	i125	i124	i123	i122	i121	i120	22/1
24	Reserved								22/1

Byte	Bit 7	...	Bit 4	Bit 3	...	Bit 0	Table/ Segment (e.g. slot 1)
25	Reserved						22/2
...	...						22/2
35	Reserved						22/2

8.1.7.7 Process data PNOZ m EF MultiLink

Byte	Bit 7	...						Bit 0	Table/ Segment (e.g. slot 1)
0	i7	i6	i5	i4	i3	i2	i1	i0	22/0
1	i15	i14	i13	i12	i11	i10	i9	i8	22/0
2	i23	i22	i21	i20	i19	i18	i17	i16	22/0
3	i31	i30	i29	i28	i27	i26	i25	i24	22/0
4	o7	o6	o5	o4	o3	o2	o1	o0	22/0
5	o15	o14	o13	o12	o11	o10	o9	o8	22/0
6	o23	o22	o21	o20	o19	o18	o17	o16	22/0
7	o31	o30	o29	o28	o27	o26	o25	o24	22/0
8	System LED 1			System LED 0			22/0		
9	System LED 3			System LED 2			22/0		
10	System LED 4			System LED 3			22/0		
11	Reserved						22/0		
12	Reserved						22/0		
...	...								
24	Reserved						22/1		
25	Reserved						22/2		
...		
35	Reserved						22/2		

8.1.7.8 Process data PNOZ m EF EtherCAT FSoE

Byte	Bit 7	...					Bit 0	Table/ Segment (e.g. slot 1)
0							22/0	
...							22/0	
7							22/0	

Byte	Bit 7	...	Bit 0	Table/ Segment (e.g. slot 1)
8	System LED 1		System LED 0	22/0
9	System LED 3		System LED 2	22/0
10	System LED 4		System LED 3	22/0
11	Reserved			22/0
12	Reserved			22/1
...
24	Reserved			22/1
25	Reserved			22/2
...
35	Reserved			22/2

8.1.8 Process data addressing

8.1.8.1 Process data addressing on base unit

Tables

Process data		Tables		
Information	Byte	Table	Segment	Byte
Inputs	0 ... 3	20	0	0 ... 3
Outputs	4 ... 7	20	0	4 ... 7
System LEDs	8 ... 10	20	0	8 ... 10
I/O LEDs	12 ... 23	20	1	0 ... 11
I/O LEDs	24 ... 27	20	2	0 ... 3

SDOs

Process data		SDOs	
Information	Byte	Index	Subindex
Inputs	0 ... 3	0x2001	1 ... 4
Outputs	4 ... 7	0x2001	5 ... 8
System LEDs	8 ... 10	0x2001	9 ... 11
I/O LEDs	12 ... 27	0x2001	13 ... 28

Modbus Register

Process data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1024 ... 1025	16384 ... 16415
Outputs	4 ... 7	1026 ... 1027	16416 ... 16447
System LEDs	8 ... 10	1028 ... 1029	16448 ... 16471
I/O LEDs	12 ... 27	1030 ... 1037	16480 ... 16607

Profinet records

Process data		Profinet	
Information	Byte	Record	Byte
Inputs	0 ... 3	1	0 ... 3
Outputs	4 ... 7	1	4 ... 7
System LEDs	8 ... 10	1	8 ... 10
I/O LEDs	12 ... 27	1	12 ... 27

Ethernet/IP instances

Process data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	1	1	0 ... 3
Outputs	4 ... 7	1	1	4 ... 7
System LEDs	8 ... 10	1	1	8 ... 10
I/O LEDs	12 ... 27	1	1	12 ... 27

8.1.8.2

Process data addressing, 1st right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	0	0 ... 3
Outputs	4 ... 7	21	0	4 ... 7
System LEDs	8 ... 10	21	0	8 ... 10
I/O LEDs	12 ... 23	21	1	0 ... 11
I/O LEDs	24 ... 27	21	2	0 ... 3
Advanced data	0...11	201	0	0...11
Advanced data	12...23	201	1	0...11

Process data		Tables		
Advanced data	24...35	201	2	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2001	73 ... 76
Outputs	4 ... 7	0x2001	77 ... 80
System LEDs	8 ... 10	0x2001	81 ... 83
I/O LEDs	12 ... 27	0x2001	85 ... 100
Advanced data	0 ... 35	0x2029	1 ... 36

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1060 ... 1061	16960 ... 16991
Outputs	4 ... 7	1062 ... 1063	16992 ... 17023
System LEDs	8 ... 10	1064 ... 1065	17024 ... 17047
I/O LEDs	12 ... 27	1066 ... 1073	17056 ... 17183
Advanced data	0...35	16420 ... 16437	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	3	0 ... 3
Outputs	4 ... 7	3	4 ... 7
System LEDs	8 ... 10	3	8 ... 10
I/O LEDs	12 ... 27	3	12 ... 27
Advanced data	0 ... 35	151	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	1	0 ... 3
Outputs	4 ... 7	2	1	4 ... 7

Process data		Ethernet/IP		
System LEDs	8 ... 10	2	1	8 ... 10
I/O LEDs	12 ... 27	2	1	12 ... 27
Advanced data	0 ... 35	14	3	0 ... 35

8.1.8.3 Process data addressing, 2nd right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	3	0 ... 3
Outputs	4 ... 7	21	3	4 ... 7
System LEDs	8 ... 10	21	3	8 ... 10
I/O LEDs	12 ... 23	21	4	0 ... 11
I/O LEDs	24 ... 27	21	5	0 ... 3
Advanced data	0...11	201	3	0...11
Advanced data	12...23	201	4	0...11
Advanced data	24...35	201	5	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2002	1 ... 4
Outputs	4 ... 7	0x2002	5 ... 8
System LEDs	8 ... 10	0x2002	9 ... 11
I/O LEDs	12 ... 27	0x2002	13 ... 28
Advanced data	0 ... 35	0x2029	37 ... 72

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1078 ... 1079	17248 ... 17279
Outputs	4 ... 7	1080 ... 1081	17280 ... 17311
System LEDs	8 ... 10	1082 ... 1083	17312 ... 17335
I/O LEDs	12 ... 27	1084 ... 1091	17344 ... 17471

Process data		Modbus Register	
Advanced data	0...35	16438 ... 16455	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	4	0 ... 3
Outputs	4 ... 7	4	4 ... 7
System LEDs	8 ... 10	4	8 ... 10
I/O LEDs	12 ... 27	4	12 ... 27
Advanced data	0 ... 35	152	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	2	0 ... 3
Outputs	4 ... 7	2	2	4 ... 7
System LEDs	8 ... 10	2	2	8 ... 10
I/O LEDs	12 ... 27	2	2	12 ... 27
Advanced data	0 ... 35	14	4	0 ... 35

8.1.8.4

Process data addressing, 3rd right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	6	0 ... 3
Outputs	4 ... 7	21	6	4 ... 7
System LEDs	8 ... 10	21	6	8 ... 10
I/O LEDs	12 ... 23	21	7	0 ... 11
I/O LEDs	24 ... 27	21	8	0 ... 3
Advanced data	0...11	201	6	0...11
Advanced data	12...23	201	7	0...11
Advanced data	24...35	201	8	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2002	37 ... 40
Outputs	4 ... 7	0x2002	41 ... 44
System LEDs	8 ... 10	0x2002	45 ... 47
I/O LEDs	12 ... 27	0x2002	49 ... 64
Advanced data	0 ... 35	0x2029	73 ... 108

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1096 ... 1097	17536 ... 17567
Outputs	4 ... 7	1098 ... 1099	17568 ... 17599
System LEDs	8 ... 10	1100 ... 1101	17600 ... 17623
I/O LEDs	12 ... 27	1102 ... 1109	17632 ... 17759
Advanced data	0...35	16456 ... 16473	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	5	0 ... 3
Outputs	4 ... 7	5	4 ... 7
System LEDs	8 ... 10	5	8 ... 10
I/O LEDs	12 ... 27	5	12 ... 27
Advanced data	0 ... 35	153	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	3	0 ... 3
Outputs	4 ... 7	2	3	4 ... 7
System LEDs	8 ... 10	2	3	8 ... 10
I/O LEDs	12 ... 27	2	3	12 ... 27
Advanced data	0 ... 35	14	5	0 ... 35

8.1.8.5 Process data addressing, 4th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	9	0 ... 3
Outputs	4 ... 7	21	9	4 ... 7
System LEDs	8 ... 10	21	9	8 ... 10
I/O LEDs	12 ... 23	21	10	0 ... 11
I/O LEDs	24 ... 27	21	11	0 ... 3
Advanced data	0...11	201	9	0...11
Advanced data	12...23	201	10	0...11
Advanced data	24...35	201	11	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2002	73 ... 76
Outputs	4 ... 7	0x2002	77 ... 80
System LEDs	8 ... 10	0x2002	81 ... 83
I/O LEDs	12 ... 27	0x2002	85 ... 100
Advanced data	0 ... 35	0x2030	1 ... 36

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1114 ... 1115	17824 ... 17855
Outputs	4 ... 7	1116 ... 1117	17856 ... 17887
System LEDs	8 ... 10	1118 ... 1119	17888 ... 17911
I/O LEDs	12 ... 27	1120 ... 1127	17920 ... 18047
Advanced data	0...35	16474 ... 16491	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	6	0 ... 3
Outputs	4 ... 7	6	4 ... 7
System LEDs	8 ... 10	6	8 ... 10
I/O LEDs	12 ... 27	6	12 ... 27
Advanced data	0 ... 35	154	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	4	0 ... 3
Outputs	4 ... 7	2	4	4 ... 7
System LEDs	8 ... 10	2	4	8 ... 10
I/O LEDs	12 ... 27	2	4	12 ... 27
Advanced data	0 ... 35	14	6	0 ... 35

8.1.8.6**Process data addressing, 5th right-hand expansion module****Tables**

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	12	0 ... 3
Outputs	4 ... 7	21	12	4 ... 7
System LEDs	8 ... 10	21	12	8 ... 10
I/O LEDs	12 ... 23	21	13	0 ... 11
I/O LEDs	24 ... 27	21	14	0 ... 3
Advanced data	0...11	201	12	0...11
Advanced data	12...23	201	13	0...11
Advanced data	24...35	201	14	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2003	1 ... 4
Outputs	4 ... 7	0x2003	5 ... 8
System LEDs	8 ... 10	0x2003	9 ... 11
I/O LEDs	12 ... 27	0x2003	13 ... 28
Advanced data	0 ... 35	0x2030	37 ... 72

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1132 ... 1133	18112 ... 18143
Outputs	4 ... 7	1134 ... 1135	18144 ... 18175
System LEDs	8 ... 10	1136 ... 1137	18176 ... 18199
I/O LEDs	12 ... 27	1138 ... 1145	18208 ... 18335
Advanced data	0...35	16492 ... 16509	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	7	0 ... 3
Outputs	4 ... 7	7	4 ... 7
System LEDs	8 ... 10	7	8 ... 10
I/O LEDs	12 ... 27	7	12 ... 27
Advanced data	0 ... 35	155	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	5	0 ... 3
Outputs	4 ... 7	2	5	4 ... 7
System LEDs	8 ... 10	2	5	8 ... 10
I/O LEDs	12 ... 27	2	5	12 ... 27
Advanced data	0 ... 35	14	7	0 ... 35

8.1.8.7 Process data addressing, 6th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	15	0 ... 3
Outputs	4 ... 7	21	15	4 ... 7
System LEDs	8 ... 10	21	15	8 ... 10
I/O LEDs	12 ... 23	21	16	0 ... 11
I/O LEDs	24 ... 27	21	17	0 ... 3
Advanced data	0...11	201	15	0...11
Advanced data	12...23	201	16	0...11
Advanced data	24...35	201	17	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2003	37 ... 40
Outputs	4 ... 7	0x2003	41 ... 44
System LEDs	8 ... 10	0x2003	45 ... 47
I/O LEDs	12 ... 27	0x2003	49 ... 64
Advanced data	0 ... 35	0x2030	73 ... 108

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1150 ... 1151	18400 ... 18431
Outputs	4 ... 7	1152 ... 1153	18432 ... 18463
System LEDs	8 ... 10	1154 ... 1155	18464 ... 18487
I/O LEDs	12 ... 27	1156 ... 1163	18496 ... 18623
Advanced data	0...35	16510 ... 16527	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	8	0 ... 3
Outputs	4 ... 7	8	4 ... 7
System LEDs	8 ... 10	8	8 ... 10
I/O LEDs	12 ... 27	8	12 ... 27
Advanced data	0 ... 35	156	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	6	0 ... 3
Outputs	4 ... 7	2	6	4 ... 7
System LEDs	8 ... 10	2	6	8 ... 10
I/O LEDs	12 ... 27	2	6	12 ... 27
Advanced data	0 ... 35	14	8	0 ... 35

8.1.8.8

Process data addressing, 7th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	18	0 ... 3
Outputs	4 ... 7	21	18	4 ... 7
System LEDs	8 ... 10	21	18	8 ... 10
I/O LEDs	12 ... 23	21	19	0 ... 11
I/O LEDs	24 ... 27	21	20	0 ... 3
Advanced data	0...11	201	18	0...11
Advanced data	12...23	201	19	0...11
Advanced data	24...35	201	20	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2003	73 ... 76
Outputs	4 ... 7	0x2003	77 ... 80
System LEDs	8 ... 10	0x2003	81 ... 83
I/O LEDs	12 ... 27	0x2003	85 ... 100
Advanced data	0 ... 35	0x2031	1 ... 36

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1168...1169	18688...18719
Outputs	4 ... 7	1170...1171	18720...18751
System LEDs	8 ... 10	1172...1173	18752...18775
I/O LEDs	12 ... 27	1174...1181	18784...18911
Advanced data	0...35	16528 ... 16545	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	9	0...3
Outputs	4 ... 7	9	4...7
System LEDs	8 ... 10	9	8...10
I/O LEDs	12 ... 27	9	12...27
Advanced data	0 ... 35	157	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	7	0 ... 3
Outputs	4 ... 7	2	7	4 ... 7
System LEDs	8 ... 10	2	7	8 ... 10
I/O LEDs	12 ... 27	2	7	12 ... 27
Advanced data	0 ... 35	14	9	0 ... 35

8.1.8.9 Process data addressing, 8th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	21	0 ... 3
Outputs	4 ... 7	21	21	4 ... 7
System LEDs	8 ... 10	21	21	8 ... 10
I/O LEDs	12 ... 23	21	22	0 ... 11
I/O LEDs	24 ... 27	21	23	0 ... 3
Advanced data	0...11	201	21	0...11
Advanced data	12...23	201	22	0...11
Advanced data	24...35	201	23	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2004	1 ... 4
Outputs	4 ... 7	0x2004	5 ... 8
System LEDs	8 ... 10	0x2004	9 ... 11
I/O LEDs	12 ... 27	0x2004	13 ... 28
Advanced data	0 ... 35	0x2031	37 ... 72

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0 ... 3	1186...1187	18976...19007
Outputs	4 ... 7	1188...1189	19008...19039
System LEDs	8 ... 10	1190...1191	19040...19063
I/O LEDs	12 ... 27	1192...1199	19072...19199
Advanced data	0...35	16546 ... 16563	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	10	0...3
Outputs	4 ... 7	10	4...7
System LEDs	8 ... 10	10	8...10
I/O LEDs	12 ... 27	10	12...27
Advanced data	0 ... 35	158	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	8	0 ... 3
Outputs	4 ... 7	2	8	4 ... 7
System LEDs	8 ... 10	2	8	8 ... 10
I/O LEDs	12 ... 27	2	8	12 ... 27
Advanced data	0 ... 35	14	10	0 ... 35

8.1.8.10

Process data addressing, 9th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	24	0 ... 3
Outputs	4 ... 7	21	24	4 ... 7
System LEDs	8 ... 10	21	24	8 ... 10
I/O LEDs	12 ... 23	21	25	0 ... 11
I/O LEDs	24 ... 27	21	26	0 ... 3
Advanced data	0...11	201	24	0...11
Advanced data	12...23	201	25	0...11
Advanced data	24...35	201	26	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2004	37...40
Outputs	4 ... 7	0x2004	41...44
System LEDs	8 ... 10	0x2004	45...47
I/O LEDs	12 ... 27	0x2004	49...64
Advanced data	0 ... 35	0x2031	73 ... 108

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1204...1205	19264...19295
Outputs	4...7	1206...1207	19296...19327
System LEDs	8...10	1208...1209	19328...19351
I/O LEDs	12...27	1210...1217	19360...19487
Advanced data	0...35	16564 ... 16581	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	11	0...3
Outputs	4 ... 7	11	4...7
System LEDs	8 ... 10	11	8...10
I/O LEDs	12 ... 27	11	12...27
Advanced data	0 ... 35	159	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	9	0 ... 3
Outputs	4 ... 7	2	9	4 ... 7
System LEDs	8 ... 10	2	9	8 ... 10
I/O LEDs	12 ... 27	2	9	12 ... 27
Advanced data	0 ... 35	14	11	0 ... 35

8.1.8.11 Process data addressing, 10th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	27	0 ... 3
Outputs	4 ... 7	21	27	4 ... 7
System LEDs	8 ... 10	21	27	8 ... 10
I/O LEDs	12 ... 23	21	28	0 ... 11
I/O LEDs	24 ... 27	21	29	0 ... 3
Advanced data	0...11	201	27	0...11
Advanced data	12...23	201	28	0...11
Advanced data	24...35	201	29	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2005	73...76
Outputs	4 ... 7	0x2005	77...80
System LEDs	8 ... 10	0x2005	81...83
I/O LEDs	12 ... 27	0x2005	85...100
Advanced data	0 ... 35	0x2032	1 ... 36

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1222...1223	19552...19583
Outputs	4...7	1224...1225	19584...19615
System LEDs	8...10	1226...1227	19616...19639
I/O LEDs	12...27	1228...1235	19648...19775
Advanced data	0...35	16582 ... 16599	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	12	0...3
Outputs	4 ... 7	12	4...7
System LEDs	8 ... 10	12	8...10
I/O LEDs	12 ... 27	12	12...27
Advanced data	0 ... 35	160	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	10	0 ... 3
Outputs	4 ... 7	2	10	4 ... 7
System LEDs	8 ... 10	2	10	8 ... 10
I/O LEDs	12 ... 27	2	10	12 ... 27
Advanced data	0 ... 35	14	12	0 ... 35

8.1.8.12

Process data addressing, 11th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	30	0 ... 3
Outputs	4 ... 7	21	30	4 ... 7
System LEDs	8 ... 10	21	30	8 ... 10
I/O LEDs	12 ... 23	21	31	0 ... 11
I/O LEDs	24 ... 27	21	32	0 ... 3
Advanced data	0...11	201	30	0...11
Advanced data	12...23	201	31	0...11
Advanced data	24...35	201	32	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2005	1...4
Outputs	4 ... 7	0x2005	5...8
System LEDs	8 ... 10	0x2005	9...11
I/O LEDs	12 ... 27	0x2005	13...28
Advanced data	0 ... 35	0x2032	37 ... 72

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1240...1241	19840...19871
Outputs	4...7	1242...1243	19872...19903
System LEDs	8...10	1244...1245	19904...19927
I/O LEDs	12...27	1246...1253	19936...20063
Advanced data	0...35	16600 ... 16617	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	13	0...3
Outputs	4 ... 7	13	4...7
System LEDs	8 ... 10	13	8...10
I/O LEDs	12 ... 27	13	12...27
Advanced data	0 ... 35	161	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	11	0 ... 3
Outputs	4 ... 7	2	11	4 ... 7
System LEDs	8 ... 10	2	11	8 ... 10
I/O LEDs	12 ... 27	2	11	12 ... 27
Advanced data	0 ... 35	14	13	0 ... 35

8.1.8.13 Process data addressing, 12th right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	21	33	0 ... 3
Outputs	4 ... 7	21	33	4 ... 7
System LEDs	8 ... 10	21	33	8 ... 10
I/O LEDs	12 ... 23	21	34	0 ... 11
I/O LEDs	24 ... 27	21	35	0 ... 3
Advanced data	0...11	201	33	0...11
Advanced data	12...23	201	34	0...11
Advanced data	24...35	201	35	0...11

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2005	37...40
Outputs	4 ... 7	0x2005	41...44
System LEDs	8 ... 10	0x2005	45...47
I/O LEDs	12 ... 27	0x2005	49...64
Advanced data	0 ... 35	0x2032	73 ... 108

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1258...1259	20128...20159
Outputs	4...7	1260...1261	20160...20191
System LEDs	8...10	1262...1263	20192...20215
I/O LEDs	12...27	1264...1271	20224...20351
Advanced data	0...35	16618 ... 16635	-

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	14	0...3
Outputs	4 ... 7	14	4...7
System LEDs	8 ... 10	14	8...10
I/O LEDs	12 ... 27	14	12...27
Advanced data	0 ... 35	162	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	2	12	0 ... 3
Outputs	4 ... 7	2	12	4 ... 7
System LEDs	8 ... 10	2	12	8 ... 10
I/O LEDs	12 ... 27	2	12	12 ... 27
Advanced data	0 ... 35	14	14	0 ... 35

8.1.8.14

Process data addressing, 1st ST right-hand expansion module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	24	0	0 ... 3
Outputs	4 ... 7	24	0	4 ... 7
System LEDs	8 ... 10	24	0	8 ... 10
I/O LEDs	12 ... 23	24	1	0 ... 11
I/O LEDs	24 ... 27	24	2	0 ... 3

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2018	1 ... 4
Outputs	4 ... 7	0x2018	5 ... 8
System LEDs	8 ... 10	0x2018	9 ... 11
I/O LEDs	12 ... 27	0x2018	13 ... 28

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1760...1761	28160...28191
Outputs	4...7	1762...1763	28192...28223
System LEDs	8...10	1764...1765	28224...28247
I/O LEDs	12...27	1766...1773	28256...28383

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	66	0...3
Outputs	4 ... 7	66	4...7
System LEDs	8 ... 10	66	8...10
I/O LEDs	12 ... 27	66	12...27

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	12	1	0 ... 3
Outputs	4 ... 7	12	1	4 ... 7
System LEDs	8 ... 10	12	1	8 ... 10
I/O LEDs	12 ... 27	12	1	12 ... 27

8.1.8.15

Process data addressing 2nd ST expansion module, right

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	24	3	0 ... 3
Outputs	4 ... 7	24	3	4 ... 7
System LEDs	8 ... 10	24	3	8 ... 10
I/O LEDs	12 ... 23	24	4	0 ... 11
I/O LEDs	24 ... 27	24	5	0 ... 3

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2018	37 ... 40
Outputs	4 ... 7	0x2018	41 ... 44
System LEDs	8 ... 10	0x2018	45 ... 47
I/O LEDs	12 ... 27	0x2018	49 ... 64

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1778...1779	28448...28479
Outputs	4...7	1780...1781	28480...28511
System LEDs	8...10	1782...1783	28512...28535
I/O LEDs	12...27	1784...1791	28544...28671

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	67	0...3
Outputs	4 ... 7	67	4...7
System LEDs	8 ... 10	67	8...10
I/O LEDs	12 ... 27	67	12...27

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	12	2	0 ... 3
Outputs	4 ... 7	12	2	4 ... 7
System LEDs	8 ... 10	12	2	8 ... 10
I/O LEDs	12 ... 27	12	2	12 ... 27

8.1.8.16 Process data addressing 3rd ST expansion module, right

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	24	6	0 ... 3
Outputs	4 ... 7	24	6	4 ... 7
System LEDs	8 ... 10	24	6	8 ... 10
I/O LEDs	12 ... 23	24	7	0 ... 11
I/O LEDs	24 ... 27	24	8	0 ... 3

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2018	73...76
Outputs	4 ... 7	0x2018	77...80
System LEDs	8 ... 10	0x2018	81...83
I/O LEDs	12 ... 27	0x2018	85...100

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1796...1797	28736...28767
Outputs	4...7	1798...1799	28768...28799
System LEDs	8...10	1800...1801	28800...28823
I/O LEDs	12...27	1802...1809	28832...28959

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	68	0...3
Outputs	4 ... 7	68	4...7
System LEDs	8 ... 10	68	8...10
I/O LEDs	12 ... 27	68	12...27

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	12	3	0 ... 3
Outputs	4 ... 7	12	3	4 ... 7
System LEDs	8 ... 10	12	3	8 ... 10
I/O LEDs	12 ... 27	12	3	12 ... 27

8.1.8.17

Process data addressing 4th ST expansion module, right

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	24	9	0 ... 3
Outputs	4 ... 7	24	9	4 ... 7
System LEDs	8 ... 10	24	9	8 ... 10
I/O LEDs	12 ... 23	24	10	0 ... 11
I/O LEDs	24 ... 27	24	11	0 ... 3

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2019	1...4
Outputs	4 ... 7	0x2019	5...8
System LEDs	8 ... 10	0x2019	9...11
I/O LEDs	12 ... 27	0x2019	13...28

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1814...1815	29024...29055
Outputs	4...7	1816...1817	29056...29087
System LEDs	8...10	1818...1819	29088...29111
I/O LEDs	12...27	1820...1827	29120...29247

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	69	0...3
Outputs	4 ... 7	69	4...7
System LEDs	8 ... 10	69	8...10
I/O LEDs	12 ... 27	69	12...27

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	12	4	0 ... 3
Outputs	4 ... 7	12	4	4 ... 7
System LEDs	8 ... 10	12	4	8 ... 10
I/O LEDs	12 ... 27	12	4	12 ... 27

8.1.8.18

Process data addressing 5th ST expansion module, right

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	24	12	0 ... 3
Outputs	4 ... 7	24	12	4 ... 7
System LEDs	8 ... 10	24	12	8 ... 10
I/O LEDs	12 ... 23	24	13	0 ... 11
I/O LEDs	24 ... 27	24	14	0 ... 3

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2019	37...40
Outputs	4 ... 7	0x2019	41...44
System LEDs	8 ... 10	0x2019	45...47
I/O LEDs	12 ... 27	0x2019	49...64

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1832...1833	29312...29343
Outputs	4...7	1834...1835	29344...29375
System LEDs	8...10	1836...1837	29376...29399
I/O LEDs	12...27	1838...1845	29408...29535

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	70	0...3
Outputs	4 ... 7	70	4...7
System LEDs	8 ... 10	70	8...10
I/O LEDs	12 ... 27	70	12...27

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	12	5	0 ... 3
Outputs	4 ... 7	12	5	4 ... 7
System LEDs	8 ... 10	12	5	8 ... 10
I/O LEDs	12 ... 27	12	5	12 ... 27

8.1.8.19**Process data addressing 6th ST expansion module, right****Tables**

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 3	24	15	0 ... 3
Outputs	4 ... 7	24	15	4 ... 7
System LEDs	8 ... 10	24	15	8 ... 10
I/O LEDs	12 ... 23	24	16	0 ... 11
I/O LEDs	24 ... 27	24	17	0 ... 3

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 3	0x2019	73...76
Outputs	4 ... 7	0x2019	77...80
System LEDs	8 ... 10	0x2019	81...83
I/O LEDs	12 ... 27	0x2019	85...100

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Inputs	0...3	1850...1851	29600...29631
Outputs	4...7	1852...1853	29632...29663
System LEDs	8...10	1854...1855	29664...29687
I/O LEDs	12...27	1856...1863	29696...29823

Profinet Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 3	71	0...3
Outputs	4 ... 7	71	4...7
System LEDs	8 ... 10	71	8...10
I/O LEDs	12 ... 27	71	12...27

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 3	12	6	0 ... 3
Outputs	4 ... 7	12	6	4 ... 7
System LEDs	8 ... 10	12	6	8 ... 10
I/O LEDs	12 ... 27	12	6	12 ... 27

8.1.8.20 Process data addressing, left-hand expansion devices

Process data addressing SDO

Byte	Table/ Segment	SDO	Table/ Segment	SDO	Table/ Segment	SDO	Table/ Segment	SDO
	Slot 1		Slot 2		Slot 3		Slot 4	
0 ... 3 Inputs	22/0	0x2007:1	22/3	0x2007:37	22/6	0x2007:73	22/9	0x2008:1
	22/0	0x2007:2	22/3	0x2007:38	22/6	0x2007:74	22/9	0x2008:2
	22/0	0x2007:3	22/3	0x2007:39	22/6	0x2007:75	22/9	0x2008:3
	22/0	0x2007:4	22/3	0x2007:40	22/6	0x2007:76	22/9	0x2008:4
3 ... 7 Outputs	22/0	0x2007:5	22/3	0x2007:41	22/6	0x2007:77	22/9	0x2008:5
	22/0	0x2007:6	22/3	0x2007:42	22/6	0x2007:78	22/9	0x2008:6
	22/0	0x2007:7	22/3	0x2007:43	22/6	0x2007:79	22/9	0x2008:7
	22/0	0x2007:8	22/3	0x2007:44	22/6	0x2007:80	22/9	0x2008:8
8 ... 10 LEDs	22/0	0x2007:9	22/3	0x2007:45	22/6	0x2007:81	22/9	0x2008:9
	22/0	0x2007:10	22/3	0x2007:46	22/6	0x2007:82	22/9	0x2008:10
	22/0	0x2007:11	22/3	0x2007:47	22/6	0x2007:83	22/9	0x2008:11
11	22/0	0x2007:12	22/3	0x2007:48	22/6	0x2007:84	22/9	0x2008:12
12 ... 36 Device- specific	22/1	0x2007:13	22/4	0x2007:49	22/7	0x2007:85	22/10	0x2008:13

	22/1	0x2007:24	22/4	0x2007:60	22/7	0x2007:96	22/10	0x2008:24
	22/2	0x2007:25	22/5	0x2007:61	22/8	0x2007:97	22/11	0x2008:25

	22/2	0x2007:36	22/5	0x2007:72	22/8	0x2007:108	22/11	0x2008:36

Process data addressing Modbus

Byte	Re- gister	Coil/ Dis- crete Input	Re- gister	Coil/ Dis- crete Input	Re- gister	Coil/ Dis- crete Input	Re- gister	Coil/ Dis- crete Input
	Slot 1		Slot 2		Slot 3		Slot 4	
0 ... 3 Inputs	1348	21568	1366	21856	1384	22144	1402	22432
	1348	21576	1366	21864	1384	22152	1402	22440
	1349	21584	1367	21872	1385	22160	1403	22448
	1349	21592	1367	21880	1385	22168	1403	22456

Byte	Re- gister	Coil/ Dis- crete Input	Re- gister	Coil/ Dis- crete Input	Re- gister	Coil/ Dis- crete Input	Re- gister	Coil/ Dis- crete Input
	Slot 1		Slot 2		Slot 3		Slot 4	
3 ... 7 Outputs	1350	21600	1368	21888	1386	22176	1404	22464
	1350	21608	1368	21896	1386	22184	1404	22472
	1351	21616	1369	21904	1387	22192	1405	22480
	1351	21624	1369	21912	1387	22200	1405	22488
8 ... 10 LEDs	1352	21632	1370	21920	1388	22208	1406	22496
	1352	21640	1370	21928	1388	22216	1406	22504
	1353	21648	1371	21936	1389	22224	1407	22512
11	1353	21656	1371	21944	1389	22232	1407	22520
12 ... 36 Device- specific	1354	21664	1372	21952	1390	22240	1408	22528

	1359	21752	1377	22040	1395	22328	1413	22616
	1360	21760	1378	22048	1396	22336	1414	22624

	1365	21848	1383	22136	1401	22424	1419	22712

Process data addressing PROFINET

Byte	Table/ Seg- ment	Record	Table/ Seg- ment	Record	Table/ Seg- ment	Record	Table/ Seg- ment	Record
	Slot 1		Slot 2		Slot 3		Slot 4	
0 ... 3 Inputs	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
3 ... 7 Outputs	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
8 ... 10 LEDs	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
	22/0	19	22/3	20	22/6	21	22/9	22
11	22/0	19	22/3	20	22/6	21	22/9	22

Byte	Table/ Seg- ment	Record	Table/ Seg- ment	Record	Table/ Seg- ment	Record	Table/ Seg- ment	Record
	Slot 1		Slot 2		Slot 3		Slot 4	
12 ... 36 Device- specific	22/1	19	22/4	20	22/7	21	22/10	22

	22/1	19	22/4	20	22/7	21	22/10	22
	22/2	19	22/5	20	22/8	21	22/11	22

	22/2	19	22/5	20	22/8	21	22/11	22

Process data addressing Ethernet/IP

Byte	Table/ Seg- ment	In- stanc e	At- trib- ute	Table/ Seg- ment	In- stanc e	At- trib- ute	Table/ Seg- ment	In- stanc e	At- trib- ute	Table/ Seg- ment	In- stanc e	At- trib- ute
	Slot 1			Slot 2			Slot 3			Slot 4		
0 ... 3 Inputs	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
3 ... 7 Outputs	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
8 ... 10 LEDs	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
11	22/0	3	1	22/3	3	2	22/6	3	3	22/9	3	4
12 ... 36 Device- specific	22/1	3	1	22/4	3	2	22/7	3	3	22/10	3	4
	...	3	1	...	3	2	...	3	3	...	3	...
	22/1	3	1	22/4	3	2	22/7	3	3	22/10	3	4
	22/2	3	1	22/5	3	2	22/8	3	3	22/11	3	4
	1
	22/2	3	1	22/5	3	2	22/8	3	3	22/11	3	4


8.2 Process data: Fieldbus and communication module

The process data of the fieldbus and communication modules consists of 60 Bytes and contains the following information:

- ▶ State of the virtual inputs and outputs
- ▶ The status of the system LED for
 - supply voltage,
 - Diagnostics


8.2.1 State of virtual inputs i0 ... i127

Byte	Bit 7	...						Bit 0
0	i7	i6	i5	i4	i3	i2	i1	i0
1	i15	i14	i13	i12	i11	i10	i9	i8
2	i23	i22	i21	i20	i19	i18	i17	i16
3	i31	i30	i29	i28	i27	i26	i25	i24
4	i39	i38	i37	i36	i35	i34	i33	i32
5	i47	i46	i45	i44	i43	i42	i41	i40
6	i55	i54	i53	i52	i51	i50	i49	i48
7	i63	i62	i61	i60	i59	i58	i57	i56
8	i71	i70	i69	i68	i67	i66	i65	i64
9	i79	i78	i77	i76	i75	i74	i73	i72
10	i87	i86	i85	i84	i83	i82	i81	i80
11	i95	i94	i93	i92	i91	i90	i89	i88
12	i103	i102	i101	i100	i99	i98	i97	i96
13	i111	i110	i109	i108	i107	i106	i105	i104
14	i119	i118	i117	i116	i115	i114	i113	i112
15	i127	i126	i125	i124	i123	i122	i121	i120
16	Reserved							
...	...							
23	Reserved							


Fieldbus-specific addressing is described in the chapter entitled [Process data addressing](#) [ 130].

8.2.2 State of virtual outputs o0 ... o127

Byte	Bit 7	...						Bit 0
24	o7	o6	o5	o4	o3	o2	o1	o0
25	o15	o14	o13	o12	o11	o10	o9	o8
26	o23	o22	o21	o20	o19	o18	o17	o16
27	o31	o30	o29	o28	o27	o26	o25	o24
28	o39	o38	o37	o36	o35	o34	o33	o32
29	o47	o46	o45	o44	o43	o42	o41	o40
30	o55	o54	o53	o52	o51	o50	o49	o48
31	o63	o62	o61	o60	o59	o58	o57	o56
32	o71	o70	o69	o68	o67	o66	o65	o64
33	o79	o78	o77	o76	o75	o74	o73	o72
34	o87	o86	o85	o84	o83	o82	o81	o80
35	o95	o94	o93	o92	o91	o90	o89	o88
36	o103	o102	o101	o100	o99	o98	o97	o96
37	o111	o110	o109	o108	o107	o106	o105	o104
38	o119	o118	o117	o116	o115	o114	o113	o112
39	o127	o126	o125	o124	o123	o122	o121	o120
40	Reserved							
...	...							
47	Reserved							

Fieldbus-specific addressing is described in the chapter entitled [Process data addressing](#) [ 130].

8.2.3 Status of system LEDs

Status of the system LEDs for the fieldbus module (see also [Assignment of system LEDs](#) [ 130])


Byte	Bit 7	...		Bit 4	Bit 3	...		Bit 0
48	System LED 1				System LED 0			
49	System LED 3				System LED 2			
50	Reserved							
...	...							
59	Reserved							

LED status	4 Bit coding
Off	0x0
On	0xF
Flashes	0x3



INFORMATION

The LED status "On" and "Flashes" cannot be determined exactly on some fieldbus modules.

Fieldbus-specific addressing is described in the chapter entitled [Process data addressing](#) [ 130].

8.2.3.1 Assignment of system LEDs

Assignment of system LEDs to LEDs on the fieldbus modules:



8.2.4 Process data addressing

8.2.4.1 Process data addressing, fieldbus module

Please note: For the module PNOZ m ES EtherCAT FSoE, the System LEDs can only be polled with the help of Table 22.

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 11	23	0	0 ... 11
Inputs	12 ... 15	23	1	0 ... 3
Outputs	24 ... 35	23	2	0 ... 11
Outputs	36 ... 39	23	3	0 ... 3
System LEDs	48 ... 49	23	4	0 ... 1

SDOs

Process data		Tables	
Info	Byte	Index	Subindex
Inputs	0 ... 15	0x2100	0 ... 15
Outputs	24 ... 39	0x2000	0 ... 15
System LEDs	48 ... 49	0x2009	1 ... 2

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input (1x)
Inputs	0 ... 15	1456 ... 1463	23296 ... 23423
Outputs	24 ... 39	1468 ... 1475	23488 ... 23615
System LEDs	48 ... 49	1480	23680 ... 23695

PROFINET Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 15	---	---
Outputs	24 ... 39	---	---
System LEDs	48 ... 49	25	0 ... 1

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 15	---	---	---
Outputs	24 ... 39	---	---	---
System LEDs	48 ... 49	4	1	0 ... 1

8.2.4.2

Process data addressing, communication module

Tables

Process data		Tables		
Info	Byte	Table	Segment	Byte
Inputs	0 ... 11	23	5	0 ... 11
Inputs	12 ... 15	23	6	0 ... 3
Outputs	24 ... 35	23	7	0 ... 11

Process data		Tables		
Outputs	36 ... 39	23	8	0 ... 3
System LEDs	48 ... 49	---	---	---

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Inputs	0 ... 15	---	---
Outputs	24 ... 39	---	---
System LEDs	48 ... 49	---	---

Modbus Register

Process data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input (1x)
Inputs	0 ... 15	1486 ... 1493	23776 ... 23903
Outputs	24 ... 39	1498 ... 1505	23968 ... 24095
System LEDs	48 ... 49	---	---

PROFINET Records

Process data		Profinet	
Info	Byte	Record	Byte
Inputs	0 ... 15	---	---
Outputs	24 ... 39	---	---
System LEDs	48 ... 49	---	---

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Inputs	0 ... 15	---	---	---
Outputs	24 ... 39	---	---	---
System LEDs	48 ... 49	---	---	---

8.3 Connected devices

Contains information about the connected devices and the device connection. The data consists of 36 Bytes.

8.3.1 Device connection data

8.3.1.1 General connection data

Byte	Info
0	Connection type <ul style="list-style-type: none"> ▶ 0: Unused ▶ 1: Modbus TCP Client
1	Connection status (Modbus) <ul style="list-style-type: none"> ▶ 1: Connected ▶ 2: Connecting ▶ 3: Connection failed ▶ 4: Error in communication
2... 5	IP address
6 ... 7	Modbus Client Port
8 ... 9	Modbus Server Port
10 ... 11	Reserved
12	Device type <ul style="list-style-type: none"> ▶ 1: PITreader ▶ 2: Visu Panel
13 ... 35	Device-specific data (1st device connection xth device connection)

8.3.1.2 Device connection data PITreader

Byte	Info
12	Device type > 1:PITreader
13	PITreader status <ul style="list-style-type: none"> ▶ 1: Transponder key authenticated The PITreader recognised the transponder key. Permission exists ▶ 2: No transponder key available No transponder key inserted in the PITreader ▶ 3: No permission The transponder key does not have permission (permission = 0) ▶ 4: Authentication failed Invalid data from the PITreader ▶ 5: No connection to the PITreader
14 ... 21	Security ID: Security identifier of the transponder key

Byte	Info
22	Permission 1... 64 of the transponder key
23	Reserved
24 ... 27	Order number of the transponder key
28 ... 31	Serial number of the transponder key
32 ... 35	Reserved

8.3.1.3 Device connection Visu Panel

Byte	Info
12	Device type > 2: Visu Panel
13 ... 35	Reserved

8.3.1.4 Device connection data Safe Ethernet connection 2

Byte	Info
12	Device type > 3: Safe Ethernet connection 2
13	Local address
14	Remote address
15	Configuration ▶ 0: Automatic reconnection ▶ 1: Manual reconnection
16 ... 23	i0..i63
24	Safe Ethernet Connection 2 Status ▶ 0: Virtual connection interrupted ▶ 1: Virtual connection restored ▶ 7: Virtual connection established
25	Reserved
26 ... 27	Number of disconnections
28 ... 35	o0 ... o63

8.3.2 1st device connection addressing

Tables

Process data		Tables		
Information	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	0	0 ... 11
			1	12 ... 23
			2	24 ... 35

SDOs

Process data		SDOs	
Information	Byte	Index	Subindex
Device connection data	0 ... 35	0x201E	1 ... 36

Modbus Register

Process data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14000 ... 14017	-

PROFINET Records

Process data		Profinet	
Information	Byte	Record	Byte
Device connection data	0 ... 35	84	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	12	19	0 ... 35

8.3.3 2nd device connection addressing

Tables

Process data		Tables		
About	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	3	0 ... 11
			4	12 ... 23
			5	24 ... 35

SDOs

Process data		SDOs	
About	Byte	Index	Subindex
Device connection data	0 ... 35	0x201E	37 ... 72

Modbus Register

Process data		Modbus Register	
About	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14018 ... 14035	-

PROFINET Records

Process data		Profinet	
About	Byte	Record	Byte
Device connection data	0 ... 35	85	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
About	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	12	20	0 ... 35

8.3.4 3rd device connection addressing

Tables

Process data		Tables		
About	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	6	0 ... 11
			7	12 ... 23
			8	24 ... 35

SDOs

Process data		SDOs	
About	Byte	Index	Subindex
Device connection data	0 ... 35	0x201E	73 ... 108

Modbus Register

Process data		Modbus Register	
About	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14036 ... 14053	-

PROFINET Records

Process data		Profinet	
About	Byte	Record	Byte
Device connection data	0 ... 35	86	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
About	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	12	21	0 ... 35

8.3.5 4th device connection addressing**Tables**

Process data		Tables		
About	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	9	0 ... 11
			10	12 ... 23
			11	24 ... 35

SDOs

Process data		SDOs	
About	Byte	Index	Subindex
Device connection data	0 ... 35	0x201F	1 ... 36

Modbus Register

Process data		Modbus Register	
About	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14054 ... 14071	-

PROFINET Records

Process data		Profinet	
About	Byte	Record	Byte
Device connection data	0 ... 35	87	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
About	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	12	22	0 ... 35

8.3.6 5th device connection addressing

Tables

Process data		Tables		
About	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	12	0 ... 11
			13	12 ... 23
			14	24 ... 35

SDOs

Process data		SDOs	
About	Byte	Index	Subindex
Device connection data	0 ... 35	0x201F	37 ... 72

Modbus Register

Process data		Modbus Register	
About	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14072 ... 14089	-

PROFINET Records

Process data		Profinet	
About	Byte	Record	Byte
Device connection data	0 ... 35	88	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
About	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	12	23	0 ... 35

8.3.7 6th device connection addressing

Tables

Process data		Tables		
About	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	15	0 ... 11
			16	12 ... 23
			17	24 ... 35

SDOs

Process data		SDOs	
About	Byte	Index	Subindex
Device connection data	0 ... 35	0x201F	73 ... 108

Modbus Register

Process data		Modbus Register	
About	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14090 ... 14107	-

PROFINET Records

Process data		Profinet	
About	Byte	Record	Byte
Device connection data	0 ... 35	89	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
About	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	12	24	0 ... 35

8.3.8 7th device connection addressing

Tables

Process data		Tables		
About	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	18	0 ... 11
			19	12 ... 23
			20	24 ... 35

SDOs

Process data		SDOs	
About	Byte	Index	Subindex
Device connection data	0 ... 35	0x2036	37 ... 72

Modbus Register

Process data		Modbus Register	
About	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14108 ... 14125	-

PROFINET Records

Process data		Profinet	
About	Byte	Record	Byte
Device connection data	0 ... 35	173	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
About	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	15	7	0 ... 35

8.3.9 8th device connection addressing

Tables

Process data		Tables		
About	Byte	Table	Segment	Byte
Device connection data	0 ... 35	110	21	0 ... 11
			22	12 ... 23
			23	24 ... 35

SDOs

Process data		SDOs	
About	Byte	Index	Subindex
Device connection data	0 ... 35	0x2036	73 ... 108

Modbus Register

Process data		Modbus Register	
About	Byte	Register	Coil/Discrete Input (1x)
Device connection data	0 ... 35	14126 ... 14143	-

PROFINET Records

Process data		Profinet	
About	Byte	Record	Byte
Device connection data	0 ... 35	174	0 ... 35

Ethernet/IP instances

Process data		Ethernet/IP		
About	Byte	Instance	Attribute	Byte
Device connection data	0 ... 35	15	8	0 ... 35

8.4 Diagnostic words

The diagnostic words contain information about the elements in the PNOZmulti Configurator. The diagnostic words consist of 200 Bytes.

8.4.1 Diagnostics

Byte	About PNOZmulti Configurator
0	Diagnostic word, element ID1
1	e.g. A0B1 (hex): ▶ Byte 0: A0 ▶ Byte 1: B1
2	Diagnostic word, element ID2
3	e.g. A2B3 (hex): ▶ Byte 2: A2 ▶ Byte 3: B3
...	...
...	...

Byte	About PNOZmulti Configurator
198	Diagnostic word, element ID100 e.g. AEBF (hex):
199	<ul style="list-style-type: none"> ▶ Byte 198: AE ▶ Byte 199: BF

8.4.2 Diagnostic word addressing

Tables

Process data		Tables		
Information	Byte	Table	Segment	Byte
Diagnosics	0 ... 11	70	0	0 ... 11
Diagnosics	12 ... 23	70	1	0 ... 11
Diagnosics	24 ... 179	70	2 ... 14	0 ... 11
Diagnosics	180 ... 191	70	15	0 ... 11
Diagnosics	192 ... 199	70	16	0 ... 7

SDOs

Process data		SDOs	
Information	Byte	Index	Subindex
Diagnosics	0 ... 119	0x200A	1 ... 120
Diagnosics	120 ... 199	0x200B	1 ... 80

Modbus Register

Process data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input (1x)
Diagnosics	0 ... 199	2048 ... 2147	32768 ... 34367

Profinet records

Process data		Profinet	
Information	Byte	Record	Byte
Diagnosics	0 ... 23	27	0 ... 23
Diagnosics	24 ... 47	28	0 ... 23
Diagnosics	48 ... 191	29 ... 35	0 ... 23
Diagnosics	192 ... 199	36	0 ... 7

Ethernet/IP instances

Process data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Diagnostics	0 ... 23	5	1	0 ... 23
Diagnostics	24 ... 47	5	2	0 ... 23
Diagnostics	48 ... 191	5	3 ... 8	0 ... 23
Diagnostics	192 ... 199	5	9	0 ... 7

8.5 Enable elements

Each element is assigned an ID in the PNOZmulti Configurator. If the element's output = 0 (no enable), the corresponding bit is set.

The enable elements consist of 13 Bytes.

8.5.1 Element IDs

Byte	Bit 7	...						Bit 0
0	ID 8	ID 7	ID 6	ID 5	ID 4	ID 3	ID 2	ID 1
1	ID 16	ID 15	ID 14	ID 13	ID 12	ID 11	ID 10	ID 9
2	ID 24	ID 23	ID 22	ID 21	ID 20	ID 19	ID 18	ID 17
3	ID 32	ID 31	ID 30	ID 29	ID 28	ID 27	ID 26	ID 25
4	ID 40	ID 39	ID 38	ID 37	ID 36	ID 35	ID 34	ID 33
5	ID 48	ID 47	ID 46	ID 45	ID 44	ID 43	ID 42	ID 41
6	ID 56	ID 55	ID 54	ID 53	ID 52	ID 51	ID 50	ID 49
7	ID 64	ID 63	ID 62	ID 61	ID 60	ID 59	ID 58	ID 57
8	ID 72	ID 71	ID 70	ID 69	ID 68	ID 67	ID 66	ID 65
9	ID 80	ID 79	ID 78	ID 77	ID 76	ID 75	ID 74	ID 73
10	ID 88	ID 87	ID 86	ID 85	ID 84	ID 83	ID 82	ID 81
11	ID 96	ID 95	ID 94	ID 93	ID 92	ID 91	ID 90	ID 89
12	Reserved				ID 100	ID 99	ID 98	ID 97

8.5.2 Enable element addressing

Tables

Process data		Tables		
Information	Byte	Table	Segment	Byte
ID	0 ... 12	71	0	0 ... 12

SDOs

Process data		SDOs	
Information	Byte	Index	Subindex
ID	0 ... 12	0x200B	81 ... 93

Modbus Register

Process data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input (1x)
ID	0 ... 12	2150 ... 2156	34400 ... 34503

Profinet records

Process data		Profinet	
Information	Byte	Record	Byte
ID	0 ... 12	36	0 ... 12

Ethernet/IP instances

Process data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
ID	0 ... 12	5	10	0 ... 12

8.6 Maintenance safeguarding system Key-in-pocket

When the Key-in-pocket system is used, a person may only enter a plant/machine's danger zone if they have used their transponder outside at an access point to sign in to the sign in list on the Key-in-pocket system. The transponder must have a valid permission. The transponder's security ID and serial number are entered into the sign in list.

A maximum of 20 people at a time can be signed into a sign in list with their transponder. The Key-in-pocket system can monitor a maximum of 4 independent plant sections. A sign in list is assigned to each plant section.

The sign in lists can be polled via Modbus Register or tables and segments.

1. Sign in list

Byte		Table/ Segment	Modbus Register
1. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	220/0	18000 ... 18005
2. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	220/1	18006 ... 18011
3. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	220/2	18012 ... 18017
...			
20. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	220/19	18114 ... 18119

2. Sign in list

Byte		Table/ Segment	Modbus Register
1. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	221/0	18120 .. 18125
2. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	221/1	18126 .. 18131
3. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	221/2	18132 .. 18137
...			
20. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	221/19	18134 ... 18139

3. Sign in list

Byte		Table/ Segment	Modbus Register
1. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	222/0	18240 .. 18245
2. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	222/1	18246 .. 18252
3. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	222/2	18252 .. 18257
...			
20. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	222/19	18354 .. 18359

4. Sign in list


Byte		Table/ Segment	Modbus Register
1. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	223/0	18360 .. 18365
2. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	223/1	18366 .. 18371
3. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	223/2	18372 .. 18377
...			
20. Transponder	Secure ID Byte 0 ... 7 Serial Number Byte 8 ... 11	223/19	18474 .. 18479

8.7 Project data

The project data, which was also defined in the PNOZmulti Configurator, consists of 60 Bytes.


8.7.1 Check sums

Byte	Information
0	Project check sum
1	e.g. check sum A1B2 (hex:) <ul style="list-style-type: none"> ▶ Byte 0: A1 ▶ Byte 1: B2
2	▶ Overall check sum
3	
4	Reserved
...	...
11	Reserved

Fieldbus-specific addressing is described in the chapter entitled [Project data addressing](#) [ 148].

8.7.2 Date


Byte	Info
12	Project creation date: Day and month (DDMM), year (YYYY) e.g. creation date: 28.11.2003
13	
14	<ul style="list-style-type: none"> ▶ Byte 12: 1C ▶ Byte 13: 0B ▶ Byte 14: 0x07 ▶ Byte 15: 0xD3
15	
16	
16	Day and month (DDMM), e.g. 28.11. <ul style="list-style-type: none"> ▶ Byte 16: 1C ▶ Byte 17: 0B
17	
18	Year (YYYY), e.g. 2003 <ul style="list-style-type: none"> ▶ Byte 18: 0x07 ▶ Byte 19: 0xD3
19	
20	Time (HH:MM), e.g. 14 hours, 25 minutes <ul style="list-style-type: none"> ▶ Byte 20: 0E ▶ Byte 21: 19
21	
22	Time zone 1 <ul style="list-style-type: none"> ▶ Byte 22: 0 ▶ Byte 23: 1
23	

Fieldbus-specific addressing is described in the chapter entitled [Project data addressing](#) [ 148].

8.7.3 Project name

Project name defined in the PNOZmulti Configurator under "Enter project data". The name is stored in UNICODE format (2 Bytes contain the Hex code of one UNICODE character).

Byte	Information
24	1st character of project name
25	
26	2nd character of project name
27	
...	...
...	...
54	16th character of project name
55	
56	End of character string (identified by "FFFF")
57	
58	Reserved
59	Reserved

Fieldbus-specific addressing is described in the chapter entitled [Project data addressing](#) [ 148].

8.7.4 Project data addressing

Tables

Process data		Tables		
Information	Byte	Table	Segment	Byte
Check sums	0 ... 3	80	0	0 ... 3
Date	12 ... 23	80	1	0 ... 11
Project name	24 ... 35	80	2	0 ... 11
Project name	36 ... 47	80	3	0 ... 11
Project name	48 ... 57	80	4	0 ... 9

SDOs

Process data		SDOs	
Information	Byte	Index	Subindex
Check sums	0 ... 3	0x200D	13 ... 16
Date	12 ... 23	0x200D	25 ... 36
Project name	24 ... 57	0x200D	37 ... 70

Modbus Register

Process data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input (1x)
Check sums	0 ... 3	4096 ... 4097	---
Date	12 ... 23	4102 ... 4107	---
Project name	24 ... 57	4108 ... 4124	---

Profinet records

Process data		Profinet	
Information	Byte	Record	Byte
Check sums	0 ... 3	37	0 ... 3
Date	12 ... 23	37	12 ... 23
Project name	24 ... 57	38	0 ... 33

Ethernet/IP instances


Process data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Check sums	0 ... 3	6	1	0 ... 3
Date	12 ... 23	6	1	12 ... 23
Project name	24 ... 57	6	2	0 ... 33

8.8 Device data

The device data consists of 36 Bytes.

8.8.1 Product

Byte	Info
0	Product number, e.g. 772 100: 000BC804 (hex)
1	▶ Byte 0: 00,
2	▶ Byte 1: 0B,
3	▶ Byte 2: C8, ▶ Byte 3: 04
4	Serial number, e.g. 123 456: 0001E240 (hex)
5	▶ Byte 4: 00,
6	▶ Byte 5: 01,
7	▶ Byte 6: E2, ▶ Byte 7: 40
8	Device type, e.g. PNOZ m B0: 0060 (hex)
9	▶ Byte 8: 00, ▶ Byte 9: 60 ▶ Device type, e.g. PNOZ m B1: 0061 (hex) ▶ Byte 8: 00, ▶ Byte 9: 61
10	Device version 20: 14 (hex)
11	▶ Byte 10: 00, ▶ Byte 11: 14

Fieldbus-specific addressing is described in the chapter entitled [Device data addressing](#) [ 152].


Device types

- ▶ PNOZ m B0: 0x0060
- ▶ PNOZ m B1: 0x0061
- ▶ PNOZ m B1 Burner: 0x0062
- ▶ PNOZ m EF 8DI4DO: 0x00E0
- ▶ PNOZ m EF 4DI4DOR: 0x00E1
- ▶ PNOZ m EF 16DI: 0x00E2
- ▶ PNOZ m EF 1MM: 0x00E3
- ▶ PNOZ m EF 2MM: 0x00E4
- ▶ PNOZ m EF 8DI2DOT: 0x00E5
- ▶ PNOZ m EF EtherCAT FSoE: 0x00A0
- ▶ PNOZ m EF SafetyNet: 0x00A5
- ▶ PNOZ m EF 4AI 0x00E6

- ▶ PNOZ m EF 1MM2DO: 0x00E8
- ▶ PNOZ m EF 4DI4DORD: 0x00E9
- ▶ PNOZ m EF 2DOR: 0x00EA
- ▶ PNOZ m EF MultiLink: 0x00A7
- ▶ PNOZ m EF PDPLink: 0x00B7
- ▶ PNOZ m ES 14DO: 0x00F8
- ▶ PNOZ m ES PROFIBUS: 0x0001
- ▶ PNOZ m ES CANopen: 0x0020
- ▶ PNOZ m ES Ethernet/IP: 0x0083
- ▶ PNOZ m ES PROFINET: 0x0085
- ▶ PNOZ m ES EtherCAT: 0x0087
- ▶ PNOZ m ES Powerlink: 0x0098
- ▶ PNOZ m ES CC-Link: 0x0090

8.8.2 Firmware


Byte	Information
12	Firmware Version A
13	
14	Firmware Version B
15	
16	Check sum, Firmware Version A
17	
18	Check sum, Firmware Version B
19	
20	Reserved
...	...
23	Reserved

Fieldbus-specific addressing is described in the chapter entitled [Device data addressing](#) [ 152].

8.8.3 Operating hours

The operating hours counter can only be requested for the base unit.

Byte	Info
24	Operating hours counter, e.g. 106786
25	▸ Byte 24: Reserved
26	▸ Byte 25: 01 x 10000 (hex)
27	▸ Byte 26: A1 x 100 (hex)
28	▸ Byte 27: 22 x 1 (hex)
28	Reserved
...	...
35	Reserved

Fieldbus-specific addressing is described in the chapter entitled [Device data addressing](#) [ 152].

8.8.4 Device data addressing

8.8.4.1 Device data addressing on base unit

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	90	0	0 ... 11
Firmware	12 ... 19	90	1	0 ... 7
Operating hours	24 ... 27	90	2	0 ... 3

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x200F	1 ... 12
Firmware	12 ... 19	0x200F	13 ... 20
Operating hours	24 ... 27	0x200F	25 ... 28

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8192 ... 8197	---
Firmware	12 ... 19	8198 ... 8201	---

Device data		Modbus Register	
Operating hours	24 ... 27	8204 ... 8205	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	40	0 ... 11
Firmware	12 ... 19	40	12 ... 19
Operating hours	24 ... 27	40	24 ... 27

Ethernet/IP instances

Device data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	7	1	0 ... 11
Firmware	12 ... 19	7	1	12 ... 19
Operating hours	24 ... 27	7	1	24 ... 27

8.8.4.2

Device data addressing, 1st right-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	91	0	0 ... 11
Firmware	12 ... 19	91	1	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x200F	73 ... 84
Firmware	12 ... 19	0x200F	85 ... 92

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8228 ... 8233	----
Firmware	12 ... 19	8234 ... 8237	----

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	42	0 ... 11
Firmware	12 ... 19	42	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	1	0 ... 11
Firmware	12 ... 19	8	1	12 ... 19

8.8.4.3

Device data addressing, 2nd right-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	91	3	0 ... 11
Firmware	12 ... 19	91	4	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2010	1 ... 12
Firmware	12 ... 19	0x2010	13 ... 20

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8246 ... 8251	---
Firmware	12 ... 19	8252 ... 8255	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	43	0 ... 11
Firmware	12 ... 19	43	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	2	0 ... 11
Firmware	12 ... 19	8	2	12 ... 19

8.8.4.4

Device data addressing, 3rd right-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	91	6	0 ... 11
Firmware	12 ... 19	91	7	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2010	37 ... 48
Firmware	12 ... 19	0x2010	49 ... 56

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8264 ... 8269	---
Firmware	12 ... 19	8270 ... 8273	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	44	0 ... 11
Firmware	12 ... 19	44	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	3	0 ... 11
Firmware	12 ... 19	8	3	12 ... 19

8.8.4.5

Device data addressing, 4th right-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	91	9	0 ... 11
Firmware	12 ... 19	91	10	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2010	73 ... 84
Firmware	12 ... 19	0x2010	85 ... 92

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8282 ... 8287	---
Firmware	12 ... 19	8288 ... 8291	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	45	0 ... 11
Firmware	12 ... 19	45	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	4	0 ... 11
Firmware	12 ... 19	8	4	12 ... 19

8.8.4.6

Device data addressing, 5th right-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	91	12	0 ... 11
Firmware	12 ... 19	91	13	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2011	1 ... 12
Firmware	12 ... 19	0x2011	13 ... 20

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8300 ... 8305	---
Firmware	12 ... 19	8306 ... 8309	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	46	0 ... 11
Firmware	12 ... 19	46	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	5	0 ... 11
Firmware	12 ... 19	8	5	12 ... 19

8.8.4.7

Device data addressing, 6th right-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	91	15	0 ... 11
Firmware	12 ... 19	91	16	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2011	37 ... 48
Firmware	12 ... 19	0x2011	49 ... 56

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8318 ... 8323	---
Firmware	12 ... 19	8324 ... 8327	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	47	0 ... 11
Firmware	12 ... 19	47	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	6	0 ... 11
Firmware	12 ... 19	8	6	12 ... 19

8.8.4.8

Device data addressing, 7th right-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	91	18	0 ... 11
Firmware	12 ... 19	91	19	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2011	73 ... 84
Firmware	12 ... 19	0x2011	85 ... 92

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8336 ... 8341	---
Firmware	12 ... 19	8342 ... 8345	---

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	48	0 ... 11
Firmware	12 ... 19	48	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	7	0 ... 11
Firmware	12 ... 19	8	7	12 ... 19

8.8.4.9

Device data addressing, 8th right-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	91	21	0 ... 11
Firmware	12 ... 19	91	22	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2012	1 ... 12
Firmware	12 ... 19	0x2012	13 ... 20

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8354 ... 8359	---
Firmware	12 ... 19	8360 ... 8363	---

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	49	0 ... 11
Firmware	12 ... 19	49	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	8	0 ... 11
Firmware	12 ... 19	8	8	12 ... 19

8.8.4.10

Device data addressing, 9th right-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	91	24	0 ... 11
Firmware	12 ... 19	91	25	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2012	37...48
Firmware	12 ... 19	0x2012	49...56

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8372...8377	---
Firmware	12 ... 19	8378...8381	---

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	50	0 ... 11
Firmware	12 ... 19	50	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	9	0 ... 11
Firmware	12 ... 19	8	9	12 ... 19

8.8.4.11**Device data addressing, 10th right-hand expansion module****Tables**

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	91	27	0 ... 11
Firmware	12 ... 19	91	28	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2012	37...48
Firmware	12 ... 19	0x2012	49...56

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8390...8395	---
Firmware	12 ... 19	8391...8394	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	51	0 ... 11
Firmware	12 ... 19	51	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	10	0 ... 11
Firmware	12 ... 19	8	10	12 ... 19

8.8.4.12

Device data addressing, 11th right-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	91	30	0 ... 11
Firmware	12 ... 19	91	31	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2013	1...12
Firmware	12 ... 19	0x2013	13...20

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8408...8413	---
Firmware	12 ... 19	8414...8417	---

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	52	0 ... 11
Firmware	12 ... 19	52	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	11	0 ... 11
Firmware	12 ... 19	8	11	12 ... 19

8.8.4.13

Device data addressing, 12th right-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	91	33	0 ... 11
Firmware	12 ... 19	91	34	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2013	37...48
Firmware	12 ... 19	0x2013	49...56

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8426...8431	---
Firmware	12 ... 19	8432...8435	---

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	53	0 ... 11
Firmware	12 ... 19	53	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	8	12	0 ... 11
Firmware	12 ... 19	8	12	12 ... 19

8.8.4.14

Device data addressing, 1st ST right-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	94	0	0 ... 11
Firmware	12 ... 19	94	1	0 ... 7

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2020	1 ... 12
Firmware	12 ... 19	0x2020	13 ... 20

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8928...8933	---
Firmware	12 ... 19	8934...8937	---

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	125	0 ... 11
Firmware	12 ... 19	125	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	13	1	0 ... 11
Firmware	12 ... 19	13	1	12 ... 19

8.8.4.15

Device data addressing 2nd ST expansion module, right

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	94	3	0 ... 11
Firmware	12 ... 19	94	4	0 ... 7

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2020	37...48
Firmware	12 ... 19	0x2020	49...56

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8946...8951	---
Firmware	12 ... 19	8952...8955	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	126	0 ... 11
Firmware	12 ... 19	126	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	13	2	0 ... 11
Firmware	12 ... 19	13	2	12 ... 19

8.8.4.16

Device data addressing 3rd ST expansion module, right

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	94	6	0 ... 11
Firmware	12 ... 19	94	7	0 ... 7

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2021	73...84
Firmware	12 ... 19	0x2021	85...92

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8964...8969	---
Firmware	12 ... 19	8970...8973	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	127	0 ... 11
Firmware	12 ... 19	127	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	13	3	0 ... 11
Firmware	12 ... 19	13	3	12 ... 19

8.8.4.17

Device data addressing 4th ST expansion module, right

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	94	9	0 ... 11
Firmware	12 ... 19	94	10	0 ... 7

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2021	1...12
Firmware	12 ... 19	0x2021	13...20

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8982...8987	---
Firmware	12 ... 19	8988...8991	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	128	0 ... 11
Firmware	12 ... 19	128	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	13	4	0 ... 11
Firmware	12 ... 19	13	4	12 ... 19

8.8.4.18

Device data addressing 5th ST expansion module, right

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	94	12	0 ... 11
Firmware	12 ... 19	94	13	0 ... 7

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2021	37...48
Firmware	12 ... 19	0x2021	49...56

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	9000...9005	---
Firmware	12 ... 19	9006...9009	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	129	0 ... 11
Firmware	12 ... 19	129	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	13	5	0 ... 11
Firmware	12 ... 19	13	5	12 ... 19

8.8.4.19

Device data addressing 6th ST expansion module, right

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	94	15	0 ... 11
Firmware	12 ... 19	94	16	0 ... 7

SDOs

Process data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2022	73...84
Firmware	12 ... 19	0x2022	85...92

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	9018...9023	---
Firmware	12 ... 19	9024...9027	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	130	0 ... 11
Firmware	12 ... 19	130	12 ... 19

Ethernet/IP instances

Process data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	13	6	0 ... 11
Firmware	12 ... 19	13	6	12 ... 19

8.8.4.20

Device data addressing, 1st left-hand expansion module

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	92	0	0 ... 11
Firmware	12 ... 19	92	1	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2020	1 ... 12
Firmware	12 ... 19	0x2020	13 ... 20

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8516 ... 8521	---
Firmware	12 ... 19	8522 ... 8525	---

Profinet Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	58	0 ... 11
Firmware	12 ... 19	58	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	13	1	0 ... 11
Firmware	12 ... 19	13	1	12 ... 19

8.8.4.21

Device data addressing, 2nd left-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	92	3	0 ... 11
Firmware	12 ... 19	92	4	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2015	37 ... 48
Firmware	12 ... 19	0x2015	49 ... 56

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8534 ... 8539	---
Firmware	12 ... 19	8540 ... 8543	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	59	0 ... 11
Firmware	12 ... 19	59	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	9	2	0 ... 11
Firmware	12 ... 19	9	2	12 ... 19

8.8.4.22

Device data addressing, 3rd left-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	92	6	0 ... 11
Firmware	12 ... 19	92	7	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2015	73 ... 84
Firmware	12 ... 19	0x2015	85 ... 92

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8552 ... 8557	---
Firmware	12 ... 19	8558 ... 8561	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	60	0 ... 11
Firmware	12 ... 19	60	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	9	3	0 ... 11
Firmware	12 ... 19	9	3	12 ... 19

8.8.4.23

Device data addressing, 4th left-hand expansion module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	92	9	0 ... 11
Firmware	12 ... 19	92	10	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2016	1 ... 12
Firmware	12 ... 19	0x2016	13 ... 20

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8570 ... 8575	---
Firmware	12 ... 19	8576 ... 8579	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	61	0 ... 11
Firmware	12 ... 19	61	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	9	4	0 ... 11
Firmware	12 ... 19	9	4	12 ... 19

8.8.4.24

Device data addressing, fieldbus module

Please note:

For device data addressing of the module PNOZ m EF EtherCAT FSoE see **Device data addressing 1st ... 4th left-hand expansion module**.

**INFORMATION**

No serial number and no check sum are currently entered for the fieldbus modules.

Tables

Device data		Tables		
Info	Byte	Table	Segment	Byte
Product	0 ... 11	93	0	0 ... 11
Firmware	12 ... 19	93	1	0 ... 7

SDOs

Device data		SDOs	
Info	Byte	Index	Subindex
Product	0 ... 11	0x2017	1 ... 12
Firmware	12 ... 19	0x2017	13 ... 20

Modbus Register

Device data		Modbus Register	
Info	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8624 ... 8629	---
Firmware	12 ... 19	8630 ... 8633	---

PROFINET Records

Device data		Profinet	
Info	Byte	Record	Byte
Product	0 ... 11	64	0 ... 11
Firmware	12 ... 19	64	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Info	Byte	Instance	Attribute	Byte
Product	0 ... 11	10	1	0 ... 11
Firmware	12 ... 19	10	1	12 ... 19

8.8.4.25 Device data addressing, communication module

Tables

Device data		Tables		
Information	Byte	Table	Segment	Byte
Product	0 ... 11	93	3	0 ... 11
Firmware	12 ... 19	93	4	0 ... 7

SDOs

Device data		SDOs	
Information	Byte	Index	Subindex
Product	0 ... 11	0x2017	37 ... 48
Firmware	12 ... 19	0x2017	49 ... 56

Modbus Register

Device data		Modbus Register	
Information	Byte	Register	Coil/Discrete Input
Product	0 ... 11	8642 ... 8647	---
Firmware	12 ... 19	8648 ... 8651	---

Profinet records

Device data		Profinet	
Information	Byte	Record	Byte
Product	0 ... 11	65	0 ... 11
Firmware	12 ... 19	65	12 ... 19

Ethernet/IP instances

Device data		Ethernet/IP		
Information	Byte	Instance	Attribute	Byte
Product	0 ... 11	10	2	0 ... 11
Firmware	12 ... 19	10	2	12 ... 19

Support

Technical support is available from Pilz round the clock.

Americas

Brazil

+55 11 97569-2804

Canada

+1 888 315 7459

Mexico

+52 55 5572 1300

USA (toll-free)

+1 877-PILZUSA (745-9872)

Asia

China

+86 400-088-3566

Japan

+81 45 471-2281

South Korea

+82 31 778 3390

Australia and Oceania

Australia

+61 3 95600621

New Zealand

+64 9 6345350

Europe

Austria

+43 1 7986263-444

Belgium, Luxembourg

+32 9 3217570

France

+33 3 88104003

Germany

+49 711 3409-444

Ireland

+353 21 4804983

Italy, Malta

+39 0362 1826711

Scandinavia

+45 74436332

Spain

+34 938497433

Switzerland

+41 62 88979-32

The Netherlands

+31 347 320477

Türkiye

+90 216 5775552

United Kingdom

+44 1536 460866

You can reach our international hotline on:

+49 711 3409-222

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, E-Mail: info@pilz.com, Internet: www.pilz.com

PILZ
THE SPIRIT OF SAFETY

CECE, CHRE, CMSE®, INDUSTRIAL Pi®, Leansafe®, Myze®, PAS4000®, PAScal®, PASconfig®, Pilz®, PIT®, PMCPirimo®, PMCPirotego®, PMCiendo®, PMD®, PMi®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.

1002971-EN-14, 2026-01 Printed in Germany
© Pilz GmbH & Co. KG, 2024