



PNOZ mc5p

PILZ
THE SPIRIT OF SAFETY

- Configurable, safe small controllers PNOZmulti Classic

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

1	Introduction	4
1.1	Validity of documentation	4
1.2	Using the documentation	4
1.3	Definition of symbols	4
2	Overview	6
2.1	Scope	6
2.2	Unit features	6
2.3	Front view	6
3	Safety	7
3.1	Intended use	7
3.2	System requirements	7
3.3	Safety regulations	8
3.3.1	Use of qualified personnel	8
3.3.2	Warranty and liability	8
3.3.3	Disposal	8
3.3.4	For your safety	8
4	Function description	9
4.1	Functions	9
4.2	Input and output data	9
4.3	Assigning the inputs/outputs in the PNOZmulti Configurator to the INTERBUS inputs/outputs	9
4.4	Block diagram	10
5	Installation	11
5.1	General installation guidelines	11
5.2	Dimensions in mm	11
5.3	Connecting the base unit and expansion modules	12
6	Commissioning	13
6.1	Preparing for commissioning	13
6.2	Setting the transmission rate	14
6.3	Connecting the supply voltage	14
6.4	Download modified project to the PNOZmulti safety system	14
6.5	Connection example	15
7	Operation	16
7.1	Messages	16
8	Technical Details	17
9	Order reference	19
9.1	Product	19
9.2	Accessories	19

1 Introduction

1.1 Validity of documentation

This documentation is valid for the product PNOZ mc5p. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

2 Overview

2.1 Scope

- ▶ Expansion module PNOZ mc5p
- ▶ Jumper

2.2 Unit features


Application of the product PNOZ mc5p:

Expansion module for connection to a base unit from the PNOZmulti system.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for INTERBUS
- ▶ Transmission rate, selectable between 500 kBit/s and 2 MBit/s
- ▶ Status indicators for communication with INTERBUS and for errors
- ▶ Max. 1 PNOZ mc5p can be connected to the base unit
- ▶ In the PNOZmulti Configurator, 24 inputs (standard) and 24 outputs (standard) can be configured for communication via a fieldbus.
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

2.3 Front view

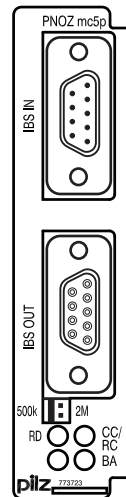

3 Safety

3.1 Intended use

The fieldbus module PNOZ mc5p is an expansion module of the configurable control system PNOZmulti. It is used for communication between the configurable control system PNOZmulti and INTERBUS. INTERBUS is designed for fast data exchange at field level. The expansion module PNOZ mc5p is a passive INTERBUS subscriber (Slave). The basic functions of communication with INTERBUS conform to EN 50254. The central controller (Master) reads input information from the slaves and writes output information to the slaves as part of each cycle. As well as the cyclical transfer of usable data, the fieldbus module PNOZ mc5p can also be used for diagnostics and commissioning functions.

The expansion module may only be connected to a base unit from the PNOZmulti system (please refer to the document "PNOZmulti System Expansion" for details of the base units that can be connected).

The configurable small control systems PNOZmulti are used for the safety-related interruption of safety circuits and are designed for use in:

- ▶ E-STOP equipment
- ▶ Safety circuits in accordance with VDE 0113 Part 1 and EN 60204-1

The expansion module may not be used for safety-related functions.

The following is deemed improper use in particular

- ▶ Any component, technical or electrical modification to the product,
- ▶ Use of the product outside the areas described in this manual,
- ▶ Use of the product outside the technical details (see [Technical details](#)  17).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

3.2 System requirements

Please refer to the "Product Modifications PNOZmulti" document in the "Version overview" section for details of which versions of the base unit and PNOZmulti Configurator can be used for this product.

3.3 Safety regulations

3.3.1 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in this description under "Safety",
- ▶ And have a good knowledge of the generic and specialist standards applicable to the specific application.

3.3.2 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.3.3 Disposal

- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

3.3.4 For your safety

The unit meets all the necessary conditions for safe operation. However, you should always ensure that the following safety requirements are met:

- ▶ This operating manual only describes the basic functions of the unit. The expanded functions are described in the PNOZmulti Configurator's online help. Only use these functions once you have read and understood the documentations.
- ▶ Do not open the housing or make any unauthorised modifications.
- ▶ Please make sure you shut down the supply voltage when performing maintenance work (e.g. exchanging contactors).

4 Function description

4.1 Functions

The data to be transferred via INTERBUS is selected and configured in the PNOZmulti Configurator. The base unit and PNOZ fieldbus module PNOZ mc5p are connected via a jumper. The fieldbus module is also supplied with voltage PNOZ mc5p via this jumper. After the supply voltage is switched on or the safety system PNOZmulti is reset, the fieldbus module PNOZ mc5p is configured and started automatically.

4.2 Input and output data

The data is structured as follows:

► Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

► Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

► Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.


Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

4.3 Assigning the inputs/outputs in the PNOZmulti Configurator to the INTERBUS inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data INTERBUS	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data INTERBUS	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

4.4 **Block diagram**

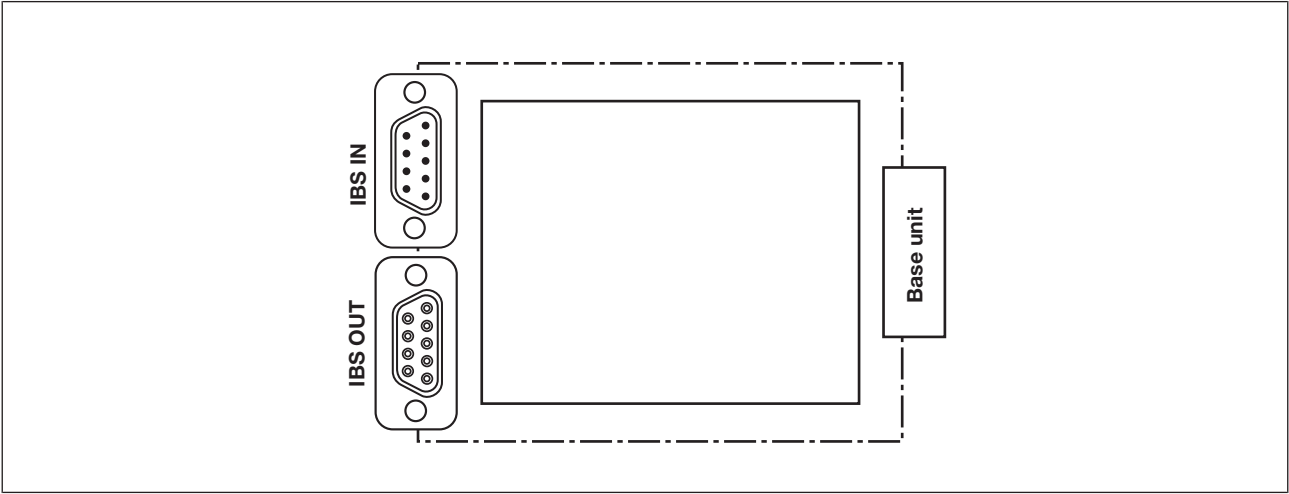

5 Installation

5.1 General installation guidelines

- ▶ The control system should be installed in a control cabinet with a protection type of at least IP54. Fit the control system to a horizontal mounting rail. The venting slots must face upward and downward. Other mounting positions could destroy the control system.
- ▶ Use the locking elements on the rear of the unit to attach it to a mounting rail. Connect the control system to the mounting rail in an upright position, so that the earthing springs on the control system are pressed on to the mounting rail.
- ▶ The ambient temperature of the devices in the control cabinet must not exceed the figure stated in the technical details. Air conditioning may otherwise be required.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.




NOTICE

Damage due to electrostatic discharge!

Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

5.2 Dimensions in mm

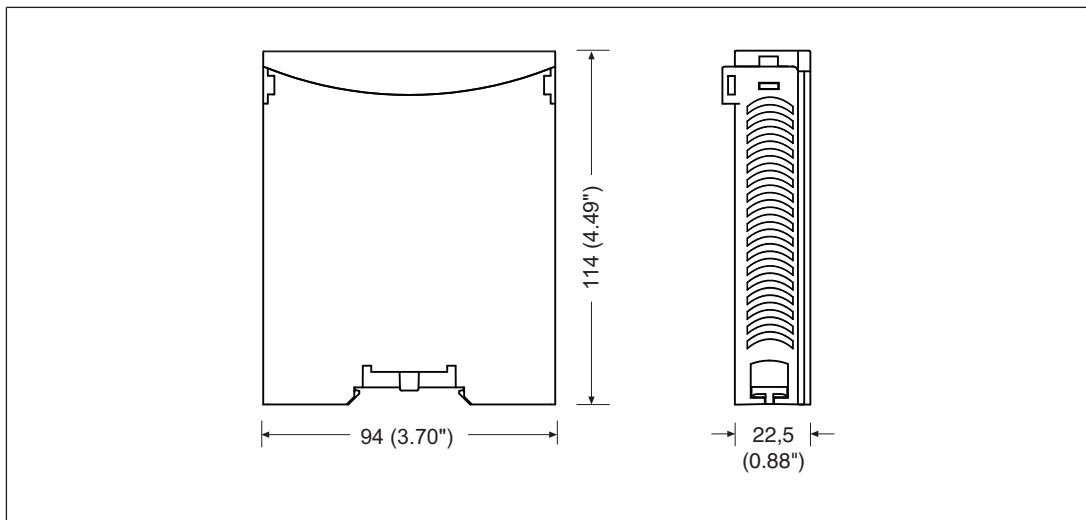

5.3 Connecting the base unit and expansion modules

You can install a maximum of 1 PNOZ mc5p to the left of the base unit.

Connect the base unit and the expansion module as described in the operating instructions for the base units.


- ▶ Do **not** connect a terminator to the last expansion module on the left-hand side.
- ▶ Install the expansion module in the position in which it is configured in the PNOZmulti Configurator.
- ▶ A distance of at least 20 mm must be maintained between the fieldbus module PNOZ mc5p and any external heat sources.

6 Commissioning

6.1 Preparing for commissioning

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which outputs on the safety system will communicate with INTERBUS. The connection to INTERBUS is made via two female 9-pin D-Sub screw connectors

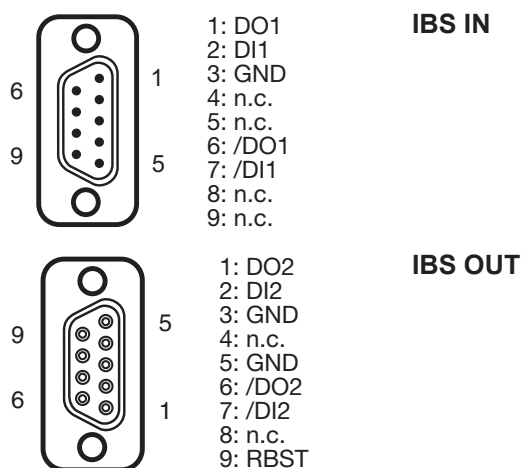

n. c. = not connected

Please note:

- ▶ Information given in the "Technical details" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to INTERBUS:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces



CAUTION!

Only connect and disconnect the expansion module when the supply voltage is switched off.



NOTICE

When installing, please refer to the Installation Manual for fibre-optic cables, issued by the INTERBUS User Organisation.

6.2 Setting the transmission rate

The transmission rate is set using a jumper. You can choose between 500 kBit/s and 2 MBit/s.

500 kBit/s: 500k  2M

2 MBit/s 500k  2M

6.3 Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

6.4 Download modified project to the PNOZmulti safety system


As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.



NOTICE

For the commissioning and after every user program change, you must check whether the safety devices are functioning correctly.

6.5 Connection example

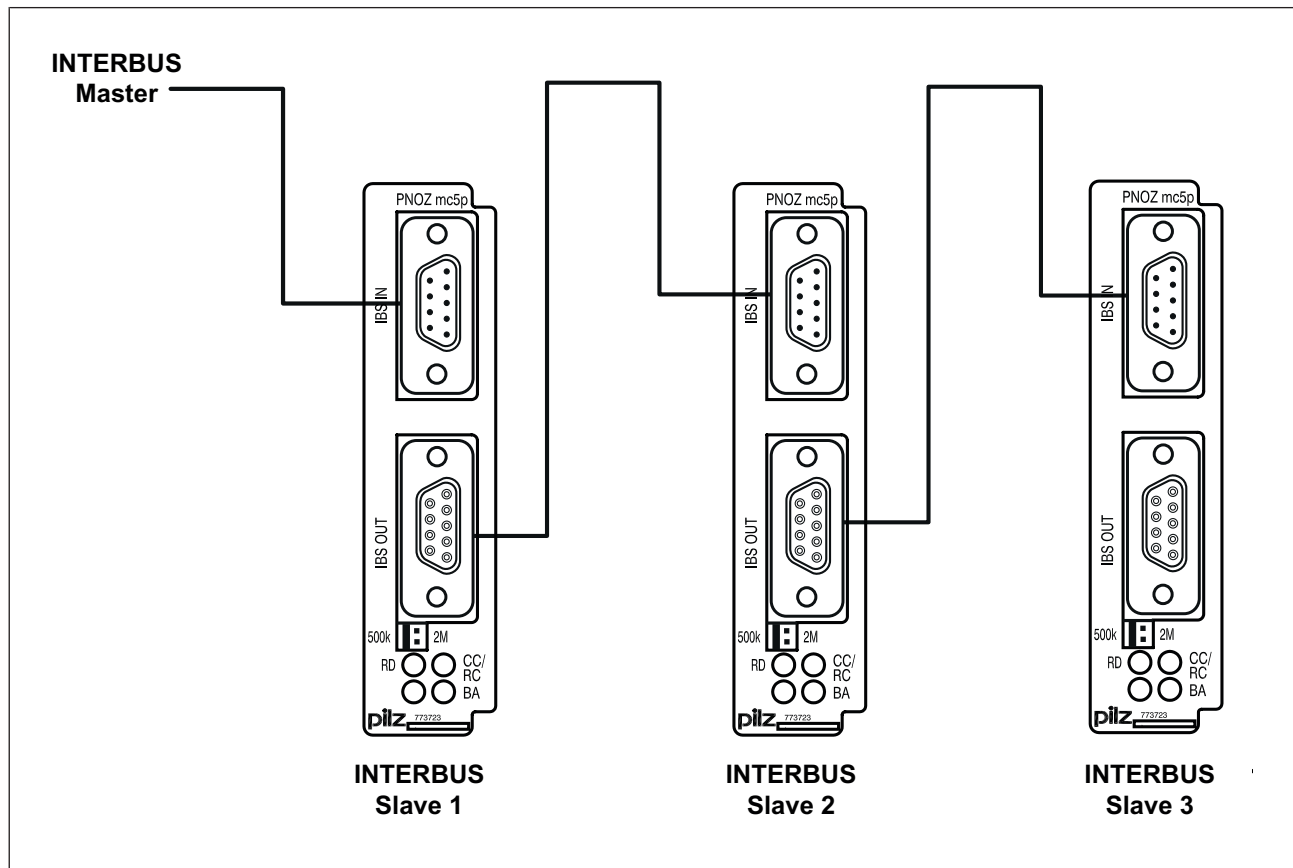

7 Operation

When the supply voltage is switched on, the PNOZmulti copies the configuration from the chip card.

The expansion module PNOZ mc5p is configured and started automatically.

7.1 Messages

Legend



LED on



LED off

LED			Meaning
CR/CC		green	The cable connection is in order and the INTERBUS Master is not in a reset condition.
			The cable connection is defective or the INTERBUS Master is in a reset condition.
OM		green	Data traffic present.
			No data traffic.
RD		yellow	The remote bus is switched off (remote bus disabled).
			The remote bus is switched on (remote bus enabled).

8 Technical Details

General	
Certifications	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	2,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	INTERBUS-S
Device type	Slave
Transmission rates	2 MBit/s, 500 kBit/s
Connection IBS IN	9-pin D-Sub male connector
Connection IBS OUT	9-pin D-Sub female connector
Galvanic isolation	yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 55 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above sea level	2000 m
EMC	EN 61131-2
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
In accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Environmental data

Airgap creepage

In accordance with the standard **EN 61131-2**

Overvoltage category **III**

Pollution degree **2**

Rated insulation voltage **30 V**

Protection type

In accordance with the standard **EN 60529**

Housing **IP20**

Terminals **IP20**

Mounting area (e.g. control cabinet) **IP54**

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail **35 x 7,5 EN 50022**

Recess width **27 mm**

Material

Bottom **PPO UL 94 V0**

Front **ABS UL 94 V0**

Dimensions

Height **94 mm**

Width **22,5 mm**

Depth **119 mm**

Weight **155 g**

Where standards are undated, the 2020-07 latest editions shall apply.

9 Order reference

9.1 Product

Product type	Features	Order No.
PNOZ mc5p	Fieldbus module, INTERBUS	773 723

9.2 Accessories

Jumper

Product type	Features	Order No.
KOP-XE	Jumper	774 639

