



Check list: PNOZplus – PNOZmulti Mini

pilz
the spirit of safety

Application examples for replacing the discontinued safety system PNOZplus with the configurable small control system PNOZmulti Mini

April 2014 Issue



This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

Check list PNOZplus - PNOZmulti Mini	4
Check list	4
Application examples showing terminal comparisons	6
Dual-channel with detection of shorts across contacts	6
Dual-channel with detection of shorts across contacts with PNOZ s11	8
Three-channel with detection of shorts across contacts with PNOZ XE1 and PNOZ s11	10
Three-channel with detection of shorts across contacts with PNOZ XE2	13

Check list PNOZplus - PNOZmulti Mini

The PNOZplus product range will be discontinued on 31 October 2014 due to the availability of spares and technical progress. PNOZplus units can be replaced by the configurable small control system PNOZmulti Mini. PNOZmulti Mini is as simple as a safety relay, but as flexible as a control system. Online information on PNOZmulti Mini at www.pilz.com, web-code10517.

The following list of units from the PNOZmulti Mini product range intended to replace units discontinued from the PNOZplus range serves as a recommendation. You will need to check the listed replacements based on the specific application to ensure they are suitable for use in an application. We will be happy to advise you with regard to an alternative solution for your application.

You can reach our international hotline on: +49 711 3409-444.

E-Mail: support@pilz.com

Check list

PNOZplus discontinued version		Replacement for PNOZmulti Mini	
Order no.	Unit	Order no.	Unit
774600	PNOZ XM1 24VDC 4n/o 1n/c 2so	772001	PNOZ mm0.1p ²⁾
774620	PNOZ XE1 24VDC	772001 + 751110 (with spring-loaded terminals) + 750110 (with plug-in screw terminals)	PNOZ mm0.1p ²⁾ + PNOZ s11 (with spring-loaded or plug-in screw terminals)
774621	PNOZ XE2 24VDC	772001	PNOZ mm0.1p ²⁾
774630	PNOZ XM1.1 24VDC 4n/o 1n/c 2so	772001	PNOZ mm0.1p ²⁾
774660	PCANop 24VDC	772034	PNOZ mmc6p CAN ^{1) 2)}
774662	PCANdn 24VDC	772033	PNOZ mmc4p DN ^{1) 2)}
874640	PDIA 1 24VDC RS-232	Please contact Pilz about a successor unit	
874645	PDIA 2 24VDC PLC-Interface		
307415B	PDIA 2 Driverdisk		

¹⁾ in conjunction with PNOZ mm0.1p


²⁾ corresponding accessories in the table below


Accessories replacement unit

Description		Order no.
1 set of spring-loaded terminals	For PNOZ mm0.1p	751008
1 set of plug-in screw terminals		750008
1 set of spring-loaded terminals	For PNOZ mmc6p CAN and PNOZ mmc4p DN	783542
1 set of plug-in screw terminals		793542
Mini USB cable, 3 m		312992
Mini USB cable, 5 m		312993
Chip card 8 kByte, 1 pieces		779201
Chip card 32 kByte, 1 pieces		779211
DVD Software PNOZmulti Configurator		773000D
Basic licence PNOZmulti Configurator		773010B


Application examples showing terminal comparisons





Dual-channel with detection of shorts across contacts

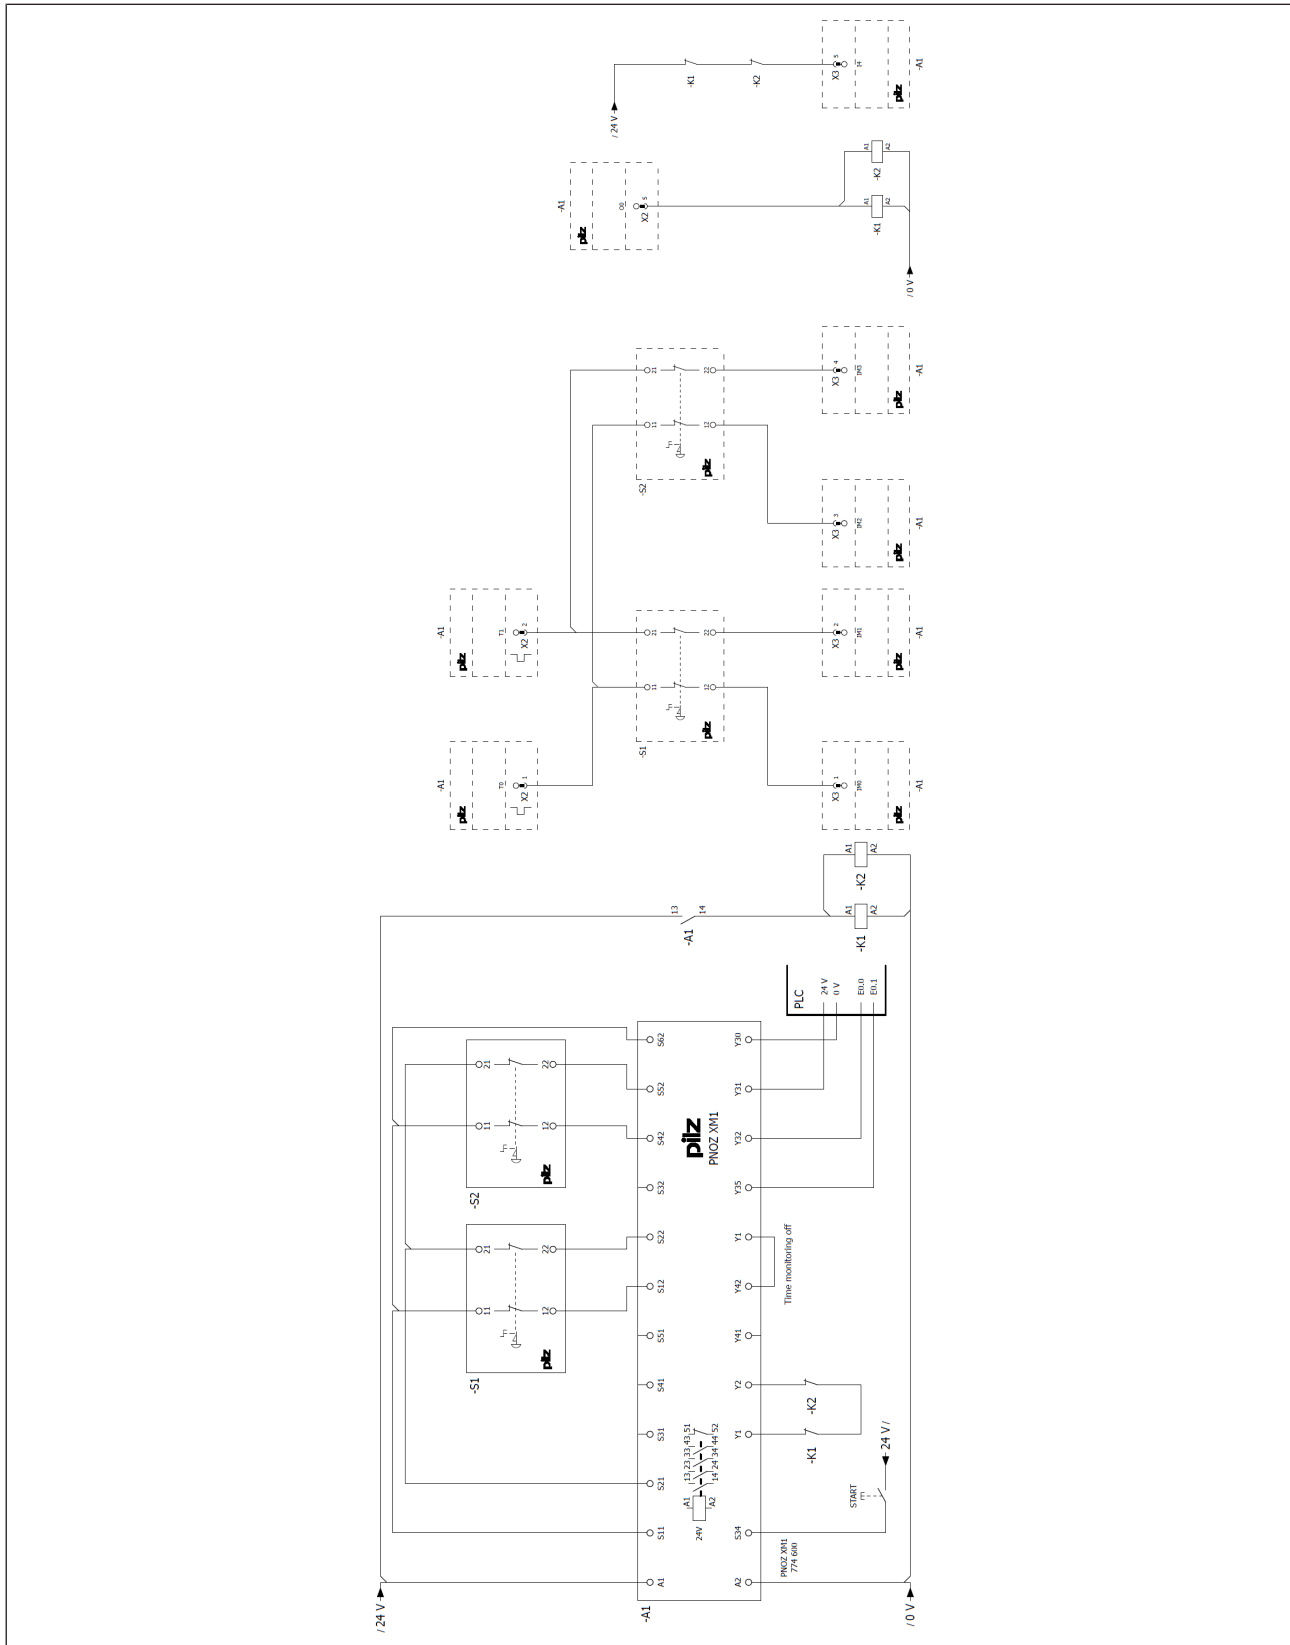

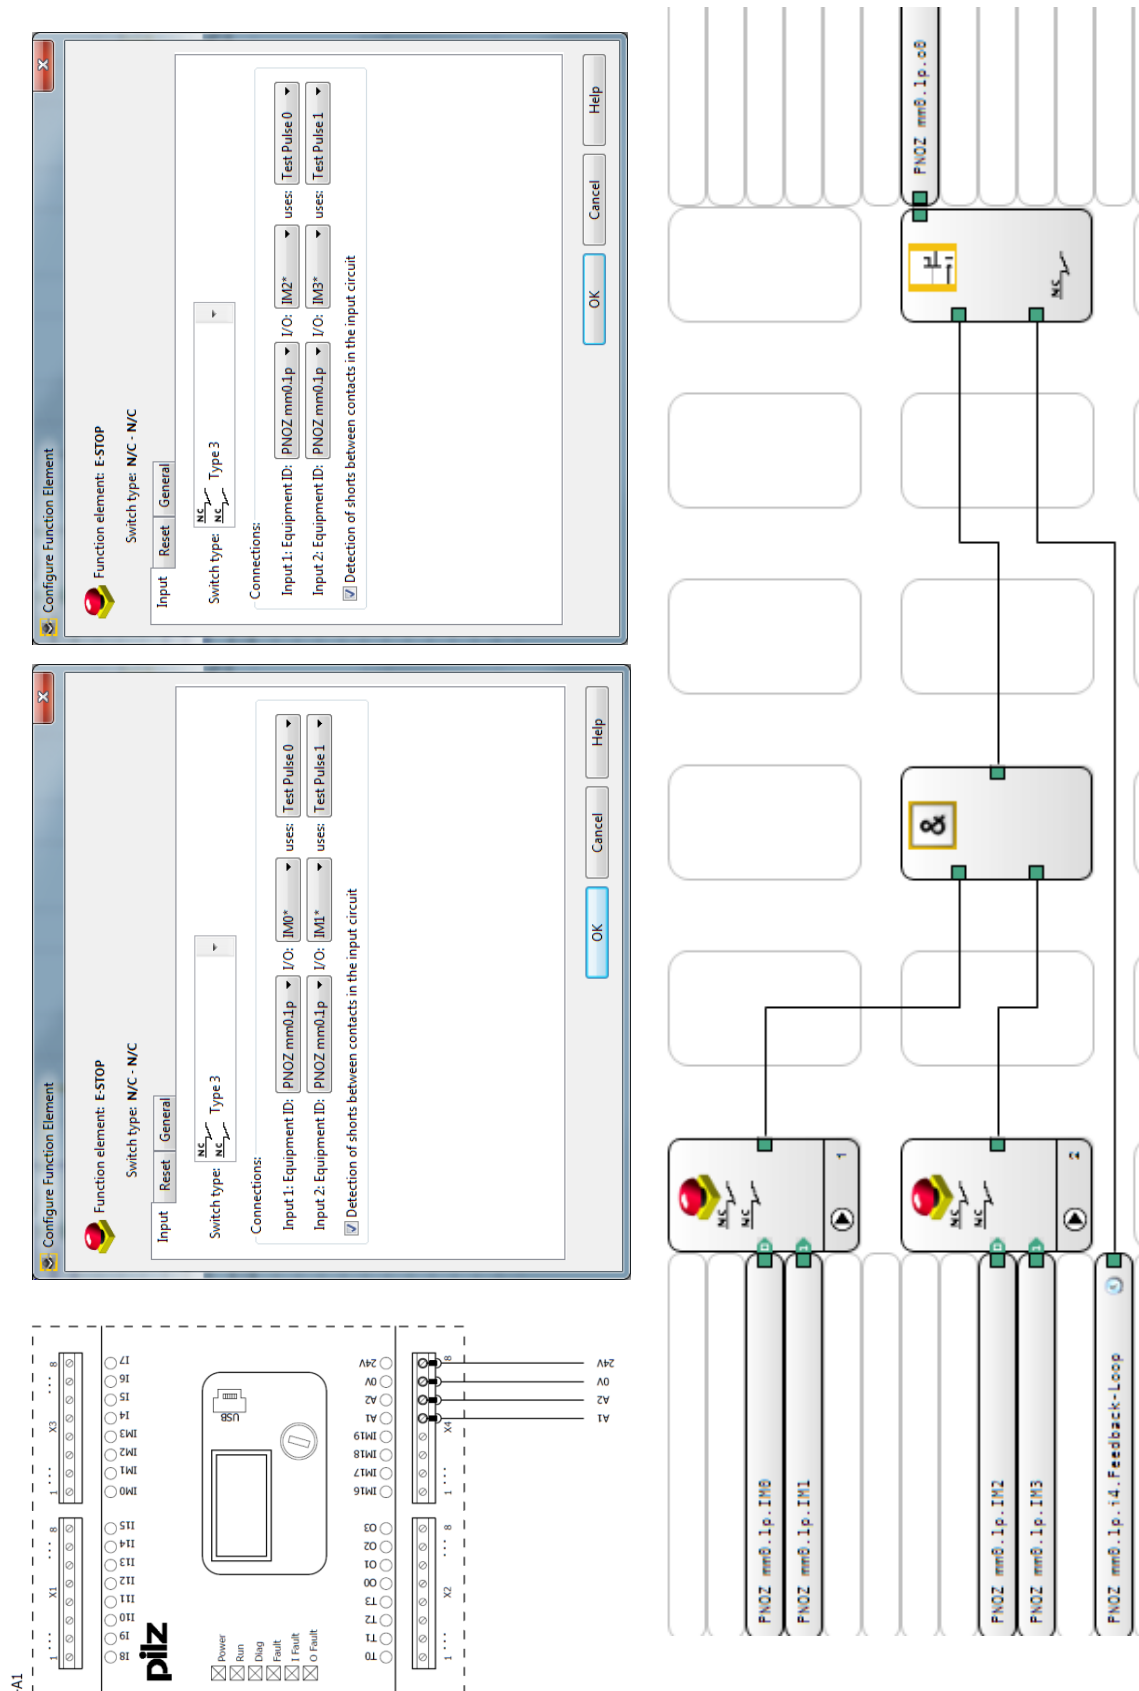



Dual-channel with detection of shorts across contacts with PNOZ s11

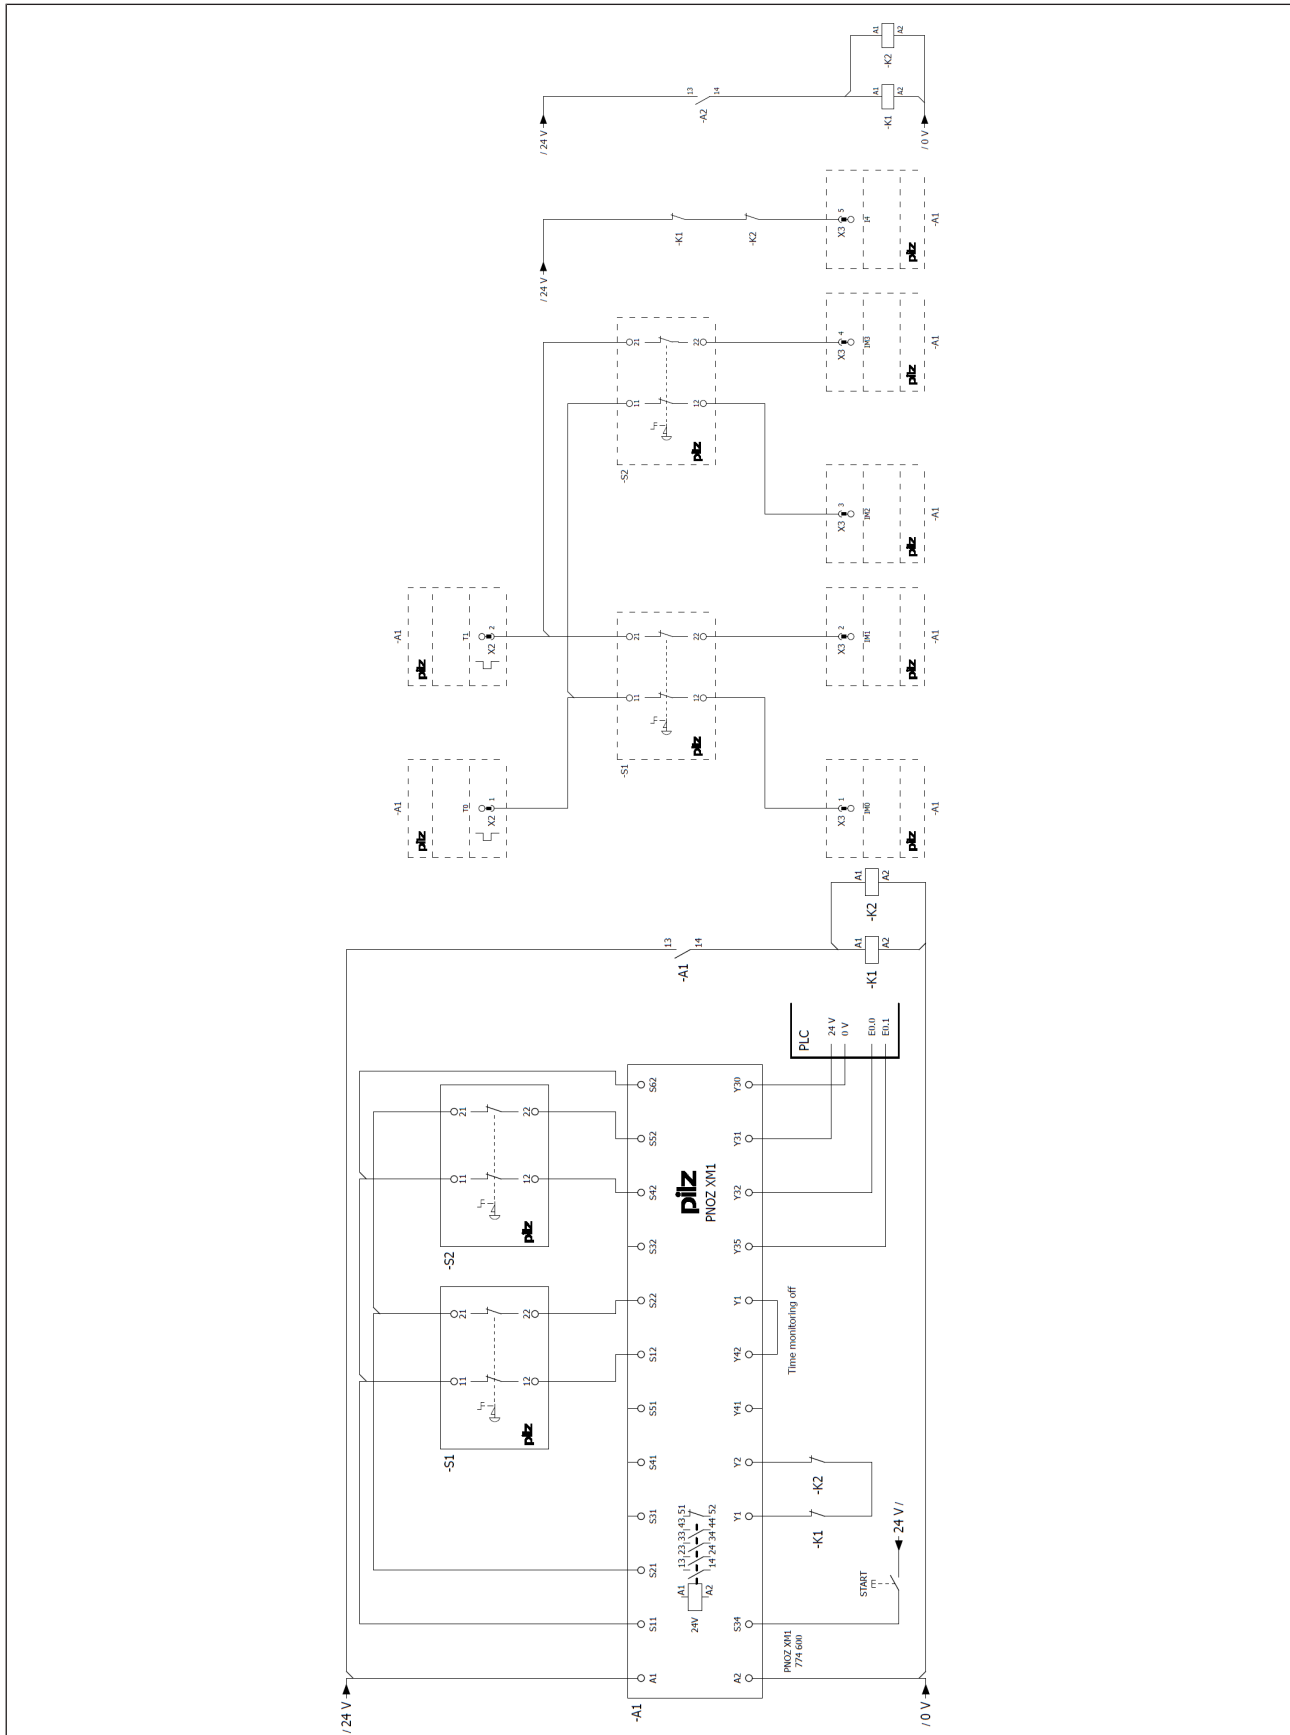


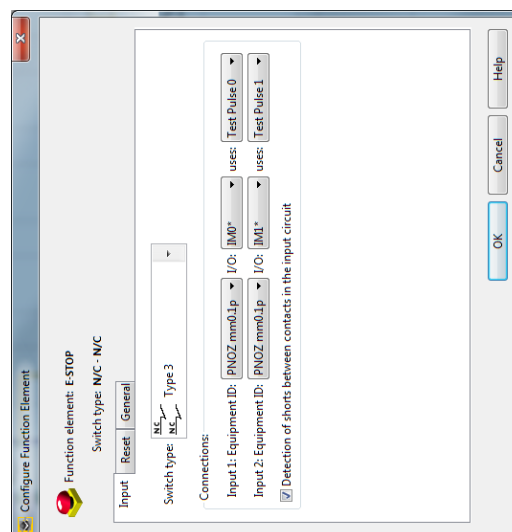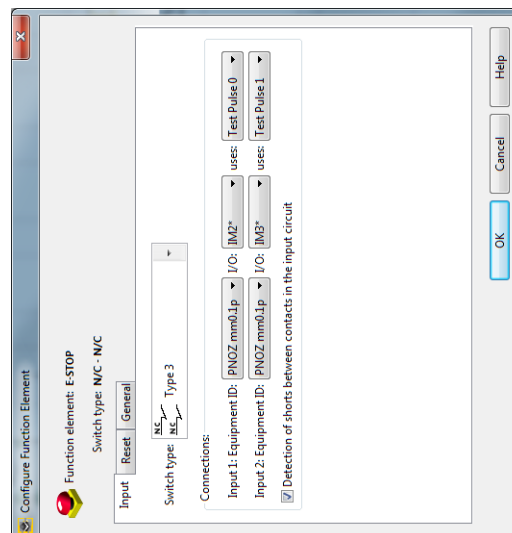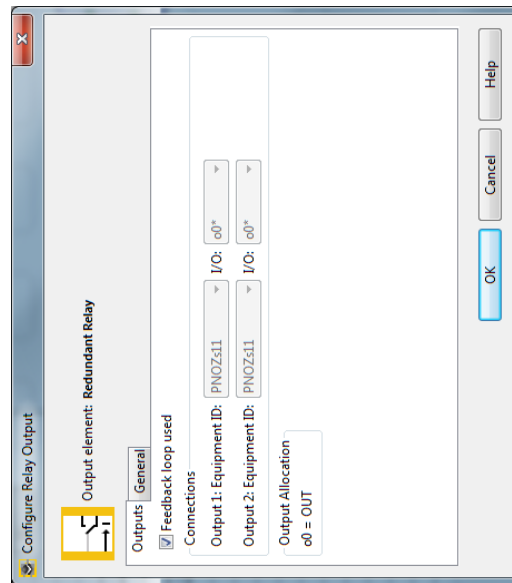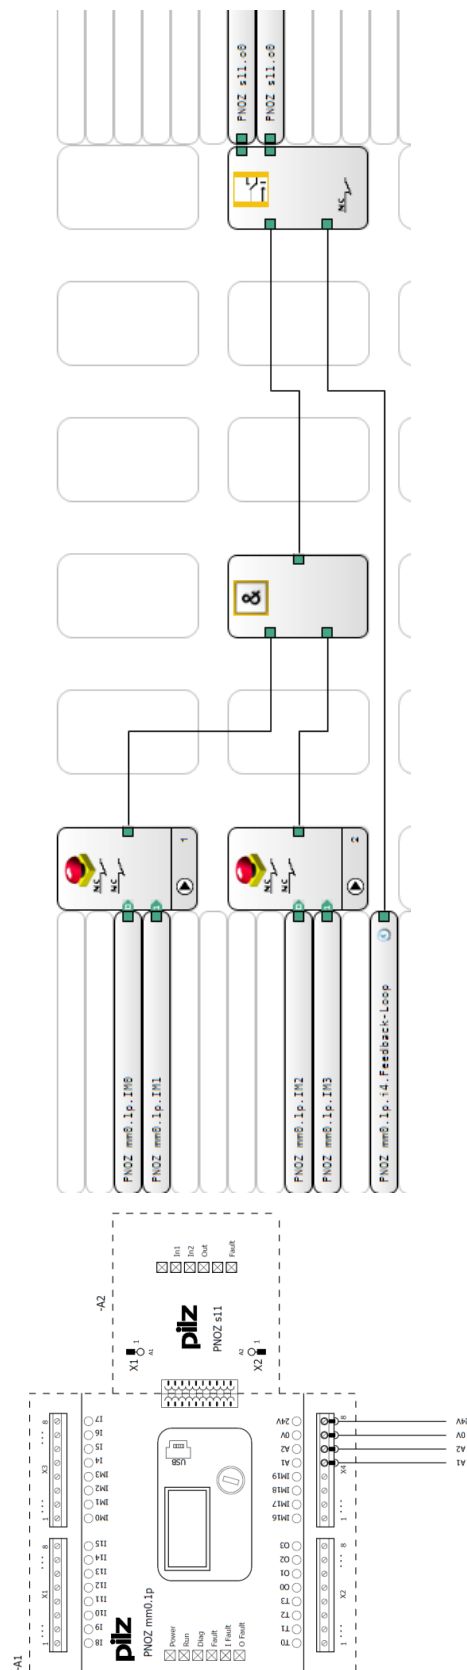

Three-channel with detection of shorts across contacts with PNOZ XE1 and PNOZ s11

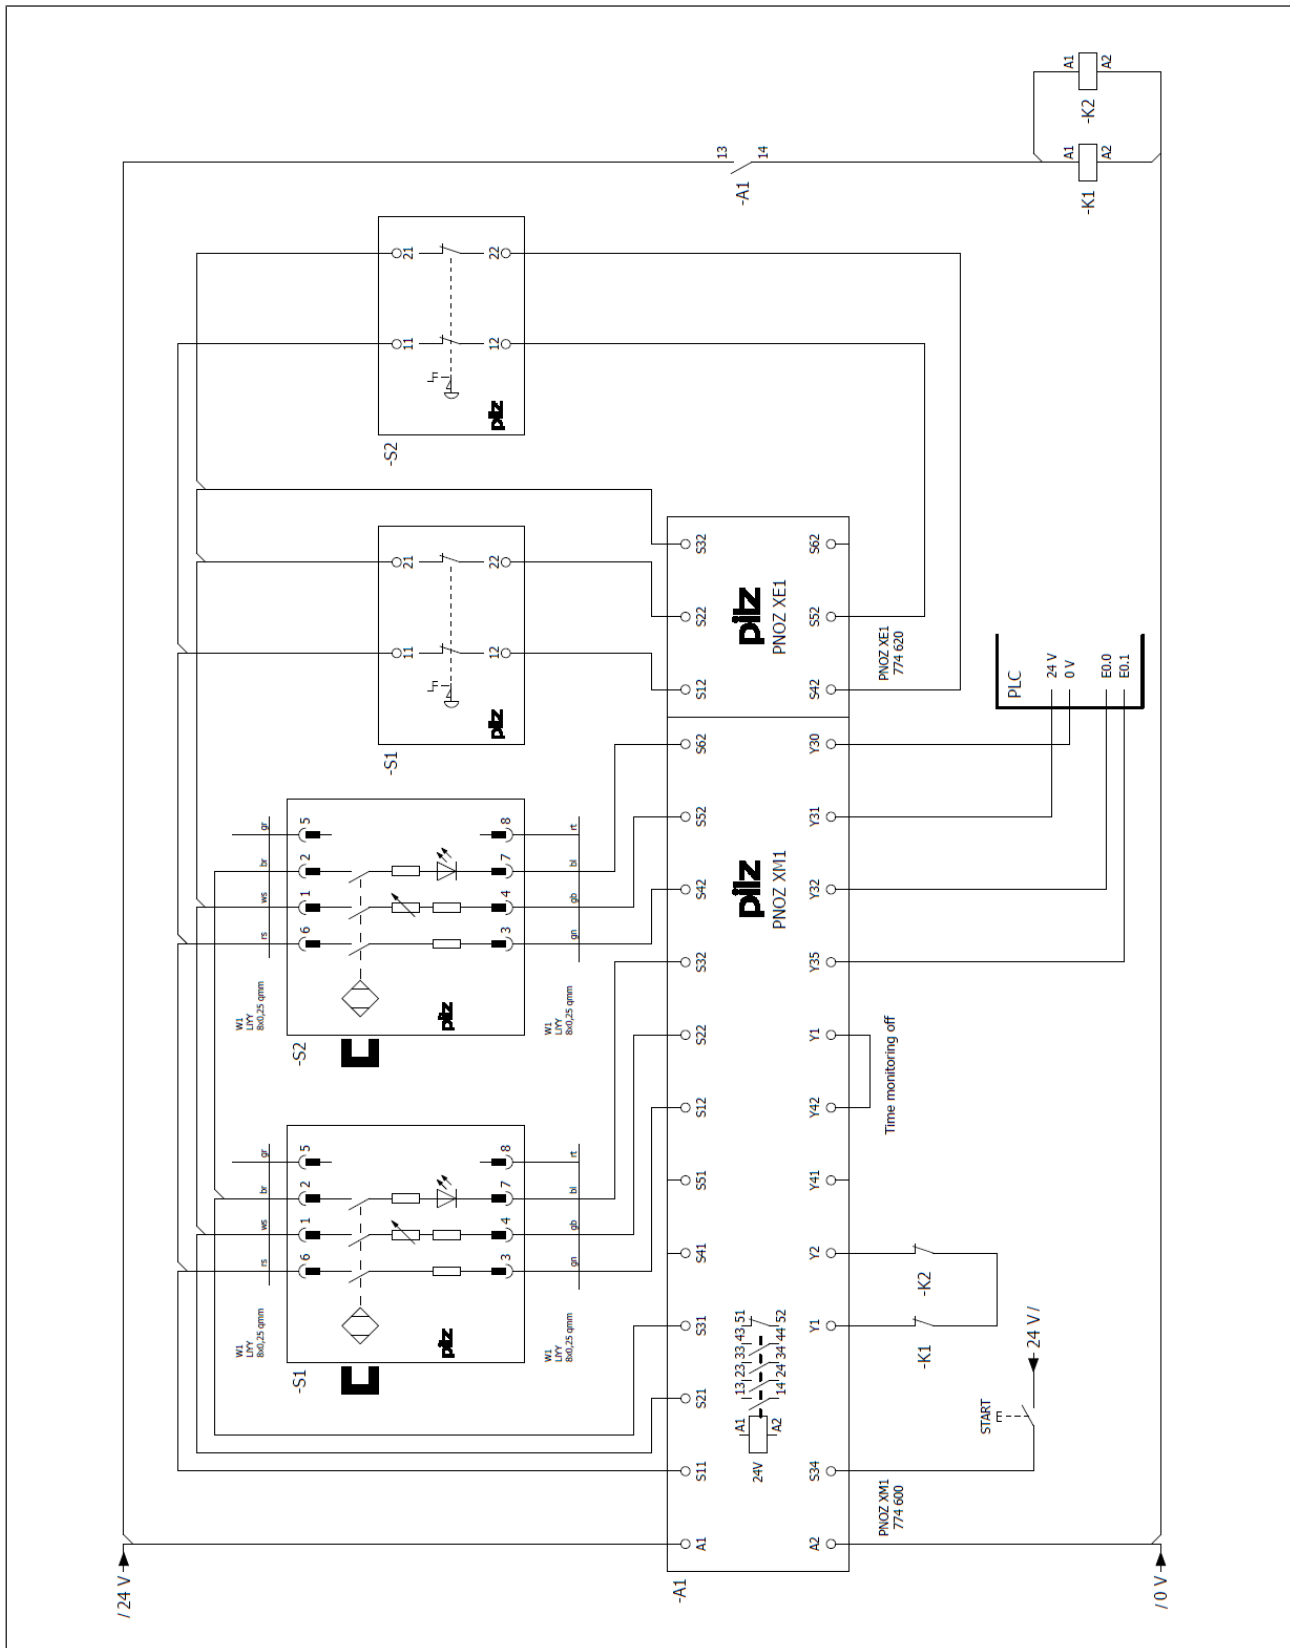

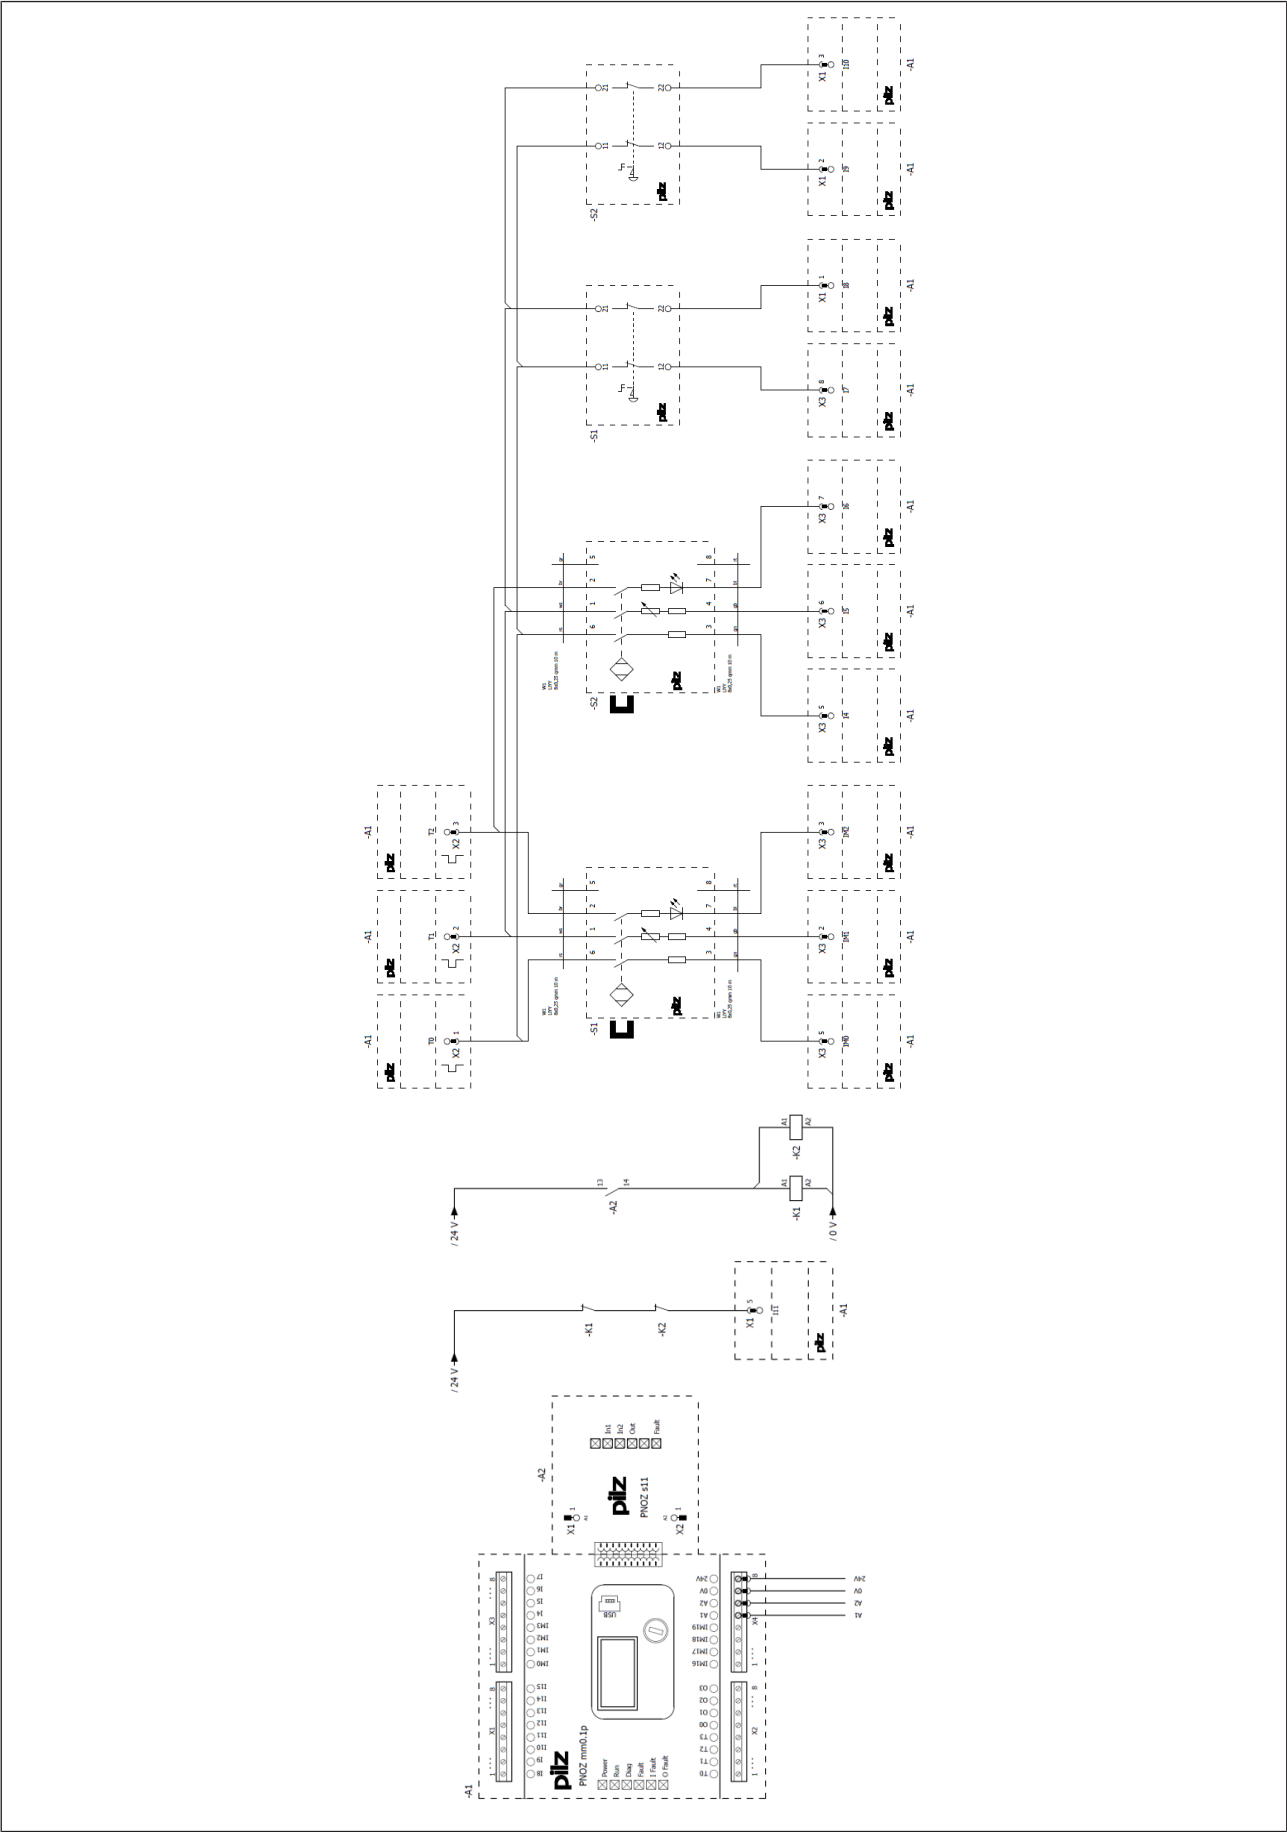

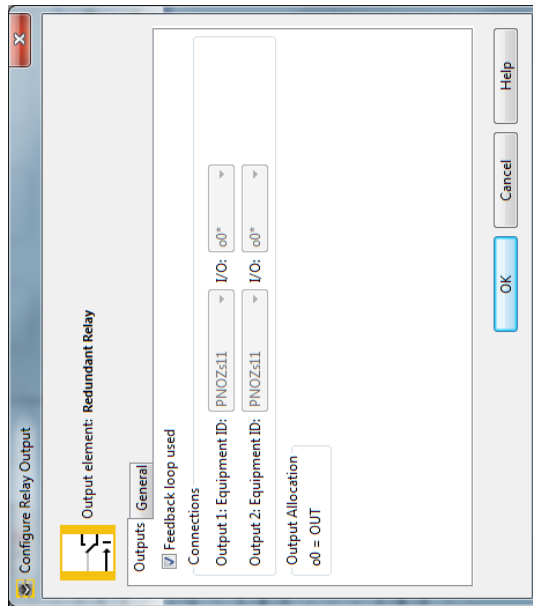

Configure Function Element

Function element: **Safety Gate**

Switch type: **N/C - N/C - N/C**

Input

Reset

General

Switch type

N/C

N/C

N/C

Type 5

Connections:

Input 1: Equipment ID: PNOZ mm0.1p

I/O: I4"

uses: Test Pulse 0

Input 2: Equipment ID: PNOZ mm0.1p

I/O: I5"

uses: Test Pulse 1

Input 3: Equipment ID: PNOZ mm0.1p

I/O: I6"

uses: Test Pulse 2

☒ Detection of shorts between contacts in the input circuit

Configure Function Element

Function element: **ESTOP**

Switch type: **N/C - N/C**

Input

Reset

General

Switch type

N/C

N/C

Type 3

Connections:

Input 1: Equipment ID: PNOZ mm0.1p

I/O: I7"

uses: Test Pulse 0

Input 2: Equipment ID: PNOZ mm0.1p

I/O: I8"

uses: Test Pulse 1

☒ Detection of shorts between contacts in the input circuit

Configure Function Element

Function element: **ESTOP**

Switch type: **N/C - N/C**

Input

Reset

General

Switch type

N/C

N/C

Type 3

Connections:

Input 1: Equipment ID: PNOZ mm0.1p

I/O: I9"

uses: Test Pulse 0

Input 2: Equipment ID: PNOZ mm0.1p

I/O: I10"

uses: Test Pulse 1

☐ Detection of shorts between contacts in the input circuit

Configure Function Element

Function element: **Safety Gate**

Switch type: **N/C - N/C - N/C**

Input

Reset

General

Switch type

N/C

N/C

N/C

Type 5

Connections:

Input 1: Equipment ID: PNOZ mm0.1p

I/O: I10"

uses: Test Pulse 0

Input 2: Equipment ID: PNOZ mm0.1p

I/O: I11"

uses: Test Pulse 1


Input 3: Equipment ID: PNOZ mm0.1p


I/O: I12"






uses: Test Pulse 2

☒ Detection of shorts between contacts in the input circuit

Three-channel with detection of shorts across contacts with PNOZ XE2

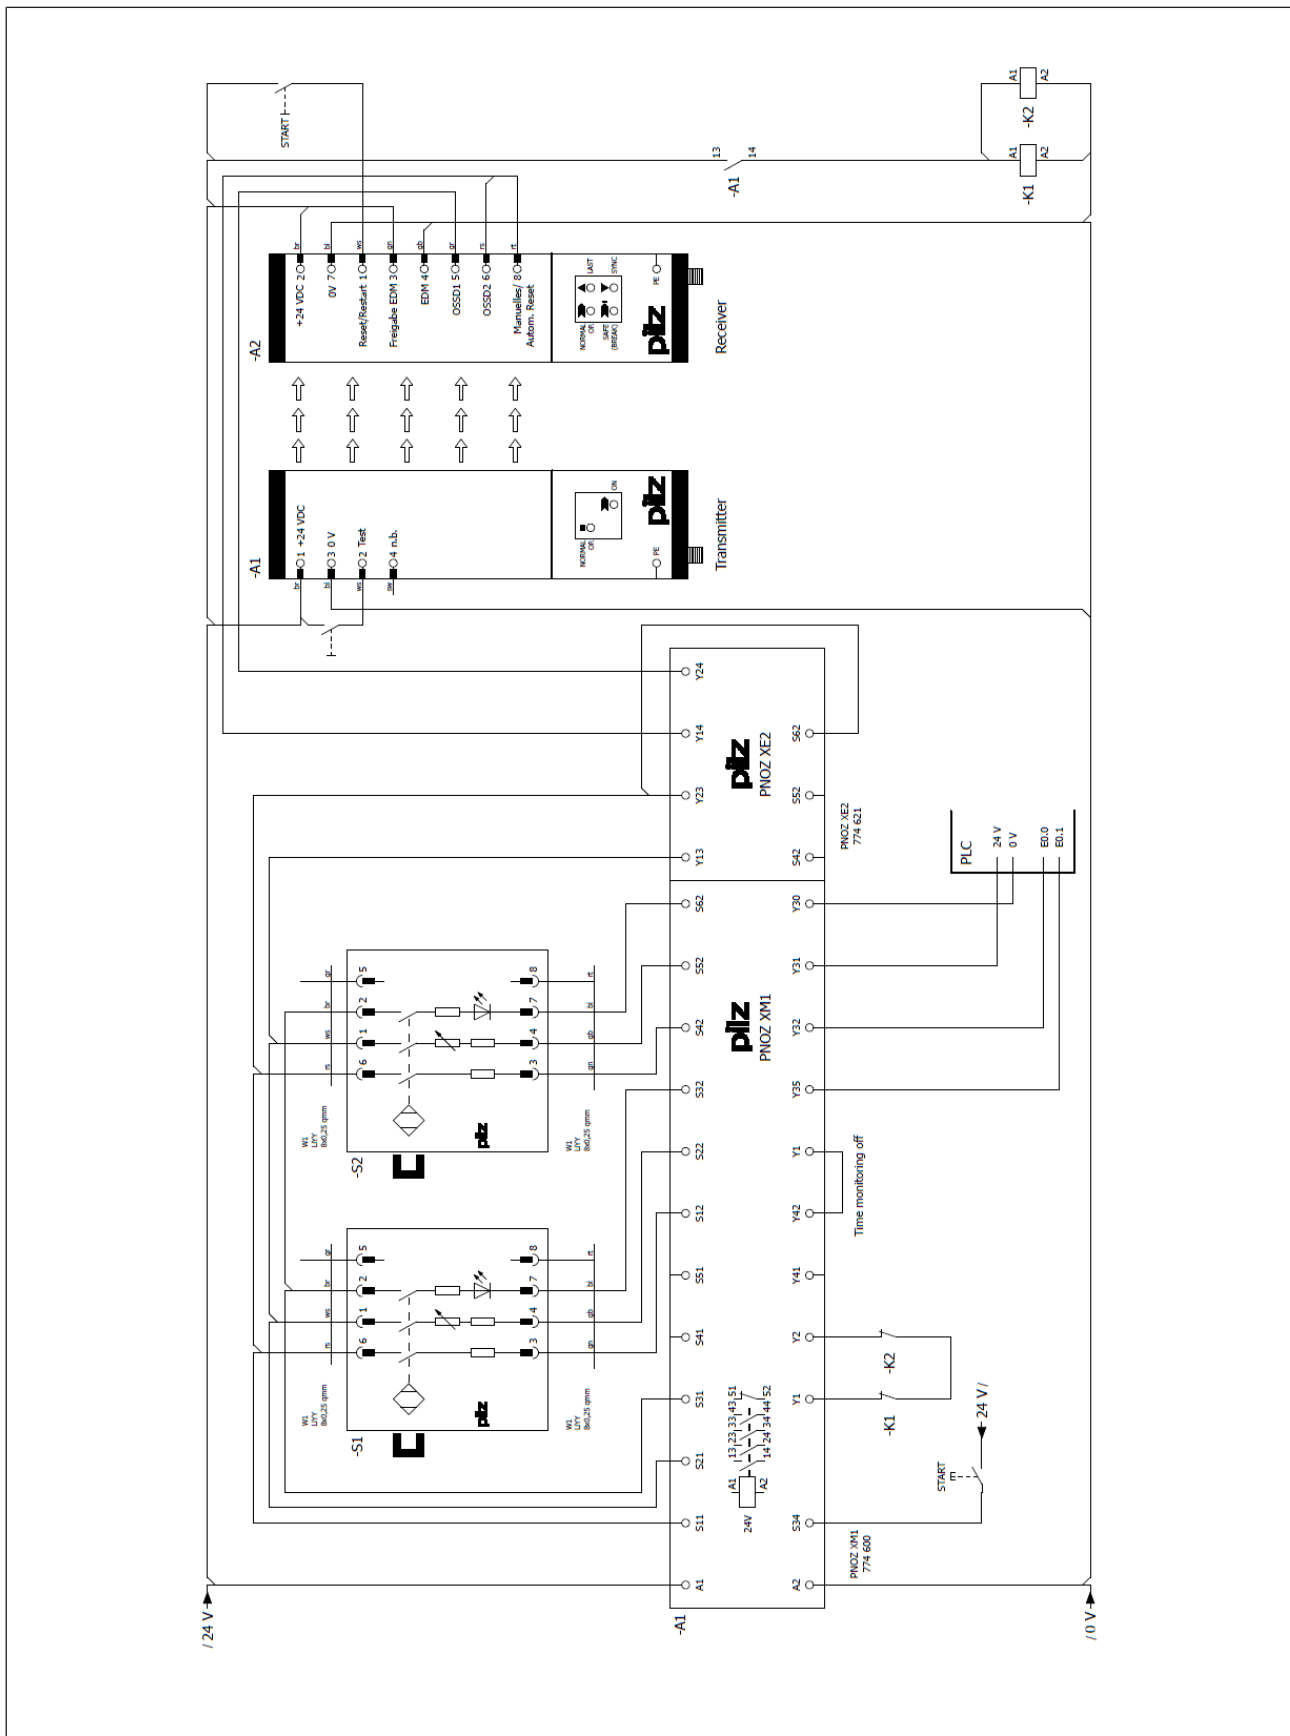

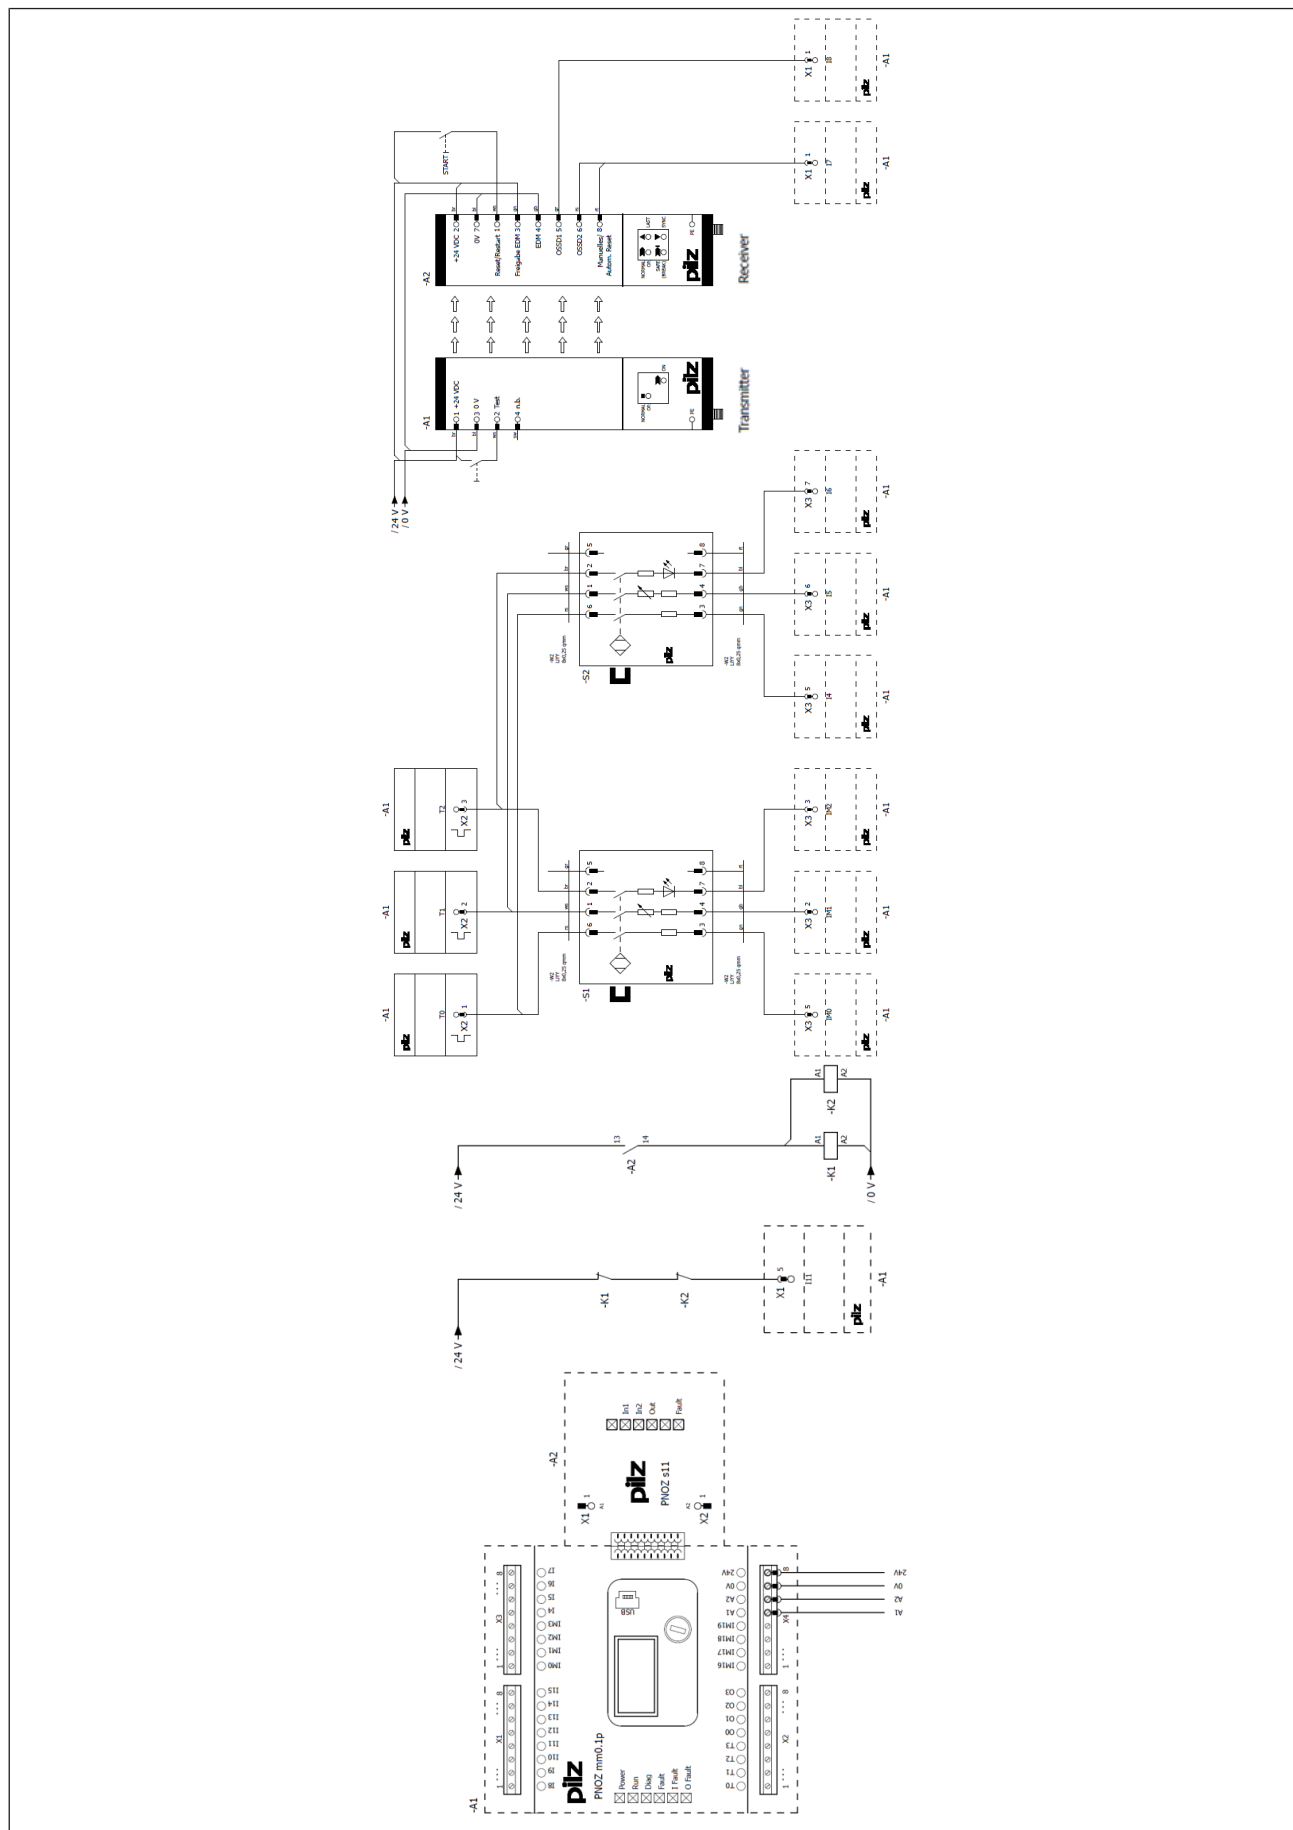

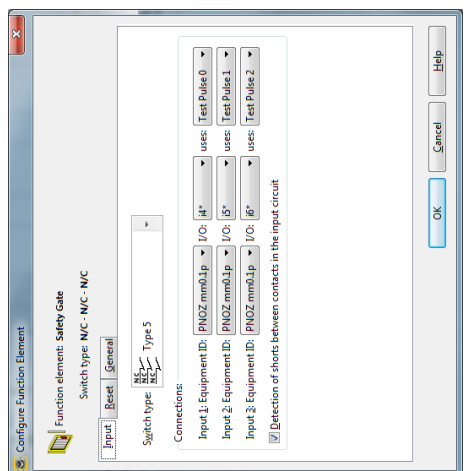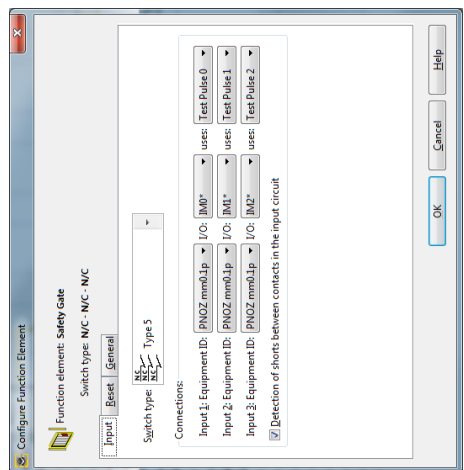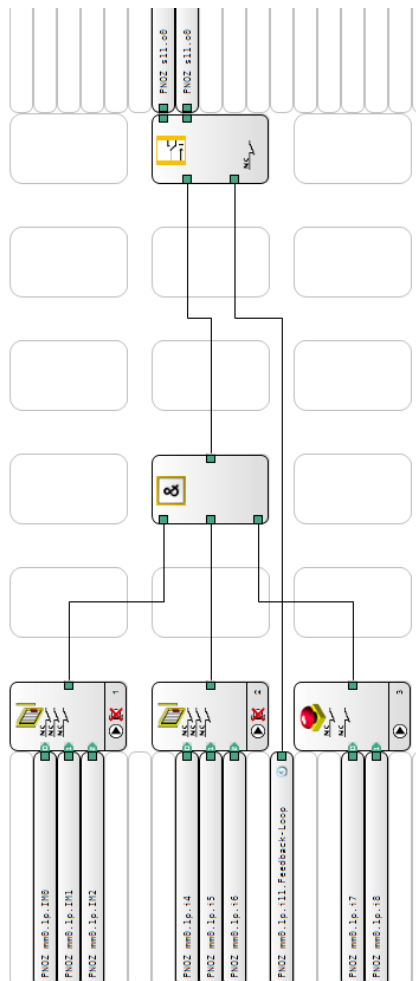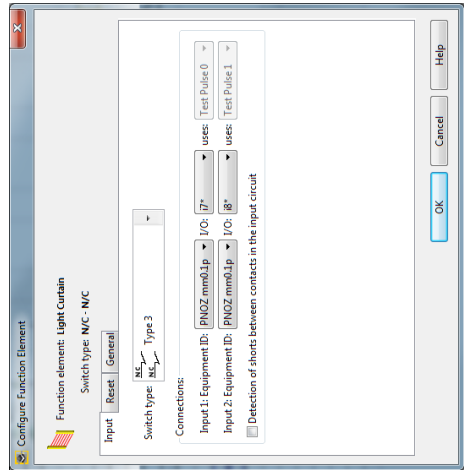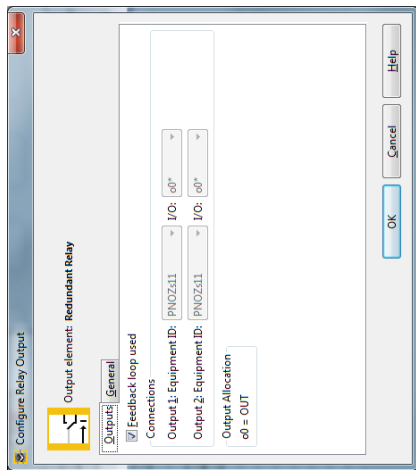



Pilz GmbH & Co. KG
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Telephone: +49 711 3409-0
Telefax: +49 711 3409-133
E-Mail: pilz.gmbh@pilz.de
Internet: www.pilz.com

► ...
In many countries we are
represented by our subsidiaries
and sales partners.

Please refer to our homepage
for further details or contact our
headquarters.

► **Technical support**
+49 711 3409-444
support@pilz.com

pilz

IndurINET p®, Pilz®, PIT®, PMOProtego®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.