



Visualisation; Diagnostics

Easy to Configure

Programming IEC 61131-3

Rapid Installation

PSS u2 ES 16PT FE

PILZ

THE SPIRIT OF SAFETY

- ▶ Control system PSS u2
- ▶ Remote I/O system PSS u2

This document is the original document.

Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrimination and on an equal basis.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

1	Introduction	4
1.1	Validity of documentation	4
1.2	Using the documentation	4
1.3	Definition of symbols	4
2	Overview	6
2.1	Module features	6
3	Safety	7
3.1	Intended use	7
3.2	System requirements	7
3.3	Safety regulations	8
3.3.1	Use of qualified personnel	8
3.3.2	Warranty and liability	8
3.3.3	Disposal	8
4	Function description	9
4.1	Block diagram	9
4.2	Supply	9
4.3	Functional earth	9
4.4	Energy-saving functions	9
5	Installation	10
5.1	General installation guidelines	10
5.1.1	Dimensions	10
5.2	Inserting and removing an electronic module	11
5.2.1	Inserting an electronic module	11
5.2.2	Removing an electronic module	13
5.2.3	Changing an electronic module during operation	14
6	Wiring	15
6.1	General wiring guidelines	15
6.1.1	Connection mechanism for terminal blocks	15
6.2	Terminal configuration	16
7	Operation	17
7.1	Display elements and messages	17
8	Technical details	19
9	Order reference	21
9.1	Product	21
9.2	Accessories	21

1 Introduction

1.1 Validity of documentation

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

This documentation is valid for the product PSS u2 ES 16PT FE hardware version 01 or higher. It is valid until new documentation is published.

1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Please refer to the PSS u2 Installation Manual.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

2 Overview

Module structure:

A module consists of

- ▶ an electronic module,
- ▶ a terminal block with cage clamp terminals and
- ▶ a module carrier

The electronic modules are plugged into the backplane and determine the function. The backplane is used for communication between the head module and the electronic modules and forms the carrier unit for the electronic modules. The terminal block is plugged into the electronic modules and is used to connect the field wiring.

Details of the terminal blocks that can be used are available under "Intended Use".

2.1 Module features

Application of the product PSS u2 ES 16PT FE:

Electronic module for tapping the functional earth from the mounting rail

The product has the following features:

- ▶ 16 terminals for tapping the functional earth
- ▶ Energy-saving functions
- ▶ LEDs for:
 - Module error
 - Operating status

3 Safety

3.1 Intended use

The module may be used for standard applications in a PSS u2 system.

Intended use includes making the electrical installation EMC-compliant. The module is designed for use in an industrial environment. Interference may occur if used in other areas.

The following is deemed improper use in particular

- ▶ Any component, technical or electrical modification to the module,
- ▶ Use of the module outside the areas described in this manual,
- ▶ Any use of the module that is not in accordance with the technical details.

Please also refer to [Installation manual PSS u2](#).

The module PSS u2 ES 16PT FE may be used in conjunction with the following terminal block:

- ▶ 16-pin terminal block

3.2 System requirements



INFORMATION

The module is supported by

- ▶ PASconfig from version 1.0.0
 - We recommend that you always use the latest version (download from www.pilz.com).

3.3 Safety regulations

3.3.1 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

3.3.2 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.3.3 Disposal

- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

4 Function description

4.1 Block diagram

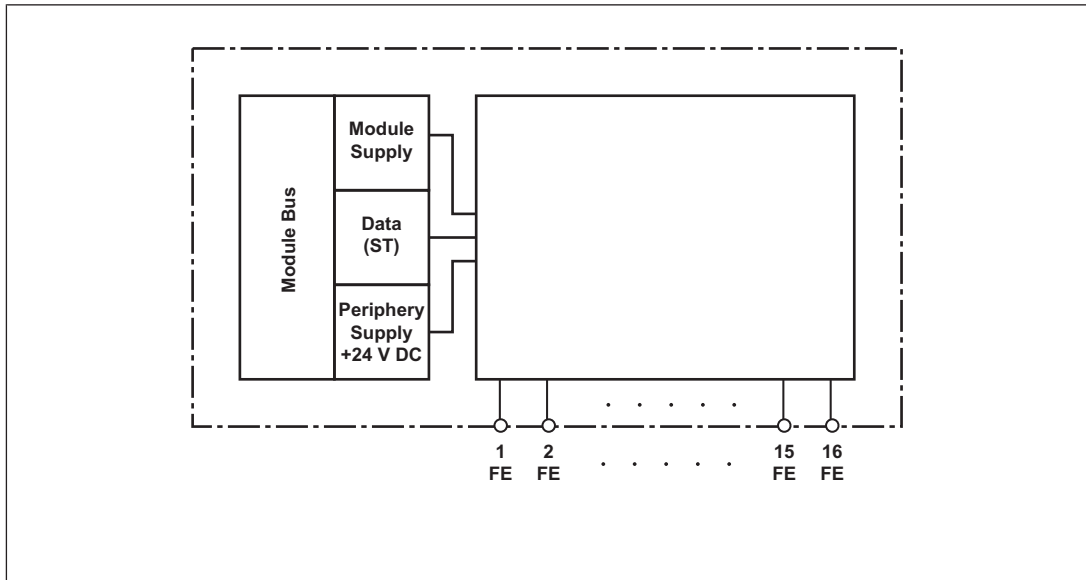


Fig.: Block diagram PSS u2 ES 16PT FE

4.2 Supply

- ▶ The module is supplied with voltage via the head module.

4.3 Functional earth

The module provides 16 terminals with the functional earth potential.

4.4 Energy-saving functions

The energy-saving levels are controlled by the head module and are not configurable. The module supports the following energy-saving levels:

- ▶ Switching off the LEDs
 - The LED that displays module status is switched off.
- ▶ Standby mode
 - All module functions are inactive.
 - The LEDs that displays module status are switched off.

5 Installation

5.1 General installation guidelines



NOTICE

Damage due to electrostatic discharge!

Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

5.1.1 Dimensions

The dimensions include the backplane, electronic module and terminal block.

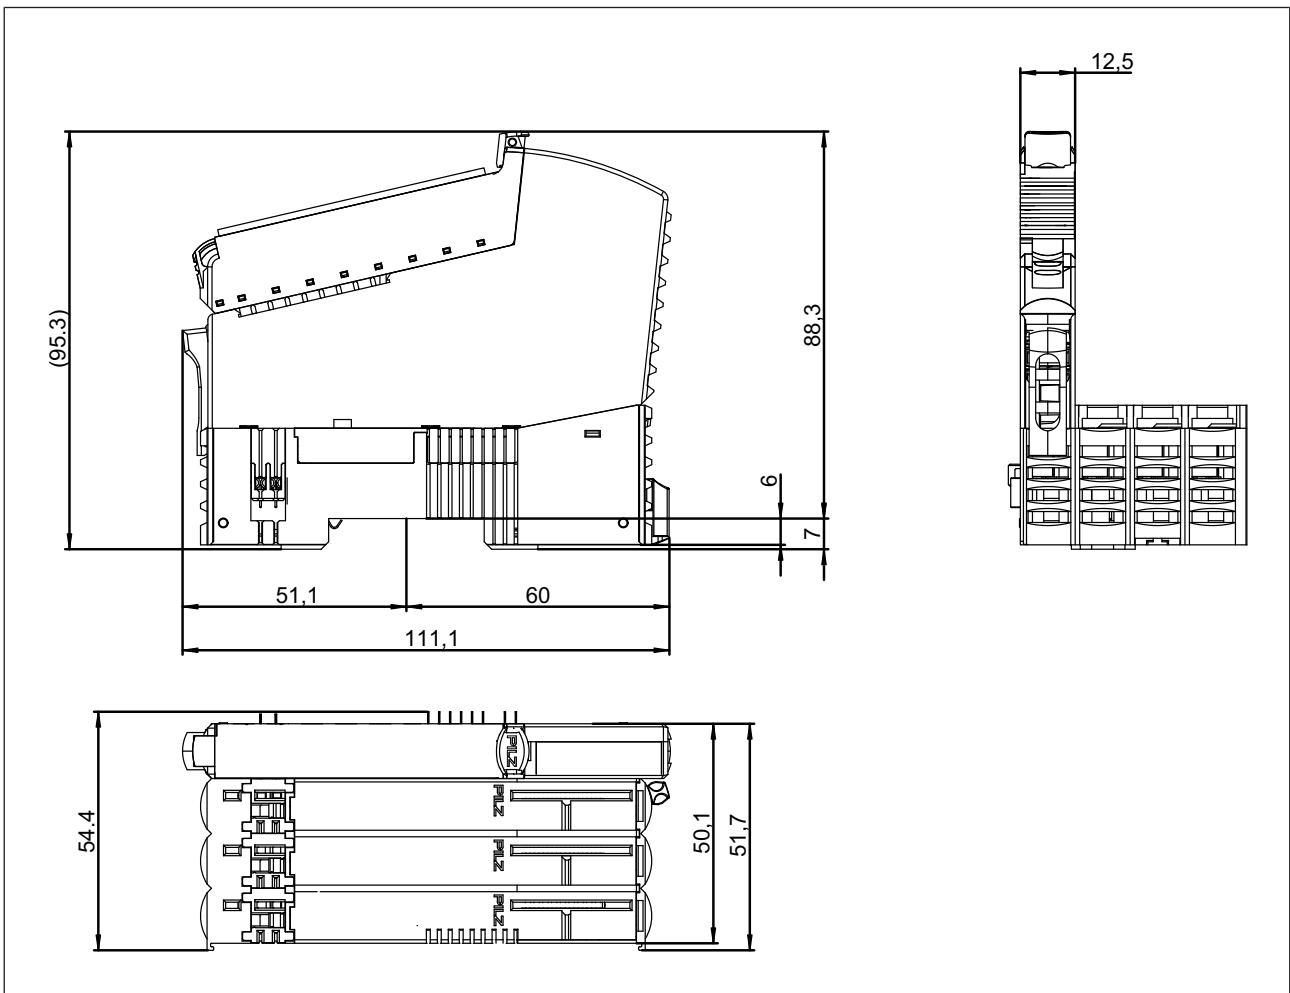


Fig.: Dimensions in mm, including backplane, electronic module and terminal block


5.2 Inserting and removing an electronic module

Please note:


- ▶ Backplane must be installed first.
- ▶ Electronic modules may only be plugged or unplugged if the terminal block has been removed first.
- ▶ The mechanics of the electronic modules are designed for 20 plug in/out cycles.

5.2.1 Inserting an electronic module


1. Insert the electronic module into the suspension lug on the backplane.

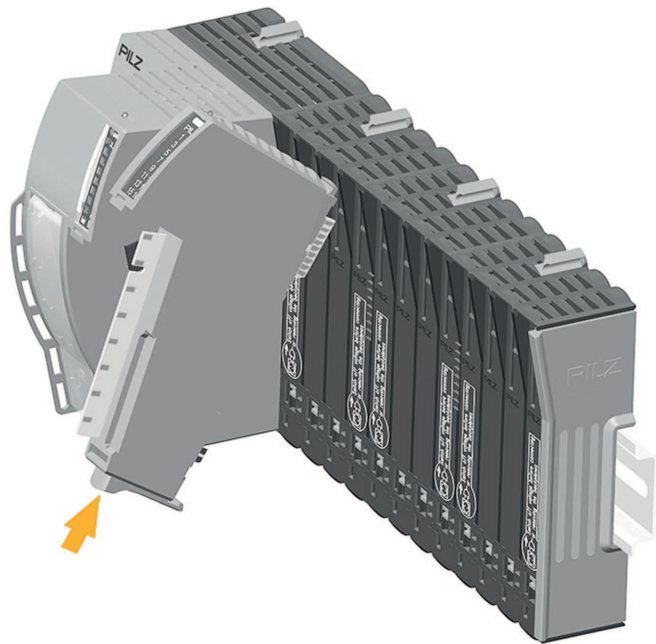


2. Swivel the electronic module downwards until you hear it click into place.

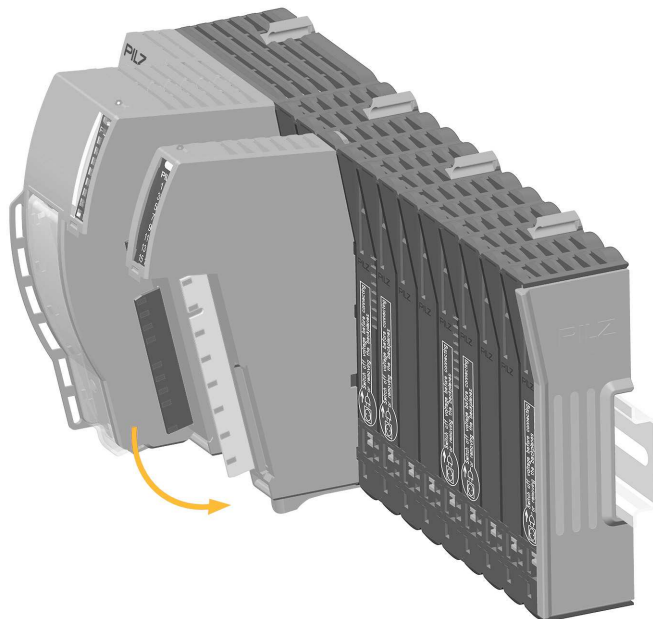

3. Insert the terminal block into the suspension lug on the module.

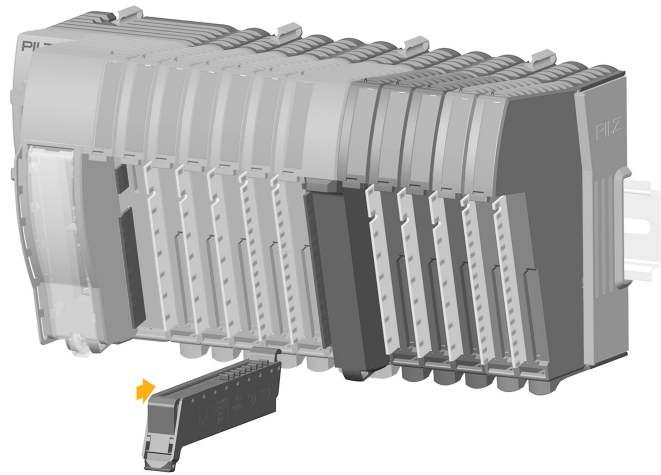


4. Swivel the terminal block upwards until you hear it click into place.

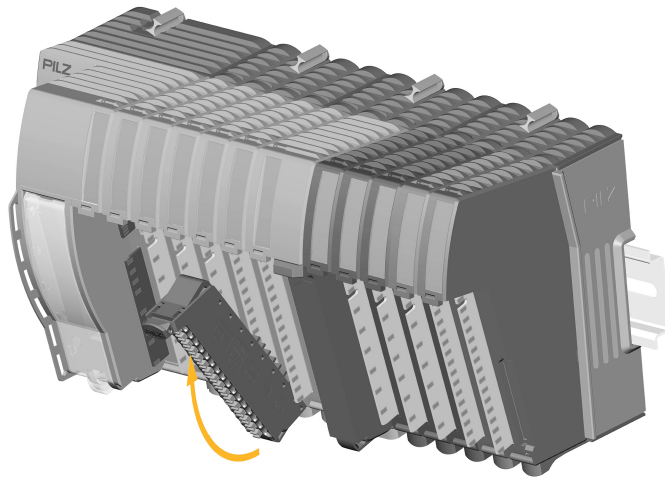


5.2.2 Removing an electronic module

1. Press the unlocking mechanism on the terminal block that is shown by the arrow and pull off the terminal block forward.

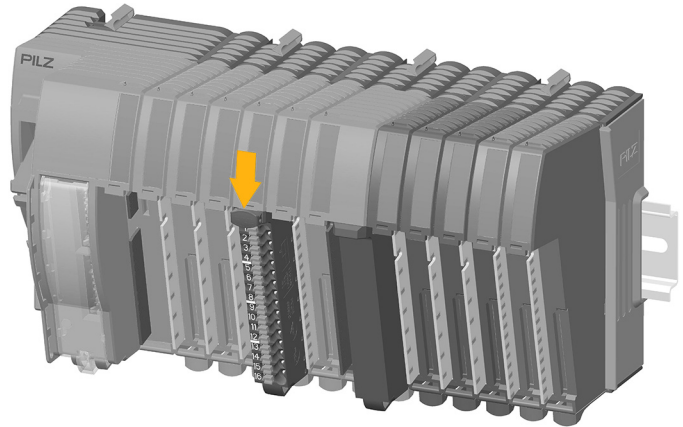

2. Press the unlocking mechanism that is shown by the arrow and pull off the electronic module upwards.

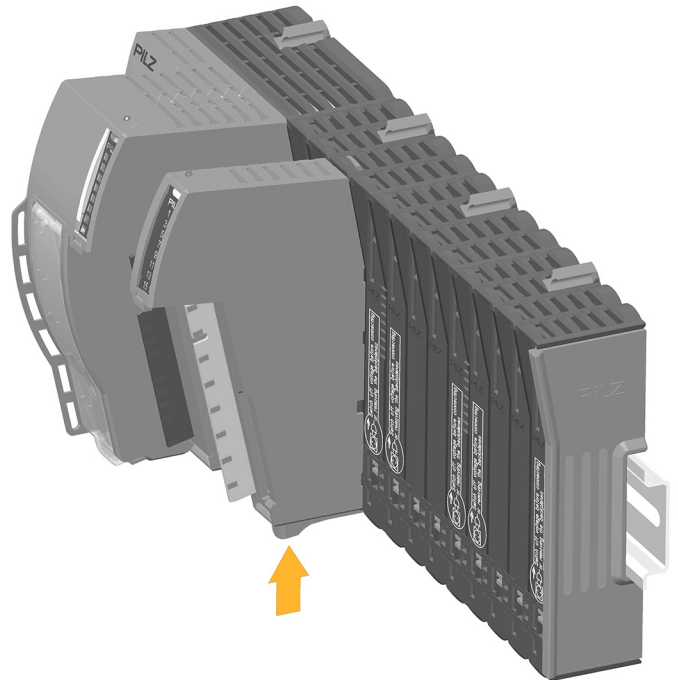



5.2.3 Changing an electronic module during operation

An electronic module can be hot swapped.

Effects:

- ▶ Module bus communication between the other modules is not interrupted.
- ▶ The configuration data is retained.
- ▶ The module is detected automatically as soon as the module is re-inserted.

Procedure:

1. [Removing an electronic module](#)  13]
2. [Inserting an electronic module](#)  11]

A new electronic module can be inserted during operation.

Procedure:

- ▶ [Inserting an electronic module](#)  11]

Effects:

- ▶ Module bus communication between the other modules is not interrupted.
- ▶ To detect the new module the following steps can be necessary:
 - Creating a new configuration or changing an existing configuration
 - Download of the configuration to the head module
 - Restart of the head module. After a restart, the system behaves as after a warm reset using a reset pushbutton (see operating manual of the head module, chapter "Reset pushbutton", section "Carrying out a warm reset (restart)").

6 Wiring

6.1 General wiring guidelines

Please note:

- ▶ Signal lines do not have to be shielded.

6.1.1 Connection mechanism for terminal blocks

Procedure:

- ▶ Use a flat head screwdriver.
- ▶ Strip the wire back 9 mm.
- ▶ Feed the stripped cable as far as it will go into the opening for the spring-loaded terminal.
- ▶ Check that the cable is firmly seated.

Please note:

- ▶ The minimum cable cross section for field connection terminals on the terminal blocks is 0.15 mm² (AWG26).
- ▶ The maximum cable cross section for field connection terminals on the terminal blocks is 1.5 mm² with ferrules (AWG14)
- ▶ Use copper wiring.

6.2 Terminal configuration


Example for connecting a single-channel actuator in 3-conductor wiring:

Terminal configuration			1-channel actuator Actuators supplied via the 0 V periphery supply
PSS u2 ES 16DOD 0.5A 1: Output O0 2: Output O1 3: Output O2 4: Output O3 5: Output O4 6: Output O5 7: Output O6 8: Output O7 9: Output O8 10: Output O9 11: Output O10 12: Output O11 13: Output O12 14: Output O13 15: Output O14 16: Output O15	PSS u2 ES 16PT 0V 1: Periphery supply 0 V 2: Periphery supply 0 V 3: Periphery supply 0 V 4: Periphery supply 0 V 5: Periphery supply 0 V 6: Periphery supply 0 V 7: Periphery supply 0 V 8: Periphery supply 0 V 9: Periphery supply 0 V 10: Periphery supply 0 V 11: Periphery supply 0 V 12: Periphery supply 0 V 13: Periphery supply 0 V 14: Periphery supply 0 V 15: Periphery supply 0 V 16: Periphery supply 0 V	PSS u2 ES 16PT FE 1: Functional earth 2: Functional earth 3: Functional earth 4: Functional earth 5: Functional earth 6: Functional earth 7: Functional earth 8: Functional earth 9: Functional earth 10: Functional earth 11: Functional earth 12: Functional earth 13: Functional earth 14: Functional earth 15: Functional earth 16: Functional earth	

7 Operation

The status of the module is displayed via the "Module status" LED; this is signalled to the head module and any error is entered in the head module's diagnostic log.

7.1 Display elements and messages

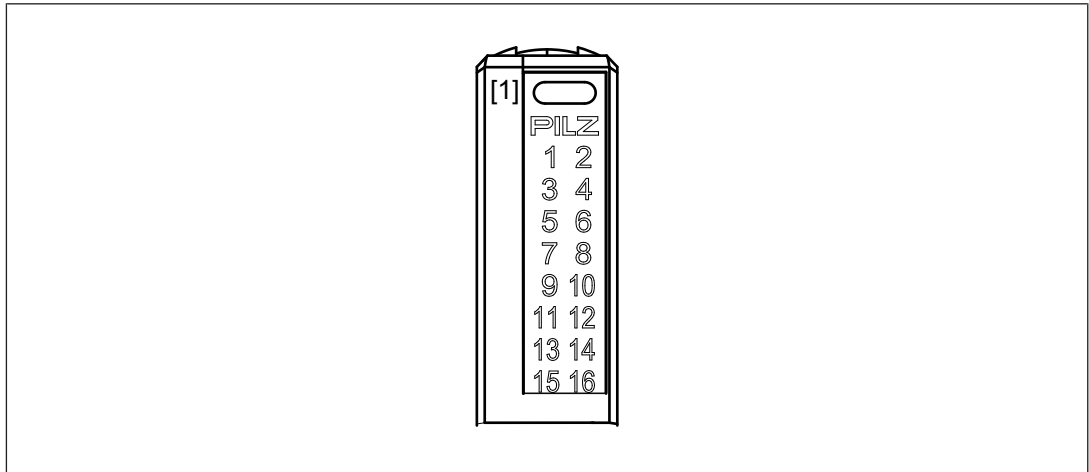

Legend

[1] Module status display

The module can detect the following errors:

[1]	Colour [1]	Meaning	Further information
●	--	Module not ready for operation	
●	Green	Module ready for operation	
☀	Green	Module in operation	
●⚡	Red	Configuration error Module was inserted in the wrong slot.	
☀	Red	Internal errors	See module's diagnostic log
●	Red	Temperature error: Too warm (1)	See module's diagnostic log

Legend

- ☀ LED on
- LED flashes
- ⚡ LED flashes briefly
- LED off

(1) There are two levels of overtemperature.

▶ Too warm:

If the module temperature exceeds a threshold value, then:

- a warning is sent to the head module.

If the temperature drops back below the threshold value, the module sends an all-clear.

▶ Too hot:

If the module temperature exceeds another threshold value, then:

- an error message is sent to the head module

After the "too hot" message has been received, if the temperature drops back below the "too warm" threshold value, the module will switch to an error-free state.

8 Technical details

General	
Certifications	CE, UKCA, cULus Listed
Application range	Standard
Module's device code	0004h
Electrical data	
Internal supply voltage (module supply)	
Module's power consumption	0,1 W
Environmental data	
Climatic suitability	EN 60068-2-1, EN 60068-2-14, EN 60068-2-2, EN 60068-2-30, EN 60068-2-78
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-40 - 70 °C
Climatic suitability	
In accordance with the standard	EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above sea level	2000 m
EMC	EN 61131-2 (Zone B)
Vibration	
In accordance with the standard	EN 60068-2-6
Frequency	8,4 - 150 Hz
Acceleration	10 m/s²
Shock stress	
In accordance with the standard	EN 60068-2-27
Acceleration	150 m/s²
Duration	11 ms
Airgap creepage	
In accordance with the standard	EN 61131-2, UL/IEC 61010-2-201
Overvoltage category	II
Pollution degree	2
Protection type	
In accordance with the standard	EN 60529
Housing	IP20
Mounting area (e.g. control cabinet)	IP54
Mechanical data	
Material	
Housing	PC
Mounting type	plug-in

Mechanical data

Dimensions

Height **110,8 mm**

Width **12,5 mm**

Depth **72,5 mm**

Weight **29 g**

Where standards are undated, the 2015-04 latest editions shall apply.

9 Order reference

9.1 Product

Designation	Features	Order no.
PSS u2 ES 16PT FE	Electronic module	328091

9.2 Accessories

Terminal block

Product type	Features	Order no.
PSS u2 T 16 (1 pc.)	Terminal block 16-pin, scope of supply: 1 pieces	328850
PSS u2 T 16 (10 pcs.)	Terminal block 16-pin, scope of supply: 10 pieces	328851
PSS u2 T 16 (5 x 10 pcs.)	Terminal block 16-pin, scope of supply: 50 pieces	328852

Labelling bracket

Product type	Features	Order No.
PSS u2 A LC E1 (10 pcs.)	Labelling bracket for electronic module 23.5 x 10.5 mm, scope of delivery: 10 pieces	328910
PSS u2 A LC E2 (10 pcs.)	Labelling bracket for electronic module 103 x 10.5 mm, scope of delivery: 10 pieces	328911
PSS u2 A LA E1 (10 pcs.)	Labelling strips for electronic module 23.5 x 10.5 mm (10 x DIN A4 sheet)	328913
PSS u2 A LA E2 (10 pcs.)	Labelling strips for electronic module 103 x 10.5 mm (10 x DIN A4 sheet)	328914

Label holder for terminal block

Product type	Features	Order no.
PSS u2 A LC T3 (10 pcs.)	Label holder for terminal block 61 x 11.5 mm, scope of supply: 10 pieces	328912

Codierelemente

Produkttyp	Merkmale	Bestell-Nr.
PSS u2 A CE E (10 pc.)	Codierelemente für Elektronikmodule, 10 Stück	328860

Backplanes

Product type	Features	Order no.
PSS u2 B 1	Backplane, 1 slot	328811
PSS u2 B 4	Backplane, 4 slots	328810

► Support

Technical support is available from Pilz round the clock.

Americas

Brazil

+55 11 97569-2804

Canada

+1 888 315 7459

Mexico

+52 55 5572 1300

USA (toll-free)

+1 877-PILZUSA (745-9872)

Asia

China

+86 21 60880878-216

Japan

+81 45 471-2281

South Korea

+82 31 778 3300

Australia and Oceania

Australia

+61 3 95600621

New Zealand

+64 9 6345350

Europe

Austria

+43 1 7986263-0

Belgium, Luxembourg

+32 9 3217570

France

+33 3 88104003

Germany

+49 711 3409-444

Ireland

+353 21 4804983

Italy, Malta

+39 0362 1826711

Scandinavia

+45 74436332

Spain

+34 938497433

Switzerland

+41 62 88979-32

The Netherlands

+31 347 320477

Turkey

+90 216 5775552

United Kingdom

+44 1536 462203

You can reach our international hotline on:

+49 711 3409-222

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: info@pilz.com, Internet: www.pilz.com

PILZ
THE SPIRIT OF SAFETY

1003767-EN-03, 2022-01 Printed in Germany
© Pilz GmbH & Co. KG, 2019

CECE®, CHRE®, CMSE®, InduraNET p®, Leansafe®, Master of Safety®, Master of Security®, PAS4000®, PAScale®, PASconfig®, Pilz®, PTT®, PLID®, PMCPirimo®, PMCPiritego®, PMCTendo®, PMD®, PMJ®, PNOZ®, PRBM®, PRGM®, PRCM®, PSEN®, PSENi®, PSENm®, PSENp®, PRM®, PRMm®, PSS®, PVS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.