



PSS u2 ES 4DOD 2A

PILZ
THE SPIRIT OF SAFETY

- ▶ Control system PSS u2
- ▶ Remote I/O system PSS u2

This document is the original document.

Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrimination and on an equal basis.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

1	Introduction	4
1.1	Validity of documentation	4
1.2	Using the documentation	4
1.3	Definition of symbols	4
2	Overview	6
2.1	Module features	6
3	Safety	7
3.1	Intended use	7
3.2	System requirements	7
3.3	Safety regulations	8
3.3.1	Use of qualified personnel	8
3.3.2	Warranty and liability	8
3.3.3	Disposal	8
4	Function description	9
4.1	Block diagram	9
4.2	Supply	9
4.3	Outputs	9
4.4	Reaction times	10
4.5	Energy-saving functions	10
5	Address assignment	11
6	Installation	12
6.1	General installation guidelines	12
6.1.1	Dimensions	12
6.2	Inserting and removing an electronic module	13
6.2.1	Inserting an electronic module	13
6.2.2	Removing an electronic module	15
6.2.3	Changing an electronic module during operation	16
7	Wiring	17
7.1	General wiring guidelines	17
7.1.1	Connection mechanism for terminal blocks	17
7.2	Terminal configuration	17
8	Operation	18
8.1	Display elements and messages	18
9	Technical details	20
10	Order reference	22
10.1	Product	22
10.2	Accessories	22

1 Introduction

1.1 Validity of documentation

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

This documentation is valid for the product PSS u2 ES 4DOD 2A hardware version 01 or higher. It is valid until new documentation is published.

1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Please refer to the PSS u2 Installation Manual.

1.3 Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special features.

2 Overview

Module structure:

A module consists of

- ▶ an electronic module,
- ▶ a terminal block with cage clamp terminals and
- ▶ a module carrier

The electronic modules are plugged into the backplane and determine the function. The backplane is used for communication between the head module and the electronic modules and forms the carrier unit for the electronic modules. The terminal block is plugged into the electronic modules and is used to connect the field wiring.

Details of the terminal blocks that can be used are available under "Intended Use".

2.1 Module features

Application of the product PSS u2 ES 4DOD 2A:

Electronic module with digital outputs and expanded diagnostics for standard applications

The product has the following features:

- ▶ 4 Digital outputs
 - Semiconductor technology
 - Single-pole
 - Positive-switching
 - Current load capacity per output: 2 A
 - Short circuit-proof
 - Overload-proof
- ▶ Energy-saving functions
- ▶ The module provides advanced diagnostic data:
 - Overload
 - Short circuit
 - Undervoltage
- ▶ LEDs for:
 - Switch status per output
 - Module error
 - Operating status

3 Safety

3.1 Intended use

The module provides digital standard outputs and may be used for standard applications in the PSS u2 system.

Intended use includes making the electrical installation EMC-compliant. The module is designed for use in an industrial environment. Interference may occur if used in other areas.

The following is deemed improper use in particular

- ▶ Any component, technical or electrical modification to the module,
- ▶ Use of the module outside the areas described in this manual,
- ▶ Any use of the module that is not in accordance with the technical details.

The module PSS u2 ES 4DOD 2A may be used in conjunction with the following terminal block:

- ▶ 8-pin terminal block

3.2 System requirements



INFORMATION

The module is supported by

- ▶ PASconfig from version 1.0.0
 - We recommend that you always use the latest version (download from www.pilz.com).

3.3 Safety regulations

3.3.1 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

3.3.2 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

3.3.3 Disposal

- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

4 Function description

4.1 Block diagram

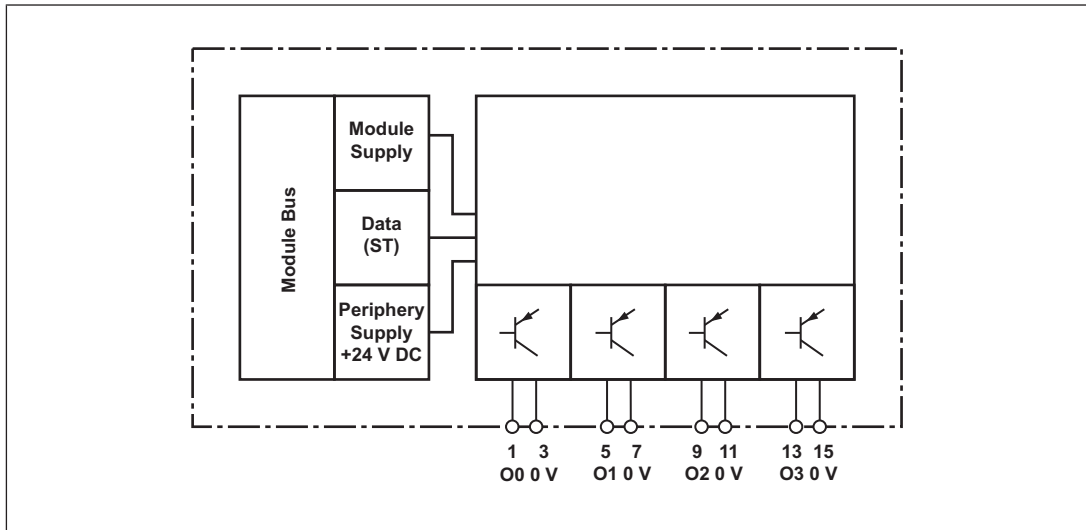


Fig.: Block diagram PSS u2 ES 4DOD

4.2 Supply

- ▶ The module is supplied with voltage via the head module.
- ▶ The periphery supply provides the outputs with voltage

4.3 Outputs

Signals at the output

- ▶ "0" signal (0 V) at the output:
 - Output is high impedance
 - No current to the load
- ▶ "1" signal (+24 V) at the output:
 - Output is low impedance
 - Current is supplied to the load

Outputs

- ▶ The head module sets the output status via the module bus.

If the module does not receive a process image of outputs from the head module, then substitute values are used for the process data. The value that is to be used as the substitute value can be configured.

Substitute values may be:

- ▶ Output switched off (default value)
- ▶ Output switched on
- ▶ Last valid value

4.4 Reaction times

Detailed information on the reaction times is available in the operating manual of the head modules.

4.5 Energy-saving functions

The energy-saving levels are controlled by the head module and are not configurable. The module supports the following energy-saving levels:

▶ Switching off the LEDs

The LEDs have two energy-saving levels:

- Switching off the LEDs to display the terminal status
- Switching off the LEDs to display the module and terminal status

▶ Switching off the terminals

- The module switches off the voltage at the digital outputs.

▶ Standby mode

- All module functions are inactive.
- The LEDs for displaying the module and terminal status are switched off.

5 Address assignment

The module occupies 1 Byte in the process image of outputs.

PIO	Meaning	State
Bit 0	Output data O0	0: "0" signal (0 V) at the output 1: "1" signal (+ 24 V) at the output
Bit 1	Output data O1	
Bit 2	Output data O2	
Bit 3	Output data O3	
Bit 4-7	None	Constant "0"

The module occupies 1 Byte in the process image of inputs:

PII	Meaning	State
Bit 0	Valid bit of output O0	0: Output error 1: The signal in the PIO corresponds to the output signal
Bit 1	Valid bit of output O1	
Bit 2	Valid bit of output O2	
Bit 3	Valid bit of output O3	
Bit 4-7	None	Constant "0"

6 Installation

6.1 General installation guidelines



NOTICE

Damage due to electrostatic discharge!

Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

6.1.1 Dimensions

The dimensions include the backplane, electronic module and terminal block.

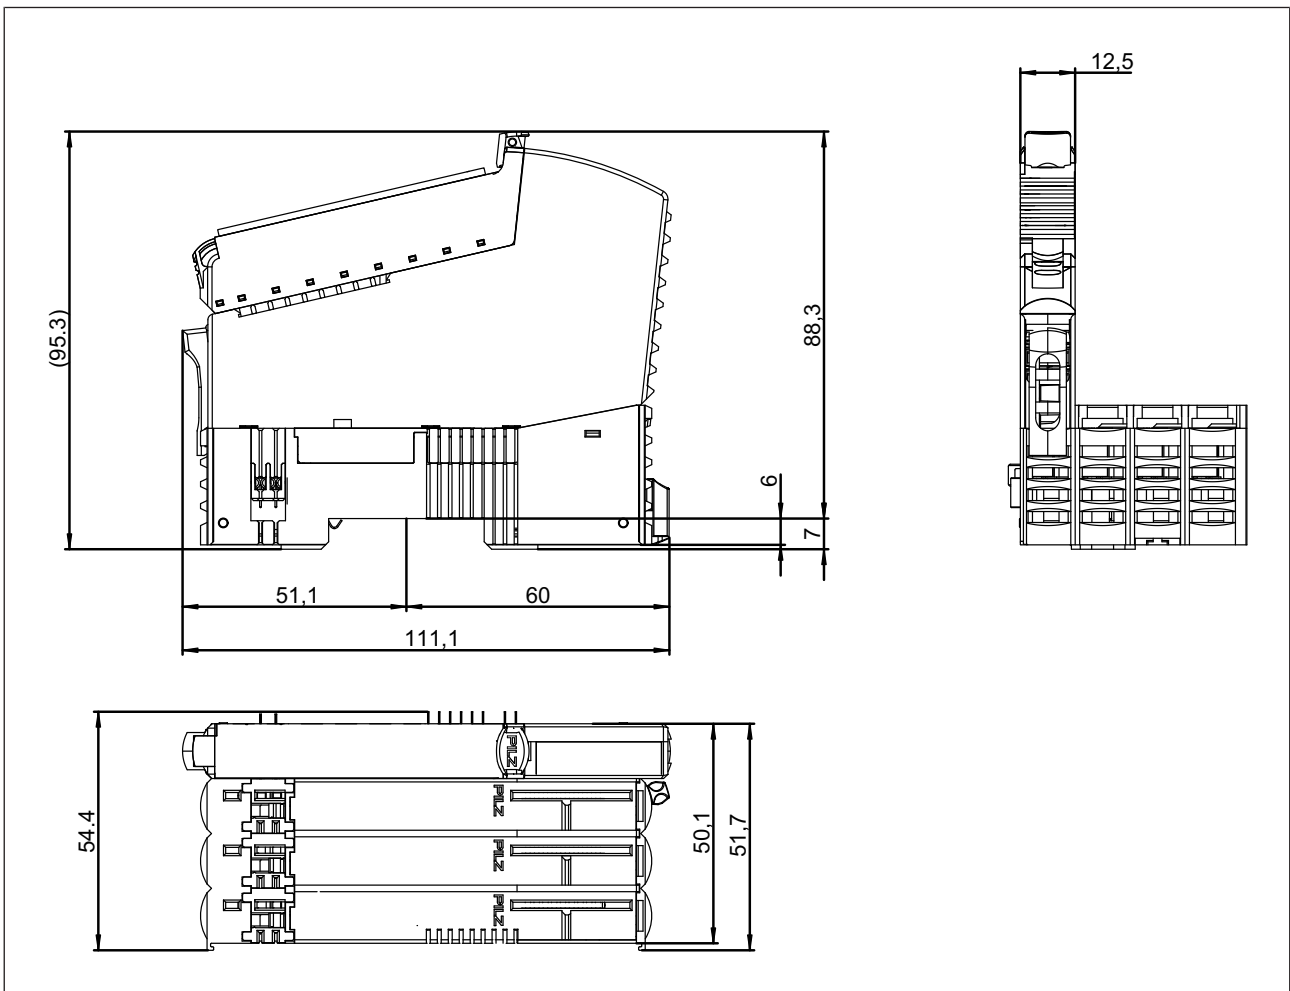


Fig.: Dimensions in mm, including backplane, electronic module and terminal block


6.2 Inserting and removing an electronic module

Please note:


- ▶ Backplane must be installed first.
- ▶ Electronic modules may only be plugged or unplugged if the terminal block has been removed first.
- ▶ The mechanics of the electronic modules are designed for 20 plug in/out cycles.
- ▶ On electronic modules with outputs, the terminal block may only be inserted and removed when the load is switched off. Unforeseeable error reactions may be triggered if modules are inserted and removed under load.

6.2.1 Inserting an electronic module


1. Insert the electronic module into the suspension lug on the backplane.

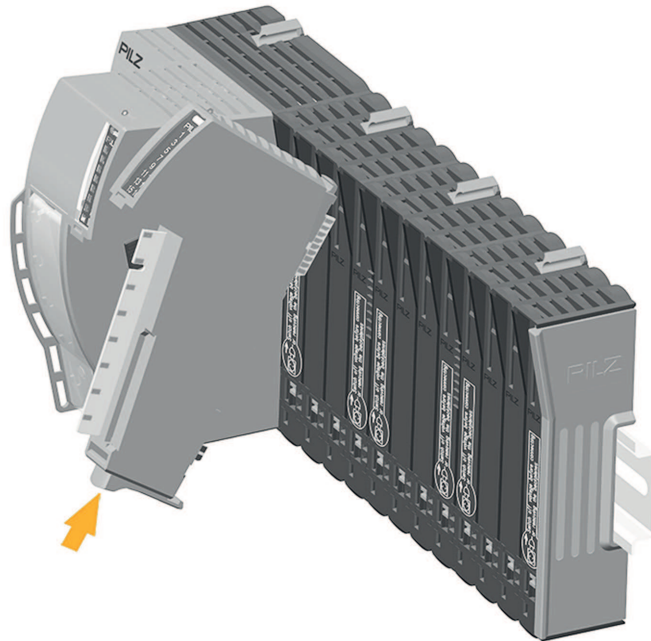


2. Swivel the electronic module downwards until you hear it click into place.

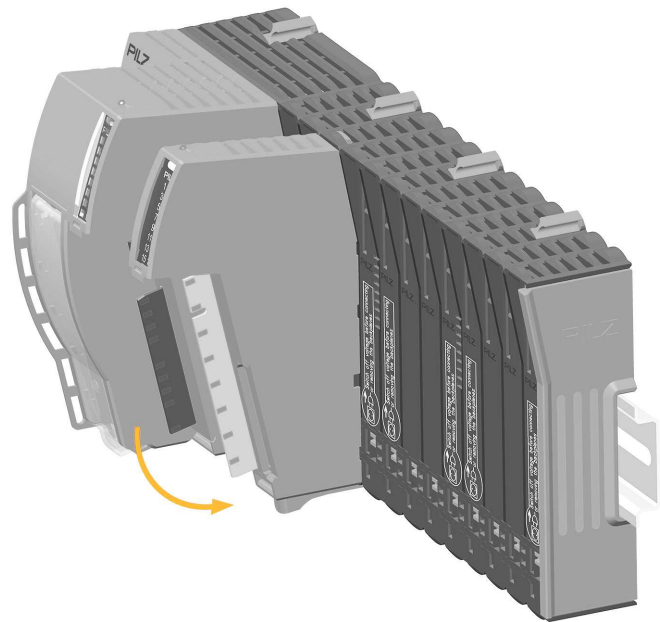

3. Insert the terminal block into the suspension lug on the module.

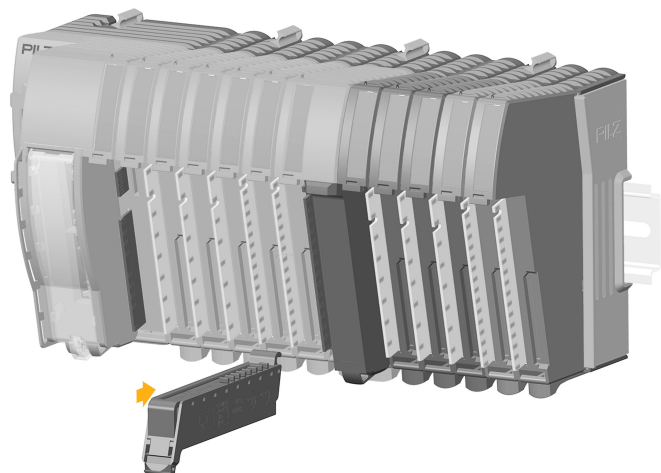


4. Swivel the terminal block upwards until you hear it click into place.

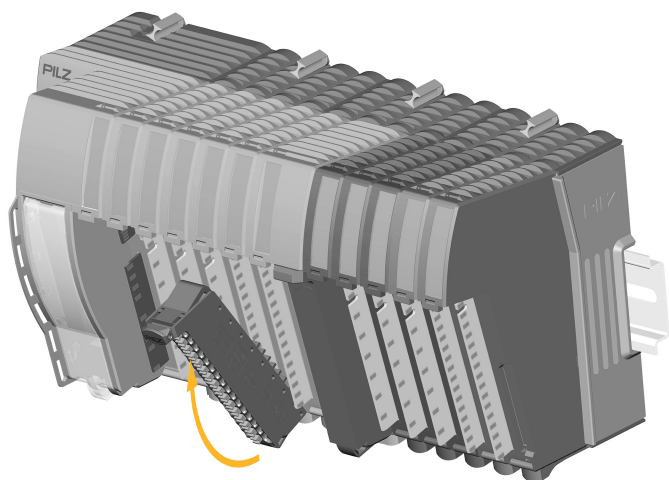


6.2.2 Removing an electronic module

1. Press the unlocking mechanism on the terminal block that is shown by the arrow and pull off the terminal block forward.

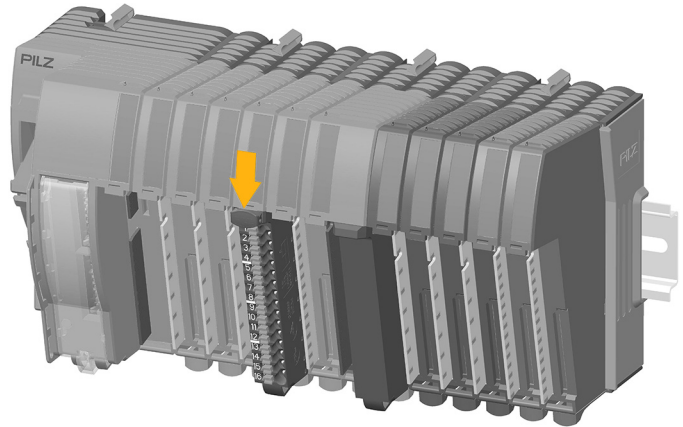

2. Press the unlocking mechanism that is shown by the arrow and pull off the electronic module upwards.

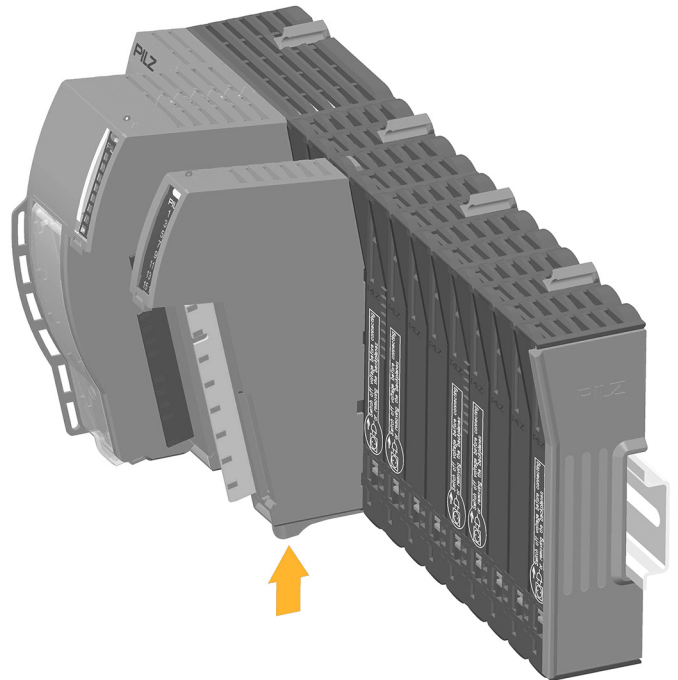

6.2.3 Changing an electronic module during operation

An electronic module can be hot swapped.

Effects:

- ▶ Module bus communication between the other modules is not interrupted.
- ▶ The configuration data is retained.
- ▶ The module is detected automatically as soon as the module is re-inserted.

Procedure:

1. [Removing an electronic module !\[\]\(cdce662f57d331b9c731fe0ee23c85fa_img.jpg\) 15](#)
2. [Inserting an electronic module !\[\]\(9e7178ca683a79b8864467de617e3033_img.jpg\) 13](#)

A new electronic module can be inserted during operation.

Procedure:

- ▶ [Inserting an electronic module !\[\]\(bab4345c1dc8595a37869a09797e1e95_img.jpg\) 13](#)

Effects:

- ▶ Module bus communication between the other modules is not interrupted.
- ▶ To detect the new module the following steps can be necessary:
 - Creating a new configuration or changing an existing configuration
 - Download of the configuration to the head module
 - Restart of the head module. After a restart, the system behaves as after a warm reset using a reset pushbutton (see operating manual of the head module, chapter "Reset pushbutton", section "Carrying out a warm reset (restart)").

7 Wiring

7.1 General wiring guidelines

Please note:

- ▶ The actuators may be connected using unshielded cables.
- ▶ The outputs do not need suppression for inductive loads.
- ▶ Use copper wiring.

7.1.1 Connection mechanism for terminal blocks

Procedure:

- ▶ Use a flat head screwdriver.
- ▶ Strip the wire back 9 mm.
- ▶ Feed the stripped cable as far as it will go into the opening for the spring-loaded terminal.
- ▶ Check that the cable is firmly seated.

Please note:

- ▶ The minimum cable cross section for field connection terminals on the terminal blocks is 0.15 mm² (AWG26).
- ▶ The maximum cable cross section for field connection terminals on the terminal blocks is 1.5 mm² with ferrules (AWG14)
- ▶ Use copper wiring.


7.2 Terminal configuration

Terminal configuration	1-channel actuator Actuators supplied via the 0 V periphery supply
1: Output O0 3: 0 V Periphery Supply 5: Output O1 7: 0 V Periphery Supply 9: Output O2 11: 0 V Periphery Supply 13: Output O3 15: 0 V Periphery Supply	

8 Operation

The status of the module is displayed via a red and a green LED. The status of the terminals is displayed via a green LED. If there is a module error, the module status display will light up red. The error will be signalled to the head module and will be entered in the head module's diagnostic log.

8.1 Display elements and messages

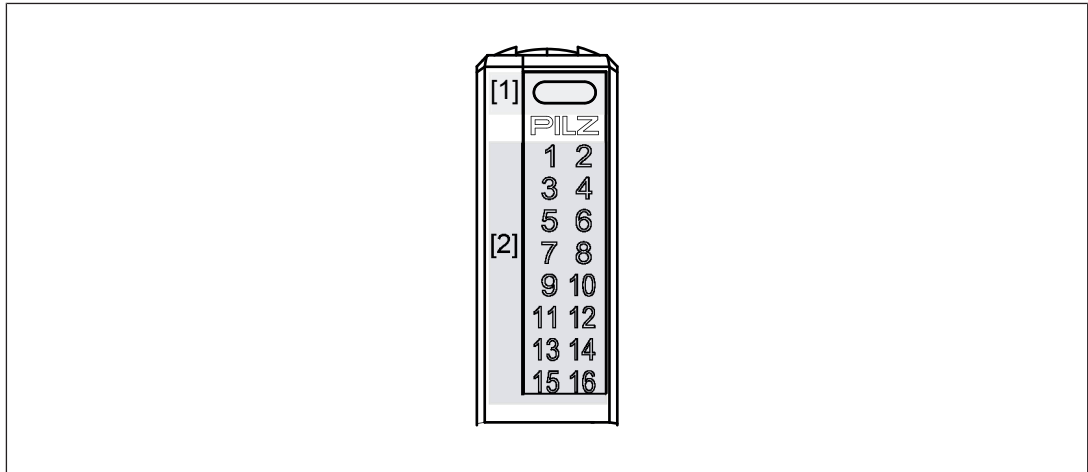



Legend

[1] Module status display

[2] Terminal status display

The module can detect the following errors:

[1]	Colour [1]	[2]	Colour [2]	Meaning	Further information
●	--	●	--	Module not ready for operation	
●	Green	●	--	Module ready for operation	
☉	Green	☉	Green	Module in operation and there is a "1"-signal at the output	
☉	Green	●	--	Module in operation and there is a "0"-signal at the output	
⚡	Red	●	----	Configuration error Module was inserted in the wrong slot.	
☉	Red	●	--	Internal errors	See module's diagnostic log
●	Red	●	Green	The module status display and the terminal status display on the relevant output flash synchronously Short circuit/overload/under-voltage	See module's diagnostic log
●	Red	●	--	Temperature warning: Too warm (1)	See module's diagnostic log

[1]	Colour [1]	[2]	Colour [2]	Meaning	Further information
	Red		Green	The module status display and all terminal status displays flash synchronously Periphery supply is missing/ temperature error: Too hot (1)	See module's diagnostic log

(¹) There are two levels of overtemperature.

▶ Too warm:

If the module temperature exceeds a threshold value, then:

- a warning is sent to the head module.

If the temperature drops back below the threshold value, the module sends an all-clear.





▶ Too hot:

If the module temperature exceeds another threshold value, then:

- an error message is sent to the head module
- the outputs are switched off
- The valid bits for the outputs are set to "0"

After the "too hot" message has been received, if the temperature drops back below the "too warm" threshold value, the module will switch to an error-free state.

Legend

-  LED on
-  LED flashes
-  LED flashes briefly
-  LED off

9 Technical details

General	
Certifications	CE, UKCA, cULus Listed
Application range	Standard
Module's device code	0019h
Number of ST output bits	4
Number of ST status bits	4
Electrical data	
Internal supply voltage (module supply)	
Module's power consumption	0,16 W
Periphery's supply voltage (periphery supply)	
Module's power consumption with no load	0,6 W
Max. power consumption of a positive-switching single-pole semiconductor output	0,27 W
Max. power dissipation of module	1,9 W
Permitted loads	inductive, capacitive, resistive
Semiconductor outputs	
Number of positive-switching single-pole semiconductor outputs	4
Rated voltage	24 V DC
Typ. output current at "1" signal and rated voltage of semiconductor output	2 A
Max. output current with 1 output under load	3,5 A
Permitted current range	0,000 - 2,500 A
Residual current at "0" signal	0,02 mA
Max. transient pulsed current	12 A
Typ. threshold value for overload	13 A
Max. internal voltage drop	80 mV
Max. processing time of semiconductor output when signal changes from "1" to "0"	0,4 ms
Max. processing time of semiconductor output when signal changes from "0" to "1"	0,22 ms
Potential isolation	yes
Short circuit-proof	yes
Environmental data	
Climatic suitability	EN 60068-2-1, EN 60068-2-14, EN 60068-2-2, EN 60068-2-30, EN 60068-2-78
Ambient temperature	
In accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
In accordance with the standard	EN 60068-2-1/-2
Temperature range	-40 - 70 °C

Environmental data

Climatic suitability

In accordance with the standard	EN 60068-2-78
Humidity	93 % r. h. at 40 °C

Condensation during operation	Not permitted
-------------------------------	----------------------

Max. operating height above sea level	2000 m
---------------------------------------	---------------

EMC	EN 61131-2 (Zone B)
-----	----------------------------

Vibration

In accordance with the standard	EN 60068-2-6
Frequency	8,4 - 150 Hz
Acceleration	10 m/s²

Shock stress

In accordance with the standard	EN 60068-2-27
Acceleration	150 m/s²
Duration	11 ms

Airgap creepage

In accordance with the standard	EN 61131-2, UL/IEC 61010-2-201
Overvoltage category	II
Pollution degree	2

Protection type

In accordance with the standard	EN 60529
Housing	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between	Semiconductor output and module supply
-----------------------------	---

Type of potential isolation	Functional insulation
-----------------------------	------------------------------

Rated surge voltage	2500 V
---------------------	---------------

Mechanical data

Material

Housing	PC
---------	-----------

Mounting type	plug-in
---------------	----------------

Dimensions

Height	110,8 mm
Width	12,5 mm
Depth	72,5 mm

Weight	33 g
--------	-------------

Where standards are undated, the 2015-04 latest editions shall apply.

10 Order reference

10.1 Product

Designation	Features	Order no.
PSS u2 ES 4DOD 2A	Electronic module with expanded diagnostics	328410

10.2 Accessories

Terminal block

Product type	Features	Order no.
PSS u2 T 8 (1 pc.)	Terminal block 8-pin, scope of supply: 1 pieces	328840
PSS u2 T 8 (10 pcs.)	Terminal block 8-pin, scope of supply: 10 pieces	328841
PSS u2 T 8 (5 x 10 pcs.)	Terminal block 8-pin, scope of supply: 50 pieces	328842

Labelling bracket

Product type	Features	Order No.
PSS u2 A LC E1 (10 pcs.)	Labelling bracket for electronic module 23.5 x 10.5 mm, scope of delivery: 10 pieces	328910
PSS u2 A LC E2 (10 pcs.)	Labelling bracket for electronic module 103 x 10.5 mm, scope of delivery: 10 pieces	328911
PSS u2 A LA E1 (10 pcs.)	Labelling strips for electronic module 23.5 x 10.5 mm (10 x DIN A4 sheet)	328913
PSS u2 A LA E2 (10 pcs.)	Labelling strips for electronic module 103 x 10.5 mm (10 x DIN A4 sheet)	328914

Label holder for terminal block

Product type	Features	Order no.
PSS u2 A LC T3 (10 pcs.)	Label holder for terminal block 61 x 11.5 mm, scope of supply: 10 pieces	328912

Coding elements

Product type	Features	Order no.
PSS u2 A CE E (10 pcs.)	Coding elements for electronic modules, scope of supply: 10 pieces	328860

Backplanes

Product type	Features	Order no.
PSS u2 B 1	Backplane, 1 slot	328811
PSS u2 B 4	Backplane, 4 slots	328810

► Support

Technical support is available from Pilz round the clock.

Americas

Brazil

+55 11 97569-2804

Canada

+1 888 315 7459

Mexico

+52 55 5572 1300

USA (toll-free)

+1 877-PILZUSA (745-9872)

Asia

China

+86 21 60880878-216

Japan

+81 45 471-2281

South Korea

+82 31 778 3300

Australia and Oceania

Australia

+61 3 95600621

New Zealand

+64 9 6345350

Europe

Austria

+43 1 7986263-0

Belgium, Luxembourg

+32 9 3217570

France

+33 3 88104003

Germany

+49 711 3409-444

Ireland

+353 21 4804983

Italy, Malta

+39 0362 1826711

Scandinavia

+45 74436332

Spain

+34 938497433

Switzerland

+41 62 88979-32

The Netherlands

+31 347 320477

Turkey

+90 216 5775552

United Kingdom

+44 1536 462203

You can reach our international hotline on:

+49 711 3409-222

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: info@pilz.com, Internet: www.pilz.com

PILZ
THE SPIRIT OF SAFETY

1003615-EN-03, 2022-01 Printed in Germany
© Pilz GmbH & Co. KG, 2019

CECE®, CHRE®, CMSE®, InduraNET p®, Leansafe®, Master of Safety®, Master of Security®, PAS4000®, PAScall®, PASconfig®, Pilz®, PTT®, PLID®, PMCPirimo®, PMCPiritego®, PMCTendo®, PMD®, PMJ®, PNOZ®, PRCM®, PRM®, PRM p®, PSEN®, PSEN p®, PSEN p®-RTM®, PSEN p®-RTM p®, PSS®, PVS®, SafetyBUS p®, SafetyEYE®, SafetyEYE p®, THE SPIRIT OF SAFETY® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.